Kit contents:



4x

m4x14mm

4x

m4x8mm

1x VGA cable, 1x USB, and, 1x USB Y cable

Elo Touch Solutions Technical Support

Online self-help: www.support.elotouch.com

North America

800-ELO-TOUCH Tel +1 408 597 8000 Fax +1 408 597 8050 EloSales.NA@elotouch.com

Europe

Tel +32 (0)16 70 45 00 Fax +32 (0)16 70 45 49 elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385 Fax +86 (21) 3329 1400 EloAsia@elotouch.com

Latin America

Tel 786-923-0251 Fax 305-931-0124 EloSales.LATAM@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.








www.elotouch.com


Quick Installation Guide

Rear facing mount for ESY-X Series

Revision B P/N E039173

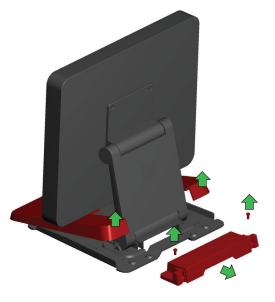


Remove stand cover using coin or other tool. Remove the two screws holding the rear portion of the stand cover on and remove the cover.

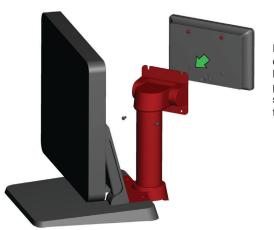

Partially install (2) M4x8mm screws on top of monitor leaving gap to hang monitor on slots of mount plate. Install the other (2) M4x8mm screws on bottom of monitor and tighten all 4 screws.



Place pole mount on back of stand and align the screw holes. Install the (4) M4x14 screws to fasten the stand and then replace the cover.

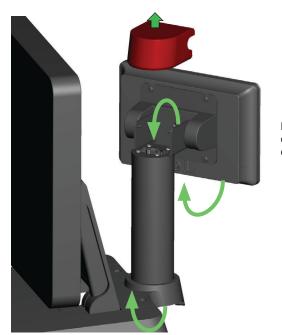

Remove pole hinge cover and route cables through pole and connect to computer. Reinstall pole cover.