SyncMaster 700TSn-2 820TSn-2

LCD Display User Manual

Safety Instructions

Notational

🖉 Note

These safety instructions must be followed to ensure your safety and prevent property damage.

Make sure to read the instructions carefully and use the product in the correct manner. UWarning / Caution



Failure to follow directions noted by this symbol could result in bodily harm or damage to the equipment.

Note



Power

When not used for extended period of time, set your computer to DPM.

If using a screen saver, set it to active screen mode.

The images here are for reference only, and are not applicable in all cases (or countries).

Shortcut to Anti-Afterimage Instructions



Do not use a damaged power cord or plug or a damaged or loose power outlet.

Otherwise, this may result in electric shock or fire. •



Do not touch the power plug with wet hands when removing or plugging the plug into the outlet.



Otherwise, this may result in electric shock.



Make sure to connect the power cord to a grounded power outlet.

Otherwise, it may result in electric shock or personal injury.



Ensure that the power plug is plugged into the power outlet firmly and correctly.

• Otherwise, this may result in fire.

Do not forcefully bend or pull the power plug and do not place any heavy material on it.

• Otherwise, this may result in fire.

Do not connect multiple appliances to the same power outlet.

• Otherwise, this may cause fire due to overheating.



Do not disconnect the power cord while using the product.

• Otherwise, this may result in damage to the product due to electric shock.



■ To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

• Otherwise, this may cause electric shock or fire.



Use only the power cord provided by our company. Do not use the provided power cord of another product.

• Otherwise, this may result in fire or electric shock.

Installation



Be sure to contact an authorized Service Center when installing your monitor in a location with heavy dust, high or low temperatures, high humidity, and exposed to chemical substances and where it operates for 24 hours such as at airports, train stations etc.

Failure to do so may cause serious damage to your monitor.



Ensure that at least two persons lift and move the product.

• Otherwise, it may be dropped and cause personal injury, and/ or damage the product.




When installing the product in a cabinet or rack, make sure that the front end of the bottom of the product does not project out.

- Otherwise, it may fall or cause personal injury.
- Use a cabinet or rack of a size appropriate to the product.



DO NOT PLACE CANDLES, MOSQUITO REPELLANT, CIGA-RETTES AND ANY HEATING APPLIANCES NEAR THE PROD-UCT.

• Otherwise, this may result in fire.

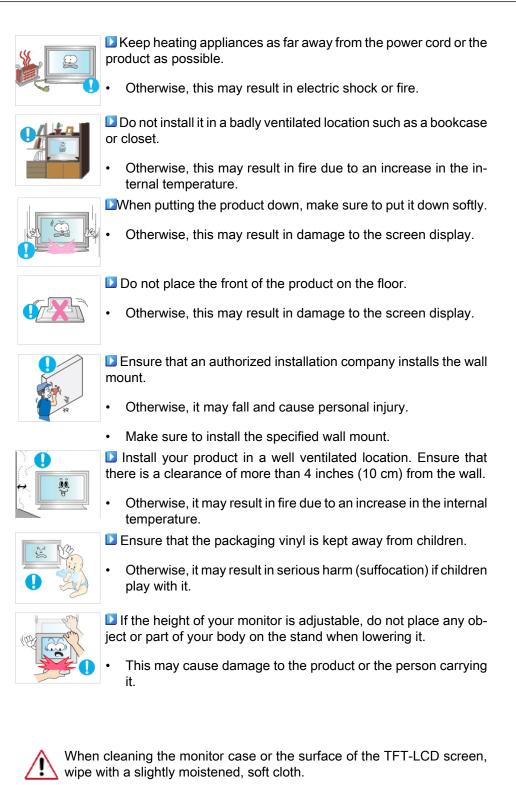



Clean

Do not spray cleaner directly onto the surface of the product.

• Otherwise, this may result in the discoloration and distortion of the structure and the screen surface may peel off.



When cleaning the power plug pins or dusting the power outlet, clean it with a dry cloth.

Otherwise, it may result in fire.



When cleaning the product, make sure to disconnect the power cord.

• Otherwise, it may result in electric shock or fire.

C

When cleaning the product, disconnect the power cord and clean it with a soft, dry cloth.

 (Do not use chemicals such as wax, benzene, alcohol, thinner, mosquito repellant, lubricant, or cleaner.) These may change the appearance of the product surface and peel off the indication labels on the product.



Since the product housing is easily scratched, make sure to use the specified cloth only.



When cleaning the product, do not spray water directly onto the main body of the product.

- Ensure that water does not enter the product and that it is not wet.
- Otherwise, this may result in electric shock, fire or a malfunction.

Others



The product is a high voltage product. Do not disassemble, repair or modify the product yourself.

• Otherwise, this may result in electric shock or fire. If the product needs to be repaired, contact a Service Center.



▶ If there is a strange smell or a strange sound or smoke is coming from the product, disconnect the power plug immediately and contact a Service Center.

Otherwise, this may result in electric shock or fire.



Do not place this product in a location exposed to moisture, dust, smoke, water, or in a car.

• Otherwise, this may result in electric shock or fire.



When you drop the product or the case is broken, turn the power off and disconnect the power cord. Contact a Service Center.

• Otherwise, this may result in electric shock or fire.



If thunder or lightning is occurring, do not touch the power cord or antenna cable.

Otherwise, this may result in electric shock or fire.



Do not try to move the monitor by pulling only the wire or the signal cable.

Otherwise, it may fall and result in electric shock, damage to the product or fire due to damage to the cable.



Do not lift or move the product back and forwards or right and left while only holding the power cord or signal cables.

Otherwise, it may fall and result in electric shock, damage to the product or fire due to damage to the cable.



Make sure that the ventilating opening is not blocked by a table or curtain.

Otherwise, it may result in fire due to an increase in the internal temperature.

 


Do not place any containers containing water, vases, flowerpots, medicines as well as any metal on the product.

- If water or a foreign material enters the product, disconnect the power cord and contact a Service Center.
- This may result in a product malfunction, electric shock, or fire.



Do not use or keep combustible spray or flammable material near the product.

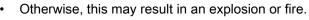



Do not insert any metal, such as chopsticks, coins, pins and steel, or flammable objects, such as matches or paper, inside the product (through the ventilating openings, input and output terminals, etc).

- If water or foreign material enters the product, disconnect the • power cord and contact a Service Center.
- Otherwise, this may result in electric shock or fire.



When using a fixed screen for a long time, an afterimage or stain may occur.



If you are not using your product for a long period of time, put it into sleep mode or use a moving screen saver.



Otherwise, your eyesight may be damaged. •

Set a resolution and frequency appropriate to the product.



 
When using headphones or earphones, do not turn the volume too high.



Having the sound too loud may damage your hearing.



To avoid eyestrain, do not sit too close to the product.

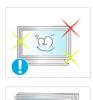

Take a rest for at least five (5) minutes after using the monitor for one (1) hour.

This reduces eye fatigue.

Do not install it in an unstable location such as an unstable rack or uneven surface or a location exposed to vibrations.

- Otherwise, it may fall and cause personal injury and/or damage the product.
- If you use the product in a location exposed to vibrations, it may damage the product and result in fire.



When moving the product, turn the power off and disconnect the power plug, antenna cable, and all the cables connected to the product.

Otherwise, it may result in electric shock or fire.



Ensure that children do not hang onto the product or climb up onto the product.

• The product may fall and cause personal injury or death.



If you do not use the product for a long period of time, disconnect the power cord from the power outlet.

• Otherwise, this may result in overheating or fire due to dust, and may result in fire due to electric shock or leakage.

Do not place any heavy items or toys or confectionery, such as cookies etc. that may attract the attention of children and to the product.

• Your children may hang onto the product causing it to fall and this may result in personal injury or death.



■ Be careful that children do not place the battery in their mouths when removed from the remote control. Place the battery in a location that children or infants cannot reach.

• If children have had the battery in their mouths, consult your doctor immediately.

When replacing the battery, insert it with the right polarity (+, -).



• Otherwise, the battery may become damaged or it may cause fire, personal injury or damage due to leakage of the internal liquid.



Use only the specified standardized batteries, and do not use a new battery and a used battery at the same time.

• Otherwise, the batteries may be damaged or cause fire, personal injury or damage due to a leakage of the internal liquid.



The batteries (and rechargeable batteries) are not ordinary refuse and must be returned for recycling purposes. The customer is responsible for returning the used or rechargeable batteries for recycling. The customer can return used or rechargeable batteries to a nearby public recycling center or to a store selling the same type of the battery or rechargeable battery.



fire.

Do not place the product in a location exposed to direct sunlight or near any heat such as a fire or heater.
This may reduce the lifetime of the product, and may result in

Do not drop any objects onto the product or cause any impact to the product.

Otherwise, this may result in electric shock or fire.



Do not use a humidifier near the product.

Otherwise, this may result in electric shock or fire.



When there is a gas leak, do not touch the product or the power plug; ventilate immediately.

If a spark occurs, it may cause an explosion or fire.



If the product has been turned on for a long time, the display panel becomes hot. Do not touch it.



Keep the small accessories in a location out of the reach of children.



Be careful when adjusting the angle of the product or the height of the stand.

- This may result in personal injury as your hand or fingers may become caught.
- Also, if you tilt the product too far, it may fall and cause personal injury.



Do not install the product in a location low enough for children to reach.

- Otherwise, it may fall and result in personal injury.
- Since the front part of the product is heavy, install the product on a level and stable surface.



Do not put any heavy objects on the product.

This may result in personal injury and/or damage to the product.

Power Installation Guide



Make sure to read and follow the instructions carefully and correctly. Failing to do so, may result in death, serious personal injury or fire.

Power Installation Guide

• Before installing the product, make sure to check the power requirements for the installation location.

If you want to install the product in a power environment (power cable, power outlet, circuit breaker, etc.) with a current/power capacity lower than the current product consumption/power consumption, install a separate power transformer according to the 'Rated Capacities' table.

The consumer should pay the expenses for this.

• Make sure to connect the product to a dedicated power outlet and do not connect it to a multi-plug extension cord.

If you have to use a multi-plug extension cord, refer to the current consumption in the 'Rated Capacities' table and use a multi-plug with the permitted current specifications greater than the total current consumption of the products connected to it.

• When using a dedicated power extension cable, use a high-capacity power cable.

Use a power cable with a permitted current of 12.5 A or more. Rated Current of the Power Plug /Cord/Appliance Coupler

• Use a power cable with 12.5 A or more.

Ø Note

- Refer to the Cable Safety Specifications.
 - UL specifications Use a cable with 14 AWG or more .
 - KS specification Use a cable with 20.SQ or more .
 - IEC specification Use a cable with 2.5 SQ or more .

Introduction

Package Contents


🖉 Note

Please make sure the following items are included with your LCD Display.

If any items are missing, contact your dealer.

Contact a local dealer to buy optional items.

Checking the Contents of the Package

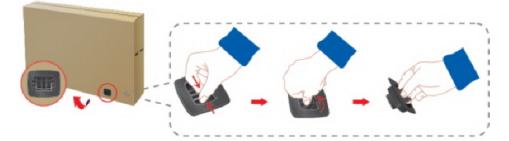

Remove the lock from the package box, as shown in the figure above.







Lift up the package box by Check the contents of the holding the grooves on package. both sides of the package box.

Remove the Styrofoam and vinyl cover.

🖉 Note

- After unpacking the package, make sure to check the contents of the package.
- Make sure to keep the package box for transporting the product in the future.

Unpacking



LCD Display





Quick Setup Guide





User's Guide

(Not available in all locations)

Warranty Card



MagicInfo Software CD, MagicInfo Manual CD







Power Cord

D-Sub Cable

Others





(BP59-00138A)

Remote Control

Batteries (AAA X 2)

(Not available in all locations)

Sold separately





DVI Cable



LAN Cable



Wall Mount KIT

RGB to BNC Cable

Your LCD Display

Front



1 MENU button [MENU]

Opens the on-screen menu and exits from the menu. Also use to exit the OSD menu or return to the previous menu.

2 Navigate buttons (Up-Down buttons)

Moves from one menu item to another vertically or adjusts selected menu values.

3 Adjust buttons (Left-Right buttons) / Volume buttons

Moves from one menu item to another horizontally or adjusts selected menu values. When OSD is not on the screen, press the button to adjust volume.

4 ENTER button [ENTER]

Activates a highlighted menu item.

5 SOURCE button [SOURCE]

Switches from PC mode to Video mode. Selects the input source that an external device is connected to.

 $[\text{PC}] \rightarrow [\text{DVI}] \rightarrow [\text{AV}] \rightarrow [\text{Component}] \rightarrow [\text{HDMI}] \rightarrow [\text{MagicInfo}]$

6 PIP button

Push the PIP button to turn the PIP screen On / Off.

- PC : DVI / AV / HDMI
- DVI / AV : PC
- Component : PC
- HDMI : PC
- 7 Power button [也]

Use this button for turning the LCD Display on and off.

Brightness Sensor (Optional)

Automatically detects the surrounding brightness it accordingly.

🖉 Note

This function is activated only on the models equipped with an auto brightness sensor.

Power indicator

Shows PowerSaver mode by blinking green

Note

See PowerSaver described in the manual for further information regarding power saving functions. For energy conservation, turn your LCD Display OFF when it is not needed or when leaving it unattended for long periods.

0 Remote Control Sensor

Aim the remote control towards this spot on the LCD Display.

Rear

🖉 Note

For detailed information concerning cable connections, refer to Connecting Cables under Setup. The LCD Display 's configuration at the back may vary slightly depending on the LCD Display model.





1 POWER

The power cord plugs into the LCD Display and the wall outlet.

² POWER S/W ON [|] / OFF [O]

Switches the LCD Display On/Off.

3	• 4 • 📰 •
	• 5 •
RS232C OUT	
	RGB/COMPONENT IN
	DVI IN
RS232C IN	

³ RS232C OUT/IN (RS232C Serial PORT)

MDC(Multiple Display Control) Program Port

4 RGB/COMPONENT IN (PC Connection Terminal (Input))

- Use a D-Sub Cable (15 pin D-Sub) PC mode (Analog PC)
- Connect the RGB/COMPONENT IN port on the monitor to the COMPONENT port on the external device using the D-SUB to COMPONENT cable.
- Connect the RGB/COMPONENT IN port on the monitor to the BNC port on the PC using the D-SUB to BNC cable.

DVI IN (PC Video Connection Terminal)

Use a DVI Cable (DVI-D to DVI-D) - DVI mode (Digital PC)



6 DVI / RGB / HDMI AUDIO IN (PC/DVI Audio Connection Terminal (Input))

AV/COMPONENT AUDIO IN [R - AU-DIO- L]

Connect the port of the DVD, VCR (DVD / DTV Set-Top Box) to the [R - AUDIO - L] port of the LCD Display.




- Connect a monitor to another monitor through a DVI cable.
- Connect the DVI OUT port on the monitor to the HDMI IN port on the other monitor using the DVI to HDMI cable.
- DVI, HDMI and network signals sent via the DVI OUT port are displayed on the second display which has the DVI IN port.



Up to 6 Full HD or 10 HD monitors can be connected (May differ depending on the product).



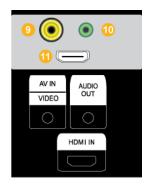

🧐 AV IN [VIDEO]

Connect the [VIDEO] terminal of your monitor to the video output terminal of the external device using a VIDEO cable.

 
1 AUDIO OUT

Headphone/External speaker output terminal.



Connect the HDMI terminal at the back of your LCD Display to the HDMI terminal of your digital output device using a HDMI cable.

Up to HDMI cable 1.0 can be supported.

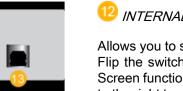

INTERNAL / EXTERNAL Switch

Allows you to select the touch screen mode. Flip the switch to the left to use the Touch Screen function in **MagicInfo** mode and flip it to the right to use the Touch Screen function in **PC** mode.



To use the touch screen function in **PC** mode, the touch screen program must be installed onto your PC and the product must be connected to the PC using USB.


When the power is off adjust the direction of the switch that controls the touchscreen.

¹³ USB Connection Terminal

To use the touch screen function in PC mode, connect the product to your PC using the USB cable.





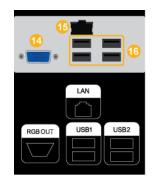

但 RGB OUT

JAN (LAN Connection Terminal)

(16 USB1, USB2 (USB Connection Terminal)

Keyboard / Mouse, Mass Storage Device Compatible.


Ø Note

See Connecting Cables for further information regarding cable connections.

Remote Control



The performance of the remote control may be affected by a TV or other electronic device operating near the LCD Display , causing a malfunction due to interference with the frequency.

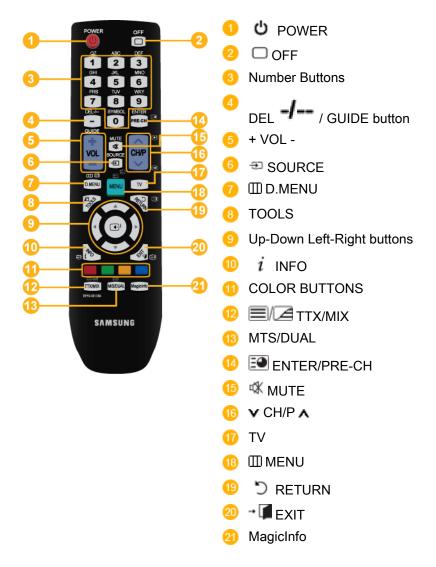

1. ပံ POWER	Turns the proc	duct On.		
2. 🗖 OFF	Turns the proc	duct Off.		
3. Number Buttons	Press to chan	ge the channel.		
4. DEL -/ / GUIDE but-	The "-" button is used to select Digital channels.			
4. DEL - / GUIDE but- ton	Electronic Program Guide (EPG) display.			
	- This function does not work for this LCD Display.			
5. + VOL -	Adjusts the au	idio volume.		
6. 🔁 SOURCE	Press the butt	on to change th	ie input signal SOL	JRCE.
			y allowed for extern D Display at the tim	
7. 🖽 D.MENU	DTV menu dis	play		
	- This function does not work for this LCD Display.		ay.	
8. TOOLS	Use to quickly select frequently used functions.			
	- This function	does not work	for this LCD Displa	ay.
9. Up-Down Left-Right but- tons	Moves from one menu item to another horizontally, vertically or adjusts selected menu values.			
10. <i>i</i> INFO	Current picture information is displayed on the upper left corner of the screen.			
11. COLOR BUTTONS	Press to add or delete channels and to store channels to the favorite channel list in the "Channel List" menu.			
	- This function does not work for this LCD Display.			ay.
12. 12. 12. 12. 12. 12. 12. 12. 12. 12.	TV channels p text.	provide written	information service	es via tele-
6	- Teletext Butt ,€, 7⊜,10 ≅,		<mark>14</mark> ≡●, <mark>16</mark> €)/€1, <mark>18</mark> €	8, 19 🛢 , 20 🔍 ,
	- This function	does not work	for this LCD Displa	ay.
13. MTS/DUAL	- This function does not work for this LCD Display.			
	MTS-			
	You can select MTS (Multichannel Television Stereo) mode.		reo) mode.	
	FM Stereo	Audio Type Mono Stereo SAP	MTS/S_Mode Mono Mono ↔ Stereo Mono ↔ SAP	Default Manual Change Mono
	DUAL			


DUAL-


STEREO/MONO, DUAL I / DUAL II and MONO/NICAM MONO/NICAM STEREO can be operated depending on the

	broadcasting type by using the DUAL button on the remote control while watching TV.
14. 🖭 ENTER/PRE-CH	This button is used to return to the immediately previous channel.
	- This function does not work for this LCD Display.
15. 🕸 MUTE	Pauses (mutes) the audio output temporarily. This is dis- played on the lower left corner of the screen. The audio comes back on if MUTE or - VOL + is pressed in the Mute mode.
16. 🗸 CH/P 🗚	In TV mode, selects TV channels.
	- This function does not work for this LCD Display.
17. TV	Selects the TV mode directly.
	- This function does not work for this LCD Display.
18. III MENU	Opens the on-screen menu and exits from the menu or closes the adjustment menu.
19. 🖱 RETURN	Returns to the previous menu.
20. → 🚺 EXIT	Exits from the menu screen.
21. MagicInfo	MagicInfo Quick Launch Button.


Mechanical Layout (700TSn-2)

 Mechanical Layout

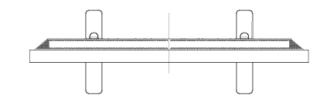

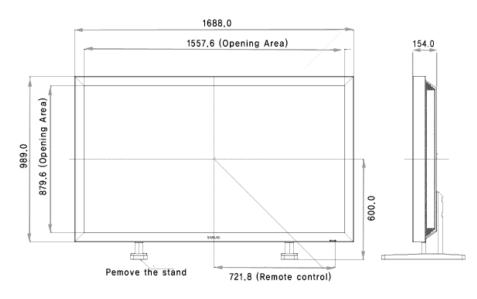


LCD Display Head

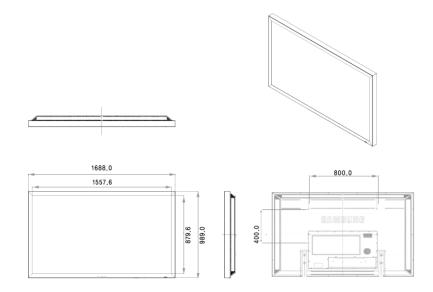

Installation VESA Bracket

- When installing VESA, make sure to comply with the international VESA standards.
- Purchasing VESA Bracket and Installation Information : Please contact your nearest SAMSUNG Distributor to place an order. After your order is placed, installation professionals will visit you and install the bracket.
- At least 2 persons are needed in order to move the LCD Display.
- SAMSUNG is not responsible for any product damage or any injury caused by installation at customer's discretion.

Dimensions

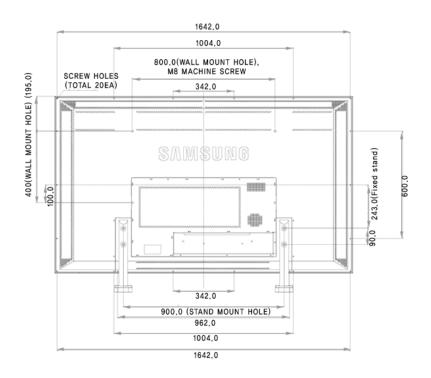


For securing the bracket on a wall, use only machine screws of 6 mm diameter and 8 to 12 mm length.

Wall Bracket Installation

- Contact a technician for installing the wall bracket.
- SAMSUNG Electronics is not responsible for any damages to the product or harm to customers when the installation is done by the customer.
- This product is for installing on cement walls. The product may not stay in place when installed on plaster or wood.

Components

Only use the components and accessories shipped with the product.

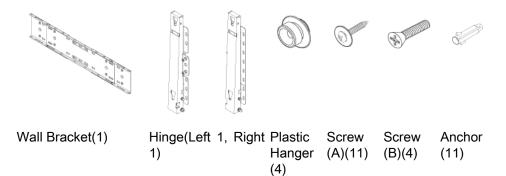


Wall Bracket Assembly



There are two hinges(left and right). Use the correct one.

1. Insert and tighten the Captive Screw in the direction of the arrow.


When done, mount the wall bracket on the wall.

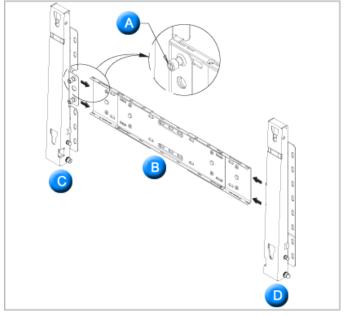


There are two hinges(left and right). Use the correct one.

- A Captive Screw
- B Wall Bracket
- C Hinge (Left)
- D Hinge (Right)
- 2. Before drilling into the wall, check if the length between the two locking holes at the back of the product is correct.

If the length is too short or long, loosen all or some of the 4screws on the wall bracket to adjust the length.

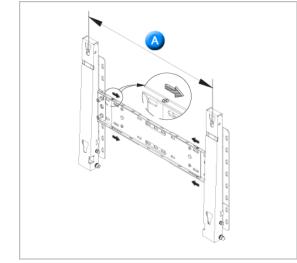


- A Length between the two locking holes
- 3. Check the installation diagram and mark the drill points on the wall. Use the 5.0 mm bit to drill holes deeper than 35 mm. Fix each anchor in the corresponding hole. Match each of the brackets and hinge holes to the corresponding anchor holes and insert and tighten the 11 screws A.

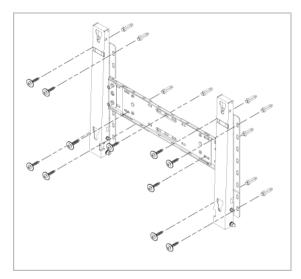

To mount the product on the wall bracket

The shape of the product may vary depending on the model. (The assemblies of the plastic hanger and the screw are the same)


1. Remove the 4 screws on the back of the product.

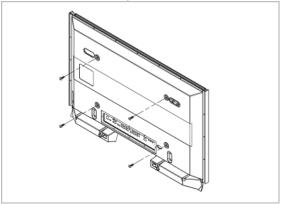


2. Insert the screw B into the plastic hanger.



- Mount the product on the wall bracket and make sure it is properly fixed to the left and right plastic hangers.
- Be careful when installing the product on the bracket as fingers can be caught in the holes.
- Make sure the wall bracket is securely fixed to the wall, or the product may not stay in place after installation.
- 3. Tighten the 4 screws in step 2 (plastic hanger + screw B)to the rear holes of the product.

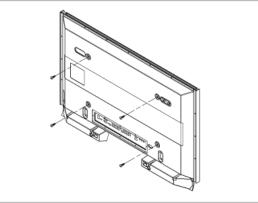


4. Remove safety pin (3) and insert the 4 product holders into the corresponding bracket holes (1). Then place the product(2) so that it is firmly fixed to the bracket. Make sure to re-insert and tighten the safety pin (3) to securely hold the product to the bracket.

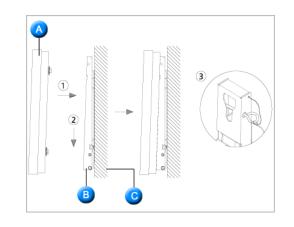

A -	LCD Display
В -	Wall Bracket
C -	Wall

Wall Bracket Angle Adjustment


Adjust the bracket angle to -2° before installing it on the wall.

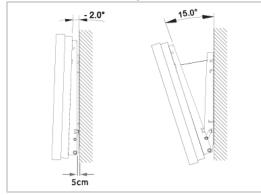

- 1. Fix the product to the wall bracket.
- 2. Hold the product at the top in the center and pull it forward (direction of the arrow) to adjust the angle.




You can adjust the bracket angle between -2° and 15°.

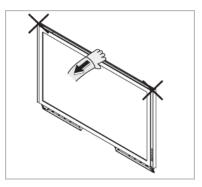


Make sure to use the top center, and not the left or the right side of the product to adjust the angle.

Mechanical Layout (820TSn-2)

Mechanical Layout

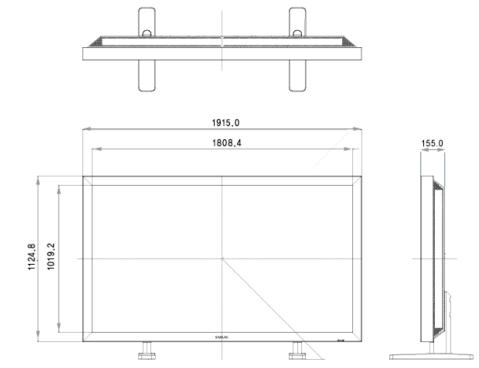

LCD Display Head

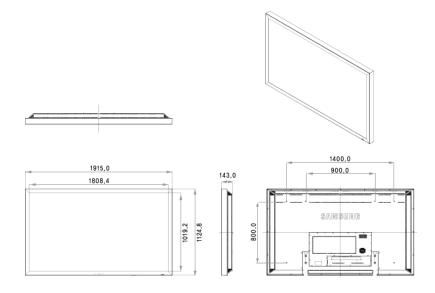


Installation VESA Bracket

- When installing VESA, make sure to comply with the international VESA standards.
- Purchasing VESA Bracket and Installation Information : Please contact your nearest SAMSUNG Distributor to place an order. After your order is placed, installation professionals will visit you and install the bracket.

- At least 2 persons are needed in order to move the LCD Display.
- SAMSUNG is not responsible for any product damage or any injury caused by installation at customer's discretion.

Dimensions

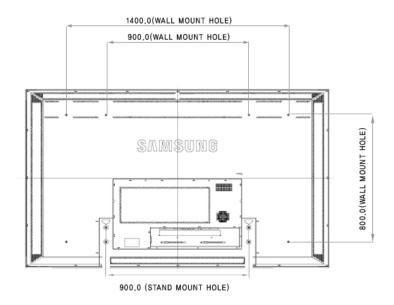



For securing the bracket on a wall, use only machine screws of 6 mm diameter and 8 to 12 mm length.

Wall Bracket Installation

- Contact a technician for installing the wall bracket.
- SAMSUNG Electronics is not responsible for any damages to the product or harm to customers when the installation is done by the customer.
- This product is for installing on cement walls. The product may not stay in place when installed on plaster or wood.

Components

Only use the components and accessories shipped with the product.



Wall Bracket(1)	Hinge(Left 1, Righ	nt Plastic	Screw	Screw	Anchor
	1)	Hanger	(A)(11)	(B)(4)	(11)
		(4)			


Wall Bracket Assembly

🖉 Note

There are two hinges(left and right). Use the correct one.

1. Insert and tighten the Captive Screw in the direction of the arrow.


When done, mount the wall bracket on the wall.

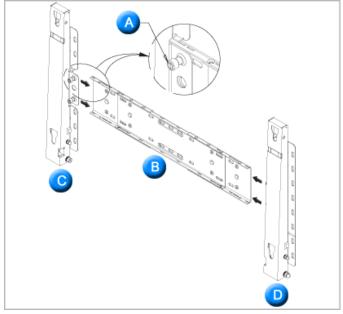


There are two hinges(left and right). Use the correct one.

- A Captive Screw
- B Wall Bracket
- C Hinge (Left)
- D Hinge (Right)
- 2. Before drilling into the wall, check if the length between the two locking holes at the back of the product is correct.

If the length is too short or long, loosen all or some of the 4screws on the wall bracket to adjust the length.

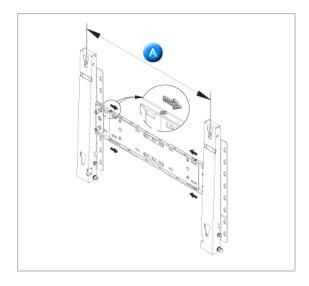


- A Length between the two locking holes
- 3. Check the installation diagram and mark the drill points on the wall. Use the 5.0 mm bit to drill holes deeper than 35 mm. Fix each anchor in the corresponding hole. Match each of the brackets and hinge holes to the corresponding anchor holes and insert and tighten the 11 screws A.

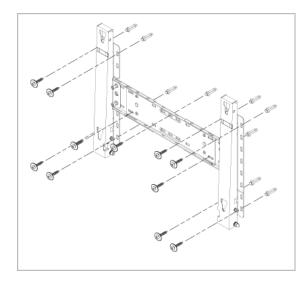

To mount the product on the wall bracket

The shape of the product may vary depending on the model. (The assemblies of the plastic hanger and the screw are the same)


1. Remove the 4 screws on the back of the product.

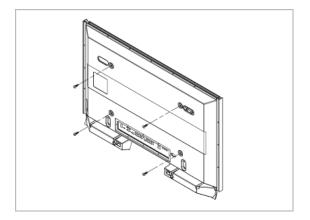


2. Insert the screw B into the plastic hanger.



- Mount the product on the wall bracket and make sure it is properly fixed to the left and right plastic hangers.
- Be careful when installing the product on the bracket as fingers can be caught in the holes.
- Make sure the wall bracket is securely fixed to the wall, or the product may not stay in place after installation.
- 3. Tighten the 4 screws in step 2 (plastic hanger + screw B)to the rear holes of the product.

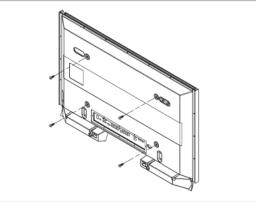


4. Remove safety pin (3) and insert the 4 product holders into the corresponding bracket holes (1). Then place the product(2) so that it is firmly fixed to the bracket. Make sure to re-insert and tighten the safety pin (3) to securely hold the product to the bracket.

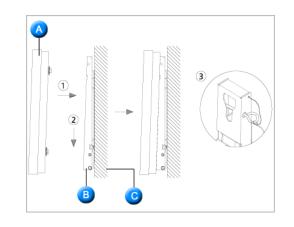

A -	LCD Display
В -	Wall Bracket
C -	Wall

Wall Bracket Angle Adjustment


Adjust the bracket angle to -2° before installing it on the wall.

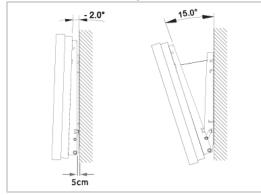

- 1. Fix the product to the wall bracket.
- 2. Hold the product at the top in the center and pull it forward (direction of the arrow) to adjust the angle.




You can adjust the bracket angle between -2° and 15°.

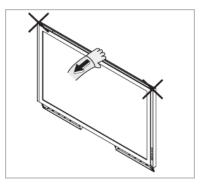

Make sure to use the top center, and not the left or the right side of the product to adjust the angle.

Connections

Connecting a Computer

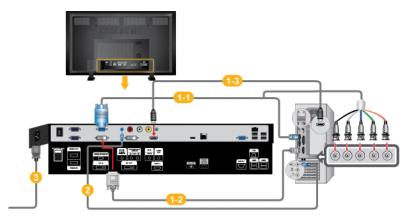

1 There are several ways to connect the computer to the monitor. Choose one from the following options.

Using the D-sub (Analog) connector on the video card.

• Connect the D-sub to the 15-pin, RGB/COMPONENT IN port on the back of your LCD Display and the 15 pin D-sub Port on the computer.



•

Using the DVI (Digital) connector on the video card.

Connect the DVI Cable to the DVI IN port on the back of your LCD Display and the DVI port on the computer.



Using the HDMI (digital) output on the graphics card.

 Connect the HDMI IN port on the monitor to the HDMI port on the PC using the HDMI cable.

HDMI IN

Note

When the HDMI cable to the PC, ensure that you select **HDMI** from both the **Source List** and **Edit Name** before selecting **PC** or **DVI** device so that normal PC screen and sound can be outputted. Note that sound is only

available when connected according to the option $\stackrel{{\scriptsize \bigcirc}}{\smile}$ that follows.

- 2 Connect the audio cable for your LCD Display to the audio port on the back of the LCD Display.
- Onnect the power cord for your LCD Display to the power port on the back of the LCD Display. Turn on the power switch.

🖉 Note


- Turn on both your computer and the LCD Display.
- Contact a local SAMSUNG Electronics Service Center to buy optional items.

Connecting to Other devices

• AV input devices such as DVD players, VCRs or camcorders as well as your computer can be connected to the LCD Display. For detailed information on connecting AV input devices, refer to the contents under Adjusting Your LCD Display.


• The LCD Display 's configuration at the back may vary slightly depending on the LCD Display model.

Connecting AV Devices

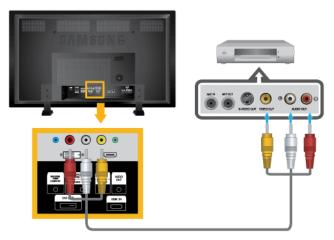

- 1. Connect the Video and [R-AUDIO-L] port of the DVD, VCR or DTV Set-Top Box to the Video and [R-AUDIO-L] LCD Display.
- 2. Play the DVD, VCR or Camcorder with a DVD disc or tape inserted.
- 3. Select AV using the SOURCE .

Connecting to a Camcorder

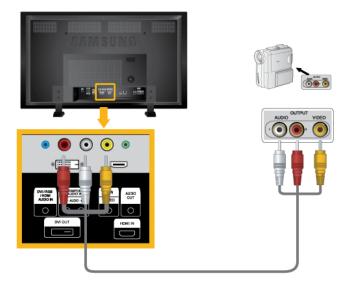


- 1. Locate the AV output jacks on the camcorder. They are usually found on the side or back of the camcorder. Connect a set of audio cables between the AUDIO OUTPUT jacks on the camcorder and the AV/COMPONENT AUDIO IN [R-AUDIO-L] on the LCD Display.
- 2. Connect a video cable between the VIDEO OUTPUT jack on the camcorder and the AV IN [VIDEO] on the LCD Display .
- 3. Select **AV** for the Camcorder connection using the Source button on the front of the LCD Display or on the remote control.
- 4. Then, start the Camcorder with a tape inserted.



The audio-video cables shown here are usually included with a Camcorder. (If not, check your local electronics store.) If your camcorder is stereo, you need to connect a set of two cables.

Connecting Using a DVI Cable

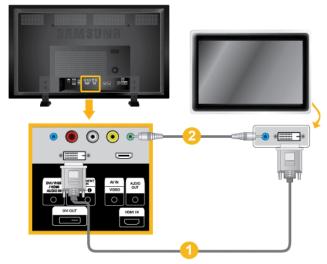

- 1. Connect between the DVI OUT port on the LCD Display and the input port on another monitor using a DVI cable.
- 2. Connect between the AUDIO OUT port on the LCD Display and the audio input port on another monitor using a stereo cable.
- 3. Select DVI using the SOURCE button on the front of the LCD Display or on the remote control.

🖉 Note

DVI OUT does not support HDCP.

Connecting Using a HDMI Cable




1. Connect input devices such as a Blu-Ray/DVD player to the HDMI IN terminal of the LCD Display using an HDMI cable.

2. Select HDMI using the SOURCE button on the front of the LCD Display or on the remote control.

🖉 Note


In **HDMI** mode, only PCM format audio is supported.

Connecting Using a DVI to HDMI Cable

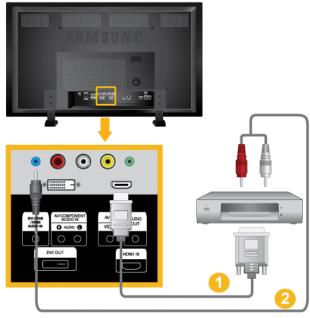


- 1. Connect the DVI output terminal of a digital output device to the HDMI IN terminal of the LCD Display using a DVI to HDMI cable.
- 2. Connect the red and white jacks of an RCA to stereo (for PC) cable to the same colored audio output terminals of the digital output device, and connect the opposite jack to the DVI / RGB / HDMI AUDIO IN terminal of the LCD Display.
- 3. Select HDMI using the SOURCE button on the front of the LCD Display or on the remote control.

Connecting to an Audio System

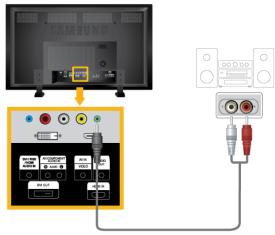

1. Connect a set of audio cables between the AUX L, R jacks on the AUDIO SYSTEM and AUDIO OUT on LCD Display.

Connecting the Touch Screen USB hub

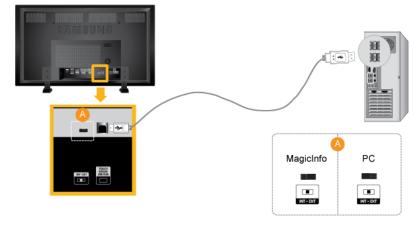

Note

To use the touch screen function in MagicInfo mode, flip the toggle switch to the left.

To use the touch screen function in **PC** mode, connect the USB port on your PC to the product using the USB cable and then flip the toggle switch to the right.

Connecting a LAN Cable



Connect the LAN cable.


Connecting a USB device



You can connect USB devices such as a mouse or keyboard.

Using the Software

Monitor Driver

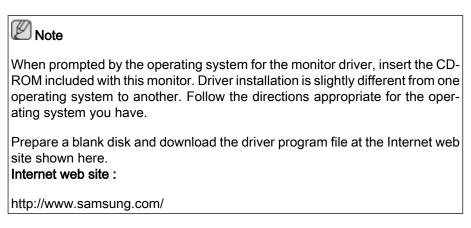

Installing the Monitor Driver (Automatic)

- 1. Insert CD into the CD-ROM drive.
- 2. Click "Windows".
- 3. Choose your monitor model in the model list, then click the "OK" button.

SAMSUNG monitor installer	
Select the display adapter on which you want to intall the monitor	
1. RADEON 9550 : Plug and Play Monitor	·
Select the monitor which you want to install	
Samsung ****	
<	>
OK. CANCEL	

4. If you can see following message window, then click the "Continue Anyway" button. Then click "OK" button (Microsoft[®] Windows[®] XP/2000 Operating System).

Hardwa	re Installation
1	The software you are installing for this hardware: Samsung **** has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.) Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommeds that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
	Continue Anyway

Note

This monitor driver is certified by Microsoft, and installing it will not damage your system.

The certified driver will be posted on Samsung Monitor homepage.

http://www.samsung.com/

Installing the Monitor Driver (Manual)

Microsoft[®] Windows Vista™, Operating System

- 1. Insert your Manual CD into your CD-ROM drive.
- Click (Start) and "Control Panel". Then, double-click on "Appearance and Personalization".

		Contraction of	196		-
Enternet Taster Content Taster Content Unit	water water	Contrast Frank Honor Channe View	System and M	alvienanze 🙀 Utar Ac	COLUMN ALCOHOL
 Walsone Center Windows Mada Paper Windows Physic Labely 	Atum Mar			Art) seconda diskue stronge Brance Brance	pressure of dealing that is in clean (and size, or containing the
Windows Live Messenger Developed	Garren Saarch Recard Same *		Network and I Serve Servery	Charge d	anguage, and Region
Mindon Tytow Adds Postslag (3)	Computer Returns	and the	A trees	anti-anti-anti-anti-anti-anti-anti-anti-	nin sugged sattings staat degles
Command Privinget	Connect Facult Outland Frequence	and a	The Second Second	a contraction of the second	rul Optione
> AllProgram	Harly and Support	Print Contract of the Second			_

3. Click "Personalization" and then "Display Settings".



4. Click "Advanced Settings...".

ornitor		Identify Monito
Drag the icons to match your		
1. (Multiple Monitors) on NV	DIA Geforce 6600 LE (Microsoft Corporation -
L (Multiple Monitors) on NM 27 [] his is my main monitor 27 [] fittend the desistop ants th		
Disis is my main monitor		Microsoft Corporation - Colors
2 Ibis is my main monitor 2 Estand the deditop ants th Secolution .cov		NAMES OF
2 Ibs a my main monitor 2 Estand the deditop ants th Besolution: Low	is manifes } High	<u>Colore</u>
2 This is my main monitor 2 Extend the deditop ants th Besolution: Low	is manifes } High	<u>Colore</u>

5. Click "Properties" in the "Monitor" tab. If the "Properties" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.

If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".


dapter Monitor Troubleshoot. Color Management	Windows needs your permission to contionu
Seneric PrP Monitor	V
1 Droper bes	If you started this action, continue.
Monitor Settings	Device Properties
Screen refresh rate:	Microsoft Windows
60 Hertz ·	
Hide modes that this monitor cannot display	2000
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable	Oetails Continue Cance
display and/or damaged hardware.	User Account Control helps stop unauthorized changes to your compu

🖉 Note

This monitor driver is under certifying MS logo, and this installation will not damage your system.

The certified driver will be posted on Samsung Monitor homepage.

6. Click "Update Driver..." in the "Driver" tab.

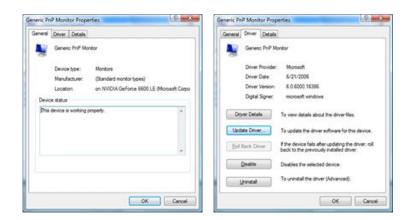


7. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".

low do you want to search for driver software?	Browse for driver software on your computer
 Search automatically for updated driver software. Wodewi will starth you compute and the beamet for the test driver software for your drive. 	Senich for driver software in this location
 Equivalently computed for driver software (and will local driver infrared). 	Let me pick from a list of device drivers on my computer This fit will then installed driver software competitive with the device, and all driver unifware in the same category as the device.


8. Click "Have Disk..." and select the folder (for example, D:\Drive) where the driver setup file is located, and click "OK".

Select the device driver you want to install for this hardware.	-	Inset the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
IZ (Ree prodition hardware) Nobel III Ganeers Tref Monter		Copy manufacturer's files from:	Browse.
The driver is diptify signed Here Dat Jel me shu itser some autostat	<u></u>		

9. Select the model that matches your monitor from the list of monitor models on the screen, and click "Next".

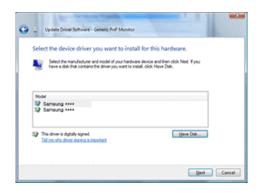

10. Click "Close" \rightarrow "Close" \rightarrow "OK" \rightarrow "OK" on the following screens displayed in sequence.

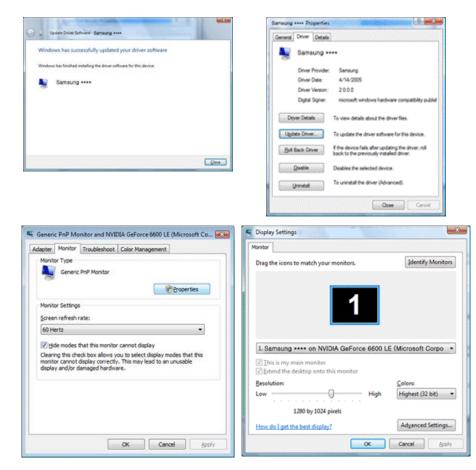

Microsoft[®] Windows[®] XP Operating System


- 1. Insert CD into the CD-ROM drive.
- 2. Click "Start" \rightarrow "Control Panel", then click the "Appearance and Themes" icon.

	() (al () - 🔊 🔊 Seech 🐑 feiles 💷 -	•
My Decuments My Becant grounders My Private My Private My Computer Control Gamel Control Control Gamel Control Gamel Control Control	i dalam bidan i	

3. Click "Display" icon and choose the "Settings" tab then click "Advanced...".

P Appearance and Tremes			Display Properties
Grad () · () () si		~	Themes Desktop Screen Saver Appearance Settings
Addition (2) Algorization and Present Wer allow These Present Present Andream Present Addreament Present Addreament Present	Appendix and there Pick a task Many for example to the and the and More the data build before More the data build before More the and the and More the and the and the and More the and the and the and More the and the and the and the and More the and the and the and More the and the and the and the and More the and t	1 Do	Display: Pbg and Play Monitor on 3D Prophet III
	Canala De Laster (advanta)		Color quelly Leve More Color quelly 1024 by 760 parts Touchestront. Adjanced OK. Cancel Acoby

4. Click the "Properties" button on the "Monitor" tab and select "Driver" tab.

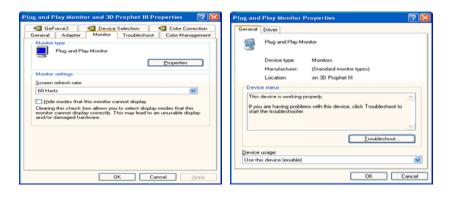

5. Click "Update Driver..." and select "Install from a list or..." then click "Next" button.



6. Select "Don't search, I will...", then click "Next" and then click "Have disk".

Hardware Update Wizard	Hardware Update Wizard
Please choose your search and installation options.	Select the device driver you want to install for this hardware.
O Search for the best driver in these locations. Use the check boxes below to finit or expand the default search, which includes local paths and removable media. The best driver found will be installed.	Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Search removable gedia [flopp, CD ROM] Chudde this location in the reach: A.	
< Back Next > Cancel	< Back New > Cancel

7. Click the "Browse" button then choose A:(D:\Driver) and choose your monitor model in the model list and click the "Next" button.

Install F	rom Disk		Hardware Update Wizard
H	Insert the manufacturer's installation disk, and then		Select the device driver you want to install for this hardware.
	make sure that the correct drive is selected below.	Cancel	Select the manufacturer and model of your hardware device and then click. Next. If you have a disk that contains the driver you want to install, click. Have Disk.
			Model Samsung ****
	Copy manufacturer's files from:		This driver is not digitally signed! <u>Have Disk</u> I all me why driver signing is important
		<u>B</u> rowse	< Rack Next> Cancel

8. If you can see following message window, then click the "Continue Anyway" button. Then click "OK" button.

Hardwa	re Installation
⚠	The software you are installing for this hardware: Samsung **** has not passed Windows Logo testing to verify its compatibility with Windows?P. (Tell no why this testing is inpotent). Continuing your installation of this software may impair or destabilize the correct operation of your system recommends that you strop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
	Continue Anyway STOP Installation


Note

This monitor driver is under certifying MS logo, and this installation will not damage your system.

The certified driver will be posted on Samsung Monitor homepage.

http://www.samsung.com/

9. Click the "Close" button, then click the "OK" button continually.

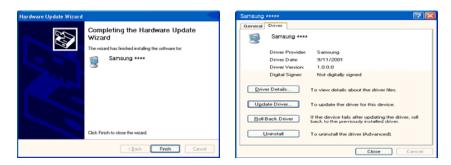



10. Monitor driver installation is completed.

Microsoft[®] Windows[®] 2000 Operating System

When you can see "Digital Signature Not Found" on your monitor, follow these steps.

- 1. Choose "OK" button on the "Insert disk" window.
- 2. Click the "Browse" button on the "File Needed" window.
- 3. Choose A:(D:\Driver), then click the "Open" button and then click "OK" button.

How to install

- 1. Click "Start", "Setting", "Control Panel".
- 2. Double click the "Display" icon.
- 3. Select the "Settings" tab and click "Advanced Properties" button.
- 4. Choose "Monitor".

Case1 : If the "Properties" button is inactive, it means your monitor is properly configured. Please stop installation

Case2 : If the "Properties" button is active, click the "Properties" button, then follow the next steps.

- 5. Click "Driver" and then click on "Update Driver...", then click on the "Next" button.
- 6. Choose "Display a list of the known drivers for this device so that I can choose a specific driver", then click "Next" and then click "Have disk".
- 7. Click the "Browse" button, then choose A:(D:\Driver).
- 8. Click the "Open" button, then click "OK" button.
- 9. Choose your monitor model and click the "Next" button. Then click "Next" button.
- 10. Click the "Finish" button, then the "Close" button.

If you can see the "Digital Signature Not Found" window, then click the "Yes" button. Then click the "Finish" button and the "Close" button.

Microsoft[®] Windows[®] Millennium Operating System

- 1. Click "Start", "Setting", "Control Panel".
- 2. Double click the "Display" icon.
- 3. Select the "Settings" tab and click "Advanced Properties" button.

- 4. Select the "Monitor" tab.
- 5. Click the "Change" button in the "Monitor Type" area.
- 6. Choose "Specify the location of the driver".
- 7. Choose "Display a list of all the driver in a specific location...", then click "Next" button.
- 8. Click the "Have Disk" button.
- 9. Specify A:\(D:\driver), then click "OK" button.
- 10. Select "Show all devices" and choose the monitor that corresponds to the one you connected to your computer and click "OK".
- 11. Continue choosing "Close" button and "OK" button until you close the Display Properties dialogue box.

Microsoft[®] Windows[®] NT Operating System

- 1. Click "Start", "Settings", "Control Panel", and then double-click "Display" icon.
- 2. In Display Registration Information window, click Settings Tab and then click "All Display Modes".
- 3. Select a mode that you wish to use (Resolution, Number of colors and Vertical frequency) and then click "OK".
- 4. Click "Apply" button if you see the screen working normally after clicking "Test". If the screen is not normal, change to a different mode (lower mode of resolution, colors or frequency).

Ø Note

If there is no Mode at All Display Modes, select the level of resolution and vertical frequency by referring to the Preset Timing Modes in the user guide.

Linux Operating System

To execute X-Window, you need to make the X86Config file, which is a type of system setting file.

- 1. Press "Enter" at the first and the second screen after executing the X86Config file.
- 2. The third screen is for setting your mouse.
- 3. Set a mouse for your computer.
- 4. The next screen is for selecting a keyboard.
- 5. Set a Keyboard for your computer.
- 6. The next screen is for setting your monitor.
- 7. First of all, set a horizontal frequency for your monitor. (You can enter the frequency directly.)
- 8. Set a vertical frequency for your monitor. (You can enter the frequency directly.)
- 9. Enter the model name of your monitor. This information will not affect the actual execution of X-Window.

10. You have finished setting up your monitor. Execute X-Window after setting other requested hardware.

IRTOUCH

IRTouch Screen Control Panel

Double click the mark as shown below on the desktop or follow "Start" -> "All programs" -> "IRTouchSystems", and then click "IR TouchScreen Control Panel" and go to the Control Panel of the touchscreens as follows:



General Control Panel menu

1. The control panel provides the function of USB/Serial IR touchscreens matching with related monitors. It supports the compatibility of multi-touchscreens on a single PC. This window shows the basic information of the touchscreen and calibration. If several touch screens are mounted on the PC and the status is set to "Multi-screens display", use the [Select Monitor] menu to choose the monitor related to each touch screen before calibration, otherwise the touchscreen will not work. Steps for setting up multi-touchscreens on a single PC: The button mark will appear in the center of each monitor screen in a master-slave sequence operated by the program after you click "Select Monitor". If that is the case, then click the center of the button mark to acknowledge the mounted touchscreen. If there is no information about the touchscreen displayed on the monitor, press "ESC" on the keyboard or wait for 15 seconds. The program will pass the current monitor and automatically select the next one. Double clicking one of the touchscreens in the list, you can select the monitor related to the selected IR touch screen in the popup select-dialog box. Click the "OK" button to save and exit. Finishing the above operations, the program will show the monitor number relevant to each touchscreen in the "Monitor" list.

R IRIOUCHSYSIEMS TouchScreen Properties	<
Image: Second	
Touc Serial Please select the monitor Monitor(0):1280*1024	
Select Monitor Calibrate	
Ok Cancel Apply	

2. Select the touchscreen you want in the list and Click [Calibrate]. After calibration, the item "Calibrated" will show "Yes".

	u		uchscreen to be
Please Calibrate after: "You have installed a new	touchscreen or	changed	a new model.
*You find you can't touch o			Calibrated
USB IrTouch Screen (0)		O	No
		1	

The method of calibration comprises the following steps: Select a touchscreen in the information list, and then click the "Calibrate" button when the calibration window shows up. At this time, four bull's-eyes will appear on the screen, each of which having a cross in the center. The calibration will be completed by clicking in sequence the crosses with a pointer or a finger in a clockwise direction. As the calibration is performed in "Click on Release" mode, even if failing to click the cross at first, you can continually move to the cross, click, and then release. Press the "Esc" button to exit calibration. After calibration, the "Recalibrate", "OK" and "Cancel" buttons will show up. "ReCalibrate" means recalibration; "OK" means saving and exit; "Cancel" means � exit without saving.

Mode Settings

R IRTOUCHSYSTERS TouchScreen	n Properties 🛛 🛛
General Modes Beep About	
Modes	RightClick Settings
C Click On Touch Click On Release Mouse Emulation	Delay
Options	DoubleClick Settings
Enable Touch Hide Cursor Send Right Click Enable Double Click Enable Delay Touch Prevent System To Standby Drag Delay 0	Speed
False touch rejection Enter.count 30 Leave count 5	
	Ok Cancel Apply

1. Click on touch

When the finger contacts a touch screen the mouse's single click will happen automatically. The mode only applies to touch, not to drag. In this mode the touchscreen responds the fastest. This mode is usually used for clicking a large object (e.g. OK button in the pop-up window) in applications.

2. Click on Release

A mouse click event happens at the point where the finger leaves the touchscreen; it is a precisely controlled mode and therefore good for clicking a small object (e.g. Minimize button in the pop-up window) or hyperlink of web pages, such as POS and WEB applications.

3. Mouse Emulation

The "Mouse Emulation" mode is the default one, fully emulating mouse operation, such as left-button clicking, moving, lifting and dragging. This mode is best for writing, drawing and dragging.

4. Enable Touch

Enable(default)/disable touchscreen.

5. Hide Cursor

Hide the cursor by clicking "Hide cursor" in Options when the mouse cursor is not used in some applications.

6. Send Right Click

You can enable the right-click function (default). Click and press on any area on the screen for two seconds. The right-click pop-up menu will show up. Right-click is only available in the Mouse Emulation mode. You can adjust the value of "Delay" in "Right Click Settings". Note: The higher the "Delay" value, the longer the right-click menu pop-up time. "Delay" is displayed in "milliseconds." "Area" is used for adjusting the jitter range of the touch surface within a limit of error (unit: pixel). The higher the "Area" value, the wider the range of jitter. The Right Click menu will pop up when the finger contacts the screen for a while within the pre-set range of time and jitter.

7. Enable Double Click

It is similar to the mouse's double click function. Obtain the best performance regarding Double Click by setting the "Double Click Settings" properties. "Speed" is displayed in "milliseconds." The higher the speed value, the longer the effective time between the two clicks of a double–click event. "Area" is used for amplifying or reducing the Double Click area. The double-click function is available in the "Click on touch," "Click on Release" and "Mouse Emulation" modes.

8. Enable Delay Touch

After this function is enabled, high speed touch or scratch on the screen becomes \clubsuit ineffective. This function is very effective to maintain a steady touch on a specified area for a certain amount of time. \clubsuit It can be used for banking and industrial control applications, such as ATM and switches on industrial equipment; it is available in Click on touch and Click on Release modes. The \clubsuit "Delay Touch Setting" properties can be set selectively. The higher the value (unit: \clubsuit millisecond), the longer the touch-delay time; the "Area" value is used to adjust the effective touch area of the touch panel, on which the finger stays. The higher the value (unit: pixel), the \diamondsuit wider the effective area.

9. Drag Delay

This function allows a drag event to occur only after a certain predefined drag delay time has elapsed. If the object cannot be precisely selected or the cursor jitters, adjust the value of "Drag" to delay dragging. It is displayed in milliseconds.

🖉 Note

According to the hardware statuses and external factors, you can flexibly set related parameters to achieve the best performance. Refer to the attachment later in this manual.

Serial port Settings

1. After installing the driver of the serial port is finished, choose "Start"——"All Programs"——"IRTOUCHSYSTEMS"——"Serial Port Settings". The name of the IR touch device installed and the number of serial ports are shown in the list. Choose [Install] when some serial ports are available or choose [Remove] to uninstall the driver if you don't want to use the touchscreen.

Device	Serial Port
IRTOUCHSYSTEMS InfraRed TouchScreen	COM1

2. Click [Change Port] and change the settings of the selected Serial Port.

Device		Serial Port
IRTOUCHSYSTEI	Select Serial Port	COM1
Install	OK Cancel	Change Por

Attachment

General settings for touchscreen

Select "Mouse Emulation" mode to find the available options in Options: "Enable Touch," "Send Right Click" and "Enable Double Click". If you select the "Enable Delay Touch" option, touch sensibility will slow down and dragging after a quick click will be treated as disabled operations. Dragging and fast clicking will be considered disabled operations.

Modes Click On Touch Click On Release Mouse Emulation	RightClick Settings Delay 1000 Area 32
Options	DoubleClick Settings Speed 509 Area 32 DelayTouch Settings Delay 43 Area 16

Instructions for the settings:

- Send Right Click : You can enable the right-click function (default). Click and press on any area on the screen for two seconds. The right-click menu will pop up. Right-click is only available in Mouse Emulation mode. In general, the "Delay" value is set to 1000 (1 second) and the "Area" value is set to 32px, to obtain the best performance regarding the right-click function.
- 2. Enable Double Click : Same as the mouse's double click function. If you double click an object in accordance with the Speed and Area settings, it will open. The parameter settings for best operation are a "Speed" value between 500 and 550 and an "Area" value of 32px.
- 3. Drag Delay: This function shows the amount of time (in milliseconds) to wait before "Drag" is executed after being clicked. If the object cannot be precisely selected or the cursor jitters when you attempt to touch, adjust Drag Delay to the correct value by dragging the slide bar. It is displayed in milliseconds.

Settings for touchscreen in strong light, rain and snow conditions

A snowflake or raindrop can cause an unwanted single touch operation. The "Enable Delay" function will prevent such a false screen touch.

neral Modes Beep About Modes C Click On Touch C Click On Release Mouse Emulation Options Enable Touch Hide Cursor Send Right Click Enable Delay Touch Prevent System To Standby Drag Delay 0	RightClick Settings Delay 2000 Area 4 DoubleClick Settings Speed 500 Area 16 0elayTouch Settings Delay 16 17 DelayTouch Settings 18 41 Area 4 4
False touch rejection Enter count 12 Leave count 3]1

Specifications

1. Define each value in "Delay Touch Settings" after selecting to activate "Enable Delay Touch". It is recommended that "Delay" is set between 40 and 50 and "Area" to 2.



The touch response can be obtained after activating the "False touch rejection" function.

MDC (Multi-Display Channel)



Installation

- 1. Insert the installation CD into the CD-ROM drive.
- 2. Click the MDC installation file.

Note

If the popup window to install the software for the main screen is not displayed, proceed with the installation using the MDC executable file on the CD.

- 3. When the Installation Shield Wizard window appears, click "Next".
- 4. Select "I agree to the terms of the license agreement" to accept the terms of use.
- 5. Click "Install".
- 6. The "Installation Status" window appears.
- 7. Click "Finish".
- 8. When the installation is complete, the MDC executable icon appears on your desktop. Double-click the icon to start the program.

MDC execution icon may not appear depending on specification of computer system or monitor. If that happens, press F5 Key.

Installation Problems

The installation of MDC can be affected by such factors as the video card, motherboard and the network environment.

Uninstall

The MDC program can be removed only by using the "Add or Remove Programs" option of the Windows[®] Control Panel.

Perform the following steps remove MDC.


Select "Setting/Control Panel" on the "Start" menu and then double-click "Add/Delete a program".

Select MDC from the list and then click the "Add/Delete" button.

Using MDC



Introduction

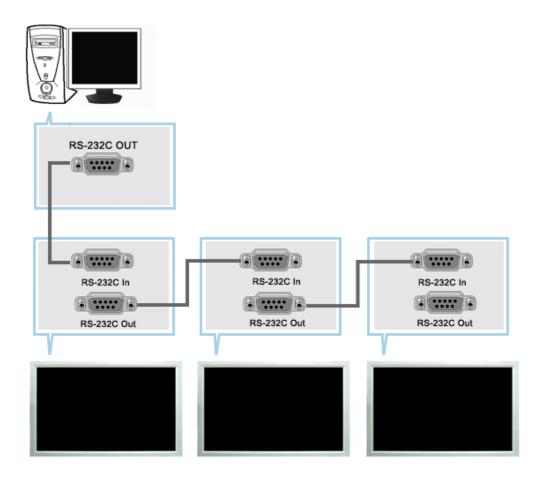

A Multiple Display Control (MDC) is an application allowing various displays to be easily and simultaneously operated on a PC. RS-232C, a standard of serial communication, is used for the communication between a PC and a display. Therefore, a serial cable should be connected between the serial port on a PC and the serial port on a display.

Main Screen

Click Start > Program > Samsung > MDC System to start the program.

Select a set to see the volume of the selected set within the slider.

wer Control	Select Al					
Wer Control		O PC	16:9		O Power On	Power Off
nput Source						
Image Size					Volume 10 🛒	
9				×		
Time	ID 🚺 La	amp Temp.Status	B/RSenser Fan	CurrentTemp.		
	0 🔾	0 0	0 1	49		
PIP						
Settings					Ĺ	
<i></i>					5)	
Naintenance						

1 Main Icons	5 Select Button
2 Remocon	6 Info Grid
3 Safety Lock	7 Display Selection
4 Port Selection	8 Control Tools

- 1. Use the main icons to switch into each screen.
- 2. Allows you to enable or disable the remote control signal receiving function of the display unit.
- Set the Safety Lock function.
 When setting the Lock function, you can only operate power and lock buttons on the remote control and set.
- 4. The setting for the PC Serial Port can change. The original value is COM1.
- 5. Click Select all or Clear to select or clear all displays.
- 6. Use Grid to view brief information on selected display.
- 7. Select a display from Display Selection.
- 8. Use Control Tools to control displays.
 - <Note> The remote control Enable/Disable function operates whether or not the power is On/Off, and this applies to all displays connected to the MDC. However, regardless of the status at the time the MDC is shut down, the remote control signal receiving function of all displays is initialized to Enable when the MDC is closed.

Port Selection

📑 Multiple Display Cor		1163							
File Remocon	Safe	ety Lo		Port Selectio	n Help	-			SAMSUNG DIGITAD
	S	elect	All	COM2	i 💿 E	Busy			
				COM3					
Power Control	V	ID	6	COM4	Image S	Size (On Timer	Off Timer	
		0	0	PC	16:5	,	0	0 -	Power On Power Off
Input Source								_	
	H					\dashv			
			$\left \right $			\rightarrow			Volume 10
Image Size	님								
\odot								•	
Time					_				
	ID		Lamp	Temp.Status	B/R Senser	Fan	_	ntTemp.	
PIP	0	0	0	0	0	1	4	· -	
PIP									
NO									
Settings									
								-	
Maintenance	_								
maintenance									
l									

- 1. The Multiple Display Control is originally set to COM1.
- 2. If any port other than COM1 is used, COM1 through COM4 can be selected in the Port Selection Menu.
- 3. If the exact port name that is connected to the LCD Display using a serial cable is not selected, communication will be unavailable.
- 4. The selected port is stored in the program and used for the next program as well.



1. Click Power Control of the main icons and the Power Control screen appears.

Multiple Display Co File Remocon		ty Lo	ock i	Port Selectio	n Help					
Power Control		dect	All	Clear Al	e 😔	Busy				
	Ø	ID	Ö	Input	Image S	_	On Timer Off Timer	O Power	On	Power Off
and the second s		0	0	PC	16:9	3	0 0-			
Input Source		_	1)-2-	-3	_6	4 5			
<u> </u>			\mathbf{P}					Volume	10 🛫	
Image Size										
\bigcirc							-			
Time										
	ID 0	0	Lamp	Temp.Status	B/RSenser 0	Fan	CurrentTemp.			
PIP	0	-	U	U	0	1	49			
		_								
NO CO		_								
Settings		_								
							•			
Maintenance										
ĺ										\cdot
										$\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{\mathbf{$

✤ Info Grid shows some basic information necessary to Power Control.

- 1) 也 (Power Status)
- 2) Input
- 3) Image Size
- 4) On Timer
- 5) Off Timer

2. Use the Select All button or Check Box to choose a display to control.

	Se	lect	All	Clear All	i o e	Busy			
Power Control	V	ID	1	Input	Image S	Size C	On Timer Off 1		
		0	0	PC	16:9)	0 (Power On Power Off
Input Source									
								2	Volume 10 -
Image Size									
					_				3
Time	ID	Ü	Lamp	Temp.Status	B/RSenser	Fan	CurrentTe	mp.	
	0	0	0	0	0	1	49	-	
PIP									
200									
Settings									
						_			
Maintenance	-								

★ I Power Control allows controlling some of the functions of the selected display.

- 1) Power On/Off
 - Turns the power of the selected display On/Off.
- 2) Volume

Controls the volume level of the selected display.
 It receives the volume value of the selected display from the sets and displays it in the slider.
 (When you cancel the selection or choose Select All, the value returns to the default value 10)

- 3) 🕥 (Mute On/Off)
 - Turns on/off the Mute function of the selected display.
 When selecting one set at a time, turn on the Mute function for the selected set.
 The Mute function is disabled automatically when you adjust the volume level.
 (The values return to the default settings when you undo the selections or choose "Select All".)
- ***** The Power Control feature is available for all displays.

🜟 The Volume Control and Mute features are available only for the displays whose power status is ON.



- 1. Click Input Source of the main icons and the Input Source control screen appears. Click Select All or use Check Box to select a display to control.
- TV Mode

Multiple Display Co File Remocon	Safety Lock Port Selection Help SAMSUNG DO SAMSUNG DO SALECTAIL Clear All Clear All Busy	ierr
Power Control	ID IN Input ID Input Choose Input Source	
Image Size	1 PC AV 6 2 BNC S-Video 7	
Time	3 DVI Component 4 TV Magistantif 9	
PIP	5 DTV HDMI Channel	
Maintenance		

• PC Mode

Multiple Display Con File Remocon	Safety Lock Port Selection Help SAMSUNG DIGITAR
Power Control	Select All Clear All 38 Busy
	ID Input ID ID ID Input ID Input
Input Source	
Image Size	
Time	4 TV & & & & & & & & & & & & & & & & & &
PIP	
10	
Settings	
Maintenance	
ſ	

- * Info Grid shows some basic information necessary to Input Source Control.
- 1) PC

- Changes the Input Source of the selected display to PC.

2) BNC

- Changes the Input Source of the selected display to BNC.

3) DVI

- Changes the Input Source of the selected display to DVI.

4) TV

- Changes the Input Source of the selected display to TV.

- 5) DTV
 - Changes the Input Source of the selected display to DTV.
- 6) AV

- Changes the Input Source of the selected display to AV.

7) S-Video

- Changes the Input Source of the selected display to S-Video.

- 8) Component
 - Changes the Input Source of the selected display to Component.
- 9) MagicInfo

- The Input source of MagicInfo works only on MagicInfo model.

- 10) HDMI
 - Changes the Input Source of the selected display to HDMI.
- 11) Channel
 - Channel arrow appears when the Input Source is TV.
- TV Source can be selected only in products with TV and controlling channels is allowed only when Input Source is TV.

***** The Input Source Control feature is available only for the displays whose power status is ON.



PC, BNC, DVI

1. Click Image Size of the main icons and the Image Size control screen appears.

👼 Multiple Display Co			<u> </u>			
File Remocon	Safe	ty Loo	k F	Port Selection Help		SAMSUNG DIGITAD
Power Control Input Source					Busy PC 3	PC Source PC, BNC, DVI 16 : 9 4 : 3
Maintenance						

- * Info Grid shows some basic information necessary to Image Size Control.
- 1) 🚺 (Power Status)
 - Shows the power status of the current display.
- 2) Image Size
 - Shows the current Image Size of the display in use.
- 3) Input
 - Info Grid displays only the displays whose Input Source is PC, BNC, DVI.
- 4) PC Source
 - When you click Image Size, the PC Source tab first appear.
 - The Image Size Control button controls Image Size available for PC, BNC, DVI.
- 5) Video Source
 - Click the Video Source tab to control Image Size for respective Input Source.
- ***** The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- * Image Size Control is available only for the displays for which power status is ON.



TV, AV, S-Video, Component, DVI (HDCP), HDMI, DTV

1. Click Image Size of the main icons and the Image Size control screen appears.

Multiple Display Co File Remocon		ty Loo	ck F	Port Selection H	elp				SAMSUNG DIGIT.
Power Control	Se	lect /	MI	Clear All	😣 Busy				<u> </u>
PowerColluor		ID	0	Image Size		Input		PC Source	Video Source
	2	0	•	16:9		AV	4	TV,AV,S-Video,Com	ponent,HDMI,DTV
Input Source								r Image Size ———	
						2		Auto Wide	16:9
Image Size					_		_ 1	Wide Zoom	Zoom
9							- 1	Zoom 1	Zoom 2
Time								4:3	Screen Fit
PIP					-			Wide Fit	
NO.								- Screen Mode 16 : 9	Wide Zoom
Settings					_			Zoom	4:3
Maintenance									

* Info Grid shows some basic information necessary to Image Size Control.

- 1) Click the Video Source tab to adjust Image Size for TV, AV, S-Video, Component, DVI(HDCP), HDMI, DTV. Click Select All or use Check Box to select a display to control.
- 2) Info Grid displays only the display having TV, AV, S-Video, Component or DVI(HDCP) as input source.
- 3) Switch Image Size of the selected display randomly.

Note: Auto Wide, Zoom1 and Zoom2 are not available for selection when the input signal type for Component and DVI (HDCP) is 720p or 1080i.

(The Auto Wide mode is available only for TV, AV, and S-Video.)

- 4) The screen modes can only be adjusted when a TV (PAL only) is connected and the Image Size item is set to Auto Wide.
- * The Input source of MagicInfo works only on MagicInfo model.
- The Input source of TV works only on TV model.
- 🜟 The Image Size Control feature is available only for the displays whose power status is ON.



1. Click Time of the main icons and the Time Control screen appears.

📑 Multiple Display C	A STATE OF A	_ ×
File Remocon	Safety Lock Port Selection Help	SAMSUNG DIGITALD
Power Control Power Control Input Source Image Size Image Size Image Size Image Size Image Size Image Size Image Size	Select All Clear All Busy ID ID In Time Off Time ID ID In Time In Time I	Current Time 1 05:23 Apply On Time Setup 1 00 AM Off Hour Minute AMPM Status PC 10 Source Volume Apply Off Time Setup 1 00 AM Off Apply Off Time Setup 1 00 AM Off Apply Off Time Setup 1 00 AM Off Apply

- * Info Grid shows some basic information necessary to Time Control.
- 1) Current Time
 - Set the current time for the selected display (PC Time).
 - To change the current time, first change the PC Time.
- 2) On Time Setup
 - Set the Hour, Minute, AM/PM of On Time Setup, Status, Source, Volume of the selected display.
- 3) Off Time Setup
 - Set the Hour, Minute, and AM/PM, Status for Off Time Setup of the selected display.
- 4) Shows the On Time settings.
- 5) Shows the Off Time settings.
- ***** The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- ***** Time Control is available only for the displays for which the power status is ON.
- ***** At On Time Setup, TV Source functions only for TV Model.
- * At On Time Setup, MagicInfo Source functions only for MagicInfo Model.



PIP Size

1. Click PIP of the main icons and the PIP control screen appears. Click Select All or use Check Box to select a display to control.

📑 Multiple Display Co							×
File Remocon	Safe	ty Loo	sk F	Port Selection Help	,		SAMSUNG DIGITAD
	Se	lect /	XII	Clear All 😔	Busy	_	
Power Control		ID		PIP Size	PIP Source	PIP Size	PIP Source
		0	•	Double 1	AV -	- -	
Input Source							All Inputs
Image Size						(2)	OFF
0						3	Large
Time							
						4	Small
PIP						5	Double 1
NO						6	Double 2
Settings						- 7	Double 3
Maintenance							

- * Info Grid shows some basic information necessary to PIP Size Control.
- 1) PIP Size
 - Shows the current PIP Size of the display in use.
- 2) OFF
 - Turns off the PIP of the selected display.
- 3) Large
 - Turns on the PIP of the selected display and changes the size to Large.
- 4) Small
 - Turns on the PIP of the selected display and changes the size to Small.
- 5) Double 1

- Turns on the PIP of the selected display and changes the size to Double 1. 6) Double 2

- Turns on the PIP of the selected display and changes the size to Double 2. 7) Double 3 (Picture By Picture)
 - Turns on the PBP of the selected display and changes the size to Double 3.
- The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- ***** PIP Size can be controlled with turning on the LCD Display power.



PIP Source

1. Click PIP of the main icons and the PIP control screen appears.

🐻 Multiple Display Co							_OX
File Remocon	Safe	ty Loo	sk F	Port Selection Help			SAMSUNG DIGITAL
Power Control	Se	lect /	MI	Clear All 🥌	Busy		
		ID		PIP Size	PIP Source	PIP Size	PIP Source (1)
and the second s		0	•	Double 1	S-Video 📥		Ŭ
Input Source						AILI	nputs
Image Size						2 рс	AV 5
9						3 BNC	S-Video 6
Time PIP							Component 7 HDMI 8
Settings							-
Maintenance					<u> </u>		

* Info Grid shows some basic information necessary to PIP Source Control.

- 1) PIP Source
 - PIP Source can be controlled with turning on the LCD Display power.
- 2) PC
 - Changes the source of the PIP of the selected display to PC.
- 3) BNC
 - Changes the source of the PIP of the selected display to BNC.
- 4) DVI
 - Changes the source of the PIP of the selected display to DVI.
- 5) AV
 - Changes the source of the PIP of the selected display to AV.
- 6) S-Video
 - Changes the source of the PIP of the selected display to S-Video.
- 7) Component
 - Changes the source of the PIP of the selected display to Component.
- 8) HDMI
 - Changes the source of the PIP of the selected display to HDMI.
 - Note: Some of the PIP Sources may not be available for selection, depending on the input source type of the Main Screen.
- ★ The Input source of MagicInfo works only on MagicInfo model.
- The PIP Control feature is available only for the displays whose power status is ON and the PIP function is set to ON.



Picture

1. Click Settings of the main icons and the Settings Control screen appears.

Multiple Display Co File Remocon		k P	ort Selection Help	
	Select /		Clear All 💿 Busy	
Power Control		0	Input	Picture PC Audio Image Lock
	0	•	AV	TV,AV,S-Video,Component,HDMI,DTV
Input Source				Contrast 67
Image Size				Brightness 68
9				
Time				6 Tint G50 R50
PIP				Color Tone Off Cool Normal Warm
N.O				8 Color Temp 10000K
Settings				Brightness Sensor ON OFF 9
Maintenance				Dynamic Contrast

* Info Grid shows some basic information necessary to Settings Control.

When each function is selected, the set value of the selected function is displayed in the slide. When selected, each function fetches the value for the set and displays it on the slide bar. When "Select All" is chosen, the default value is displayed. Changing a value in this screen will automatically change the mode to "CUSTOM."

- 1) Picture
 - Available only for TV, AV, S-Video, Component, HDMI, DTV.
- 2) Contrast
 - Adjusts Contrast of the selected display.
- 3) Brightness
 - Adjusts Brightness of the selected display.
- 4) Sharpness
 - Adjusts Sharpness of the selected display.
- 5) Color
 - Adjusts Color of the selected display.
- 6) Tint
 - Adjusts Tint of the selected display.
 - Available only for NT.
- 7) Color Tone

- Adjusts the Color Tone for the selected display.
- 8) Color Temp
 - Adjusts the Color Temp for the selected display.
- 9) Brightness Sensor
 - Adjusts the Brightness Sensor for the selected display.
- 10) Dynamic Contrast
 - Adjusts the Dynamic Contrast for the selected display.
- ***** The Input source of MagicInfo works only on MagicInfo model.
- * Color Temp is only enabled if the Color Tone is set to Off.
- ***** The Input source of TV works only on TV model.
- This feature is available only for the displays whose power status is ON and if no selection is made, the factory default is displayed.



Picture PC

1. Click Settings of the main icons and the Settings Control screen appears.

💽 Multiple Display Co	ontrol			
File Remocon	Safety Lock	Port Selection Help		SAMSUNG DIGITAD
	Select All	Clear All 🛛 😣 Busy		
Power Control	🗹 ID 🔯	Input	Picture PC Audio	
		ri gran	Picture PC Audio PC, BNC, DVI	Image Lock
Input Source		(2 Contrast 56	
			Brightness 50	<u> </u>
Image Size			4 Red 100	
\odot			Green 100	
Time			6 Blue 100	
		\	Color Tone Ott Normal	Custon
PIP			_	$\overline{\mathbf{v}}$
1 D			8 Color Temp 10000K	
Settings			Brightness Sensor	OFF 9
			Dynamic Contrast	OFF
Maintenance				
				(!)

- Info Grid shows some basic information necessary to Settings Control. When each function is selected, the set value of the selected function is displayed in the slide. When selected, each function fetches the value for the set and displays it on the slide bar. When "Select All" is chosen, the default value is displayed. Changing a value in this screen will automatically change the mode to "CUSTOM."
- 1) Picture PC
 - Available only for PC, BNC, DVI.

- 2) Contrast
 - Adjusts Contrast of the selected display.
- 3) Brightness
 - Adjusts Brightness for the selected display.
- 4) Red
 - Adjusts red Color of the selected display.
 - Available only for NT.
- 5) Green
 - Adjusts green Color of the selected display.
 - Available only for NT.
- 6) Blue
 - Adjusts blue Color of the selected display.
 - Available only for NT.
- 7) Color Tone
 - Adjusts the Color Tone for the selected display.
- 8) Color Temp
 - Adjusts the Color Temp for the selected display.
- 9) Brightness Sensor
 - Adjusts the Brightness Sensor for the selected display.
- 10) Dynamic Contrast
 - Adjusts the Dynamic Contrast for the selected display.
- * The Input source of MagicInfo works only on MagicInfo model.
- * The Input source of TV works only on TV model.
- * Color Temp is only enabled if the Color Tone is set to Off.
- This feature is available only for the displays whose power status is ON and if no selection is made, the factory default is displayed.



Audio

1. Click Settings of the main icons and the Settings Control screen appears.

Multiple Display Co File Remocon	ntrol Safety Lock Port Selection Help SAMSUNG DIGITARY
Power Control	Select All Clear All O Busy
Fower Collupt	D D Input Picture Picture PC Audio Image Lock
Input Source	All Inputs
30	
Image Size	2 Bass 60
	3 Treble 50
Θ_{-}	
Time	4 Balance L50 - R50
PIP	
N SI	5 srs ts xt ON OFF
Settions	
Settings	5 Sound Select Main Sub
Maintenance	
Í	
	(J)

- Info Grid shows some basic information necessary to Settings Control. When each function is selected, the set value of the selected function is displayed in the slide. When selected, each function fetches the value for the set and displays it on the slide bar. When "Select All" is chosen, the default value is displayed. Changing a value in this screen will automatically change the mode to "CUSTOM."
- 1) Audio


- Controls audio settings for all input sources.

- 2) Bass
 - Adjusts Bass of the selected display.
- 3) Treble
 - Adjusts Treble of the selected display.
- 4) Balance
 - Adjusts Balance of the selected display.
- 5) SRS TS XT
 - SRS TS XT Sound ON/OFF of the selected display.
- 6) Sound Select
 - Select either Main or Sub when PIP is On.
- ***** The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- This feature is available only for the displays whose power status is ON and if no selection is made, the factory default is displayed.



Image Lock

1. Click Settings of the main icons and the Settings Control screen appears.

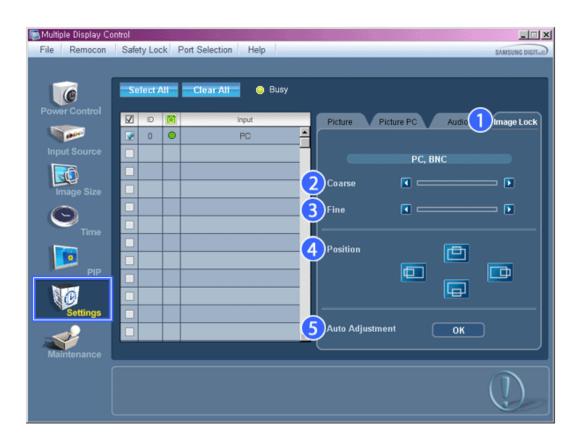

- * Info Grid shows some basic information necessary to Settings Control.
- 1) Image Lock
 - Available only for PC, BNC.
- 2) Coarse
 - Adjusts Coarse of the selected display.
- 3) Fine
 - Adjusts Fine of the selected display.
- 4) Position
 - Adjusts Position of the selected display.
- 5) Auto Adjustment
 - Self-Adjust to the incoming PC signal.
- * The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- * Settings Control is available only for the displays for which the power status is ON.



Lamp Control

1. Click on the "Maintenance" icon in the Main Icon column to display the Maintenance screen.

Multiple Display Con File Remocon		ty Loo	ck F	Port Selection	Hel	p		
C	Se	lect /	MI	Clear All	•	Busy		
Power Control		ID		Max Statu	s	Min Status		Lamp Control Scroll Video Wall
	2	0	•	05:04 PM	60	03:02 AM	80 🔺	
Input Source							-	Auto Lamp Control
Image Size								Max. 1 💙 00 💟 AM 💟 50 💙
								Hour Minute AM.PM Value
\mathbf{S}								Min. 1 💟 00 💟 AM 💟 50 💟
Time								
								Apply
PIP	H							
	H							- 🔁 Manual Lamp Control — 👘
Settings_	H							
								50
							×	
Maintenance								
								(

* An "Info Grid" showing several basic data items appears.

- 1) Maintenance
 - Allows the Maintenance Control function for all input sources.
- 2) Auto Lamp Control
 - Automatically adjusts the backlight of the selected display at a specified time. The Manual Lamp Control automatically turns off if you adjust using the Auto Lamp Control.
- 3) Manual Lamp Control
 - Allows you to adjust the backlight of the selected display regardless of the time. The Auto Lamp Control automatically turns off if you adjust using the Manual Lamp Control.
- ***** The Maintenance Control feature is available only for the displays whose power status is ON.
- * The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.



Scroll

1. Click on the "Maintenance" icon in the Main Icon column to display the Maintenance screen.


	Se	lect <i>i</i>	XII	Clear All	🥚 Idle			
ower Control		ID		Interval	Second	Туре	Lamp Control Scroll Video	Wal
							A [
Input Source							Pixel Shift	
							Off 🔽 0 💟 0	~
Image Size							Time Horizontal Dot Vertical	Lin
Θ							Safety Screen	
							Off 🔽 Off 💟 Scroll	~
	H							Туро
PIP	-						3 Дара	
	닅	_					Safety Screen2	
V								
Settings							Type Apply	-
~							<u>·(4)</u>	
Maintenance							\checkmark	

- 1) Scroll
 - This function is used to remove the afterimages that occur when a still screen is displayed on the selected display
 - for a long time.
- 2) Pixel Shift
 - This allows the screen to be moved finely at the specified time interval.
- 3) Safety Screen
 - The Safety Screen function is used to prevent afterimages from occurring when a still screen is displayed on the monitor for a long time. The Interval item is used to set the repetition cycle in hour units and the Time item is used to set the time when the Safety Screen function must be performed. The Type item can be set to Scroll, Pixel, Bar, Eraser, All White, or Pattern.
- 4) Safety Screen2
 - This function is used to prevent afterimages from occurring. There are five (5) types that you can select and control with this function.
- For the Scroll type, the Time item can be set to 1, 2, 3, 4 or 5. For the Bar and Eraser types, it can be set to 10, 20, 30, 40 or 50. For the All White and Pattern type, it can be set to 1, 5, 10, 20 or 30.
- * The Input source of MagicInfo works only on MagicInfo model.
- ***** The Input source of TV works only on TV model.
- ***** The Maintenance Control feature is available only for the displays whose power status is ON.



Video Wall

1. Click on the "Maintenance" icon in the Main Icon column to display the Maintenance screen.

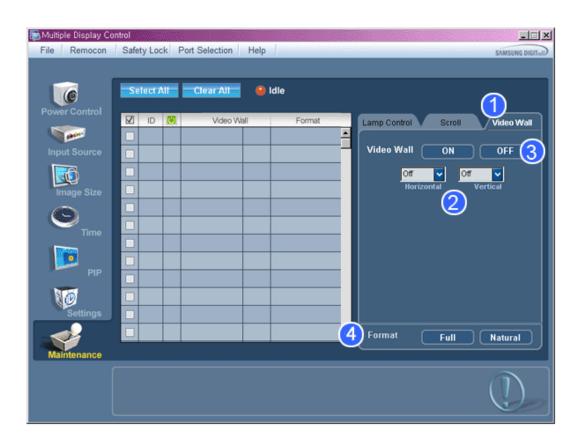

1) Video Wall


- A Video Wall is a set of video screens that are connected together, so that each screen shows a part of the whole picture or so that the same picture is repeated on each screen.

2) Video Wall (Screen divider)

- The screen can be divided into.
- You can select a number of screens with a different layout when dividing.
- Select a mode from Screen divider.
- Select a display from Display Selection.
- The place will be set up by pressing a number in the selected mode.
- The MDC program supplied by Samsung supports up to 5x5 LCD Displayes.
- 3) On / Off
 - Turns on/off the Video Wall function of the selected display.
- 4) Format
 - The format can be selected to see a divided screen.



Natural

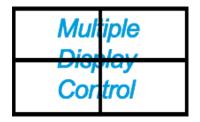

- You may not operate this function in MagicInfo.
- * The Input source of TV works only on TV model.
- \star The Maintenance Control function is available only for the displays where the power status is ON.

Troubleshooting

- 1. The display you wish to control does not appear on the Power Control Info Grid
 - Check the connection of RS232C. (Check if it is properly connected to the Com1 port)
 - Check the displays to see if any of the other displays connected have the same ID. If more than one displays have the same ID, those displays are not properly detected by the program due to data conflict.
 - Check if the Display Set ID is a number between 0 and 25. (Adjust using the Display menu)

Note: A Display Set ID must be a value between 0 and 25 .

- 2. The display you wish to control does not appear on the other Control Info Grids
 - Check to see if the display power is ON. (You can check this in Power Control Info Grid)
 - Check if you can change the input source of the display.
- 3. The dialogue box appears repeatedly.
 - Check to see if the display you wish to control is selected.
- 4. Both On Timer and Off Timer have been set but different time is showing.
 Apply current time to synchronize the display clocks.
- 5. The remote may not function properly when you turn off the remote Function, disconnect the RS-232C cable, or exit the program in an Irregular manner. Rerun the program and turn the remote function again to Restore normal functions.
 - <Note> This program may malfunction due to problems in communication circuits or interference from electronic appliances nearby.

📅 Notice	×
Please make selection in the information grid before controlling.	example ID ID ID ID

Settings Value Display In Multiple Display Mode

 \star When there are more than one displays connected, the settings values are displayed as follows.

1. No selection: Displays the Factory Default Value.

- 2. Selected one display: Fetches and displays the settings value for the selected display.
- 3. Selected one display (ID1) and add another display (ID3): The program, which was displaying the settings value of ID 1, fetches and displays the value of ID3.
- 4. Selected all sets using Select All: Returns to the Factory Default Value.

Copyright© 2003-2009 Samsung Electronics Co. Ltd. All rights reserved.

Adjusting the LCD Display

Input

Available Modes

- 📔 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

Source List PACHM

 $\mathsf{MENU} \to \mathsf{ENTER} \to [\mathbf{Input}] \to \mathsf{ENTER} \to [\mathbf{Source\ List}]$

		Source L	ist
* • • •	PC DVI AV Component HDMI MagicInfo		
	Move	🔁 Enter	🕤 Return

$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Use to select **PC**, **DVI** or other external input sources connected to the LCD Display. Use to select the screen of your choice.

- 1. **PC**
- 2. **DVI**
- 3. **AV**
- 4. Component
- 5. **HDMI**
- 6. MagicInfo


PIPPACH

Ø Note

Available Modes: PIP ON

When external AV devices such as VCRs or DVDs are connected to the LCD Display , **PIP** allows you to watch video from those devices in a small window super-imposed on the PC Video signal. (**Off/On**)

 $\mathsf{MENU} \to \mathsf{ENTER} \to [\mathbf{Input}] \to \mathbf{v} \to \mathsf{ENTER} \to \textbf{IIII}$

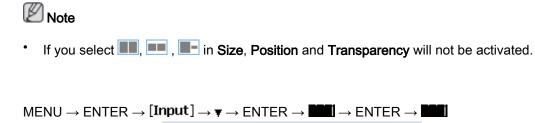



$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Turns the **PIP** Screen **Off/On**.

- Off
- On

Source

PIP



$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Selects the input source for the PIP.

- PC : DVI / AV / HDMI
- DVI / AV : PC
- Component : PC
- HDMI : PC

Swap

 $\mathsf{MENU} \to \mathsf{ENTER} \to [\mathbf{Input}] \to \mathbf{v} \to \mathsf{ENTER} \to \mathbf{V} \to \mathbf{v} \to \mathsf{ENTER} \to \mathbf{V} \to$

_		PIP	
 <	PIP Source Swap Size Position Transparency	: On : DVI : : : Medium	*
	Move	🕑 Enter 🏷 Retu	um

Swaps the contents of the PIP and main image.


The image in the PIP window will appear on the main screen, and the main screen image will appear in the PIP window.

Size

\rightarrow **i** , **y** \rightarrow ENTER

Changes the Size of the PIP window.

Position

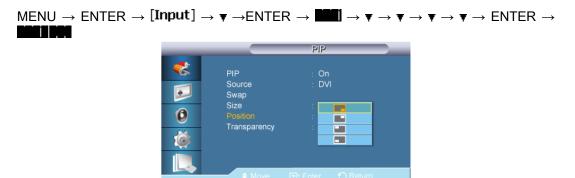

\rightarrow **A** , **V** \rightarrow ENTER

Changes the Position of the PIP window.

Transparency

$$\mathsf{MENU} \to \mathsf{ENTER} \to [\mathbf{Input}] \to \mathbf{v} \to \mathsf{ENTER} \to \mathbf{V} \to \mathbf{v}$$

		PIP
22 20 20 20 20 20 20 20 20 20 20 20 20 2	PIP Source Swap Size Position Transparency	: On : DVI : High : Medium Low Opaque
	Move	🕒 Enter 🕤 Return

\rightarrow **A** , **V** \rightarrow ENTER

Adjusts the Transparency of PIP windows.

- High
- Medium
- Low
- Opaque

🖉 Note

- **PIP** turns off when the LCD Display is switched to an external source.
- For PC and DVI, this is deactivated if the cable is disconnected.

Edit Name PACHM

 $\mathsf{MENU} \to \mathsf{ENTER} \to [\mathsf{Input}] \to \mathsf{ENTER} \to \blacktriangledown \to \blacktriangledown \to [\mathsf{Edit} \ \mathsf{Name}]$

_		Edit Nam	le	-
	PC	·		
	DVI			
	AV Component			
0	HDMI			•
Ó				
	Move			

 $\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Name the input device connected to the input jacks to make your input source selection easier.

VCR / DVD / Cable STB / HD STB / Satellite STB / AV Receiver / DVD Receiver / Game / Camcorder / DVD Combo / DHR / PC / DVI Device

- The displayed devices differ depending on the external input mode.
- When connecting a PC to the HDMI or DVI terminal, set Edit Name to PC. In other cases, set Edit Name to AV. However, since 640x480, 720P (1280x720), and 1080p (1920x1080) are common signals for AV and PC, make sure to set the Edit Name in accordance with the input signal.
- The Picture menu changes depending on the input signal and Edit Name.

Picture [PC / DVI / MagicInfo Mode]

Available Modes

- PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

MagicBright PM

$MENU \to \P \to ENTER \to$	[Pictur	e] → ENTER ·	→ [MagicBright] Picture
	** •• •• •• ••	MagicBright Custom Color Tone Color Control Color Temp Image Loock Auto Adjustment ▼ More	: Efferien

$\rightarrow \blacktriangle$, $\checkmark \rightarrow \mathsf{ENTER}$

MagicBright is a feature providing the optimum viewing environment depending on the contents of the image you are watching. Currently four different modes are available: Entertain, Internet, Text and Custom. Each mode has its own pre-configured brightness value.

(Not available when Dynamic Contrast is set to On.)

1. Entertain

High brightness

For watching motion pictures such as from a DVD or VCR.

2. Internet

Medium brightness

For working with a mixture of images such as texts and graphics.

3. Text

Normal brightness

For documents or works involving heavy text.

4. Custom

Although the values are carefully chosen by our engineers, the pre-configured values may not be comfortable to your eyes depending on your taste.

If this is the case, adjust the brightness and contrast by using the OSD menu.

Custom PM

By using the on-screen menus, the contrast and brightness can be changed to your personal preference.

 $\mathsf{MENU} \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Custom}]$

(Not available when **Dynamic Contrast** is set to **On**.)

By adjusting the picture using the Custom function, MagicBright will change to Custom mode.

Contrast

```
MENU \rightarrow \forall \rightarrow ENTER \rightarrow [Picture] \rightarrow \forall \rightarrow ENTER \rightarrow [Custom] \rightarrow ENTER \rightarrow [Contrast]
```

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Adjusts the Contrast.

Brightness

```
\begin{array}{l} \mathsf{MENU} \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Custom}] \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Brightness}] \end{array}
```



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Adjusts the Brightness.

Sharpness


```
\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Custom}] \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Sharpness}] \end{array}
```

Sharpness _____ (

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Adjusts the Sharpness.

Color Tone **PM**

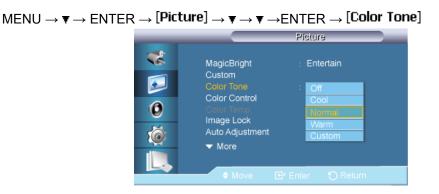

 \rightarrow **A** , **V** \rightarrow ENTER

The color tones can be changed.

(Not available when Dynamic Contrast is set to On.)

- 1. **Off**
- 2. **Cool**
- 3. Normal
- 4. Warm
- 5. Custom

Note 🖉

If you set the Color Tone to Cool, Normal, Warm, or Custom, the Color Temp. function is disabled.

If you set the Color Tone to Off, the Color Control function is disabled

Color Control PM

Adjusts individual Red, Green, Blue color balance.

```
\mathsf{MENU} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathsf{Color}\ \mathsf{Control}]
```

(Not available when **Dynamic Contrast** is set to **On**.)

If you adjust the picture by using the **Color Control** function, **Color Tone** will turn to the **Custom** mode.

Red

 $\begin{array}{l} \mathsf{MENU} \rightarrow \blacktriangledown \rightarrow \mathsf{ENTER} \rightarrow [\textbf{Picture}] \rightarrow \blacktriangledown \rightarrow \blacktriangledown \rightarrow \blacktriangledown \rightarrow \blacksquare \rightarrow \mathsf{ENTER} \rightarrow [\textbf{Color Control}] \rightarrow \mathsf{ENTER} \rightarrow [\textbf{Red}] \end{array}$



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Green

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Picture}] \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Color Control}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Green}] \end{array}$



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Blue

 $\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Color}\ \mathsf{Control}] \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Blue}] \end{array}$



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Color Temp. PM

 $MENU \rightarrow \forall \rightarrow ENTER \rightarrow [Picture] \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow ENTER \rightarrow [Color Temp.]$

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Color Temp. is a measure of the 'warmth' of the image colors.

(Not available when **Dynamic Contrast** is set to **On**.)

This function is only enabled if the Color Tone is set to Off.

Image Lock 📔

Image Lock is used to fine-tune and get the best image by removing noise that creates unstable images with jitters and shakiness. If satisfactory results are not obtained using the Fine adjustment, use the Coarse adjustment and then use Fine again.

(Available in **PC** mode only)

 $\mathsf{MENU} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{ENTER} \to [\mathsf{Image \ Lock}]$

Coarse

 $\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacksquare \to \mathsf{ENTER} \to [\mathsf{Image \ Lock}] \to \mathsf{ENTER} \to [\mathsf{Coarse}] \end{array}$



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Removes noise such as vertical stripes. Coarse adjustment may move the screen image area. You may relocate it to the center using the horizontal control menu.

Fine

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Image Lock}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Fine}] \end{array}$



 $\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Removes noise such as horizontal stripes. If the noise persists even after Fine tuning, repeat it after adjusting the frequency (clock speed).

Position

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Image \ Lock}] \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow \mathsf{Image \ Lock}] \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow \mathsf{Image \ Lock}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow \mathsf{Image \ Lock}] \rightarrow \mathsf{V} \rightarrow \mathsf{V$

	Position
*	
	Ê
0	
Ó	L L L L L L L L L L L L L L L L L L L
	🗢 Move 🏷 Return

\rightarrow **i** , **v** , **4** , **b** \rightarrow ENTER

Adjusts the screen location horizontally and vertically.

Auto Adjustment 🕑

MENU - V - ENTER	\rightarrow	[Picture]	\rightarrow \mathbf{V} \rightarrow	▼ → ▼	\rightarrow T	→ ▼ →	▼ →	ENTER	. →
	(1	Auto Adjusi Please v						

The values of **Fine**, **Coarse**, **Position** are adjusted automatically. By changing the resolution in the control panel, the auto function is performed.

(Available in PC mode only)

Signal Balance 📔

This is used to make up for the weak RGB signal transmitted by a long signal cable.

(Available in **PC** mode only)

(Not available when Dynamic Contrast is set to On.)

Signal Balance

		Signal Balance
*	Signal Balance	: Off
		On
0		
Ó		
	¢ Move	Erter 🕤 Return

 
 \rightarrow **A** , **Y** \rightarrow ENTER

Selects either On or Off with the .

Signal Control

1. R-Gain



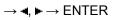

2. G-Gain



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

3. **B-Gain**

<u>*</u>	_	
B-Gain		 50

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

4. R-Offset

R-Offset 50

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

5. G-Offset

 \rightarrow 4, \blacktriangleright \rightarrow ENTER

6. B-Offset



\rightarrow 4, \blacktriangleright \rightarrow ENTER

Size P

$MENU \to \mathbf{v} \to ENTER \to [Picture] \to \mathbf{v} \to$	$R \rightarrow$
Picture	
 ▲ More Sigal Balance Size HDMI Black Level A:3 PIP Picture Dynamic Contrast :: Off Lamp Control :: 100 Brightness Sensor :: Off ♦ Move Enter Return 	

\rightarrow **A** , **Y** \rightarrow ENTER

The **Size** can be switched.

- 1. **16:9**
- 2. **4:3**

HDMI Black Level P



$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

When watching with a DVD or set-top box connecting to the product via HDMI or DVI, image quality deterioration (black level, lower-quality contrast, lighter color tone, etc.) may occur depending on the connected external device.

- 1. Normal
- 2. Low

🖉 Note

• For Timing which can be used for both the PC and the DTV in **DVI**, **HDMI** mode, **HDMI Black Level** will be activated.

PIP Picture

```
\mathsf{MENU} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \mathbf{v} \to
```

 
 \rightarrow **A** , **V** \rightarrow ENTER

Adjusts the PIP Screen Settings.

Note


- Available Modes: PIP ON
- 1. Contrast



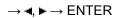

Adjusts the Contrast of the PIP window on the screen.

 2. Brightness

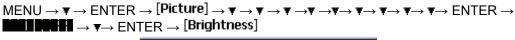



\rightarrow 4, \blacktriangleright \rightarrow ENTER

Adjusts the Brightness of the PIP window on the screen.

3. Sharpness





```
\rightarrow 4, \blacktriangleright \rightarrow ENTER
```

Adjusts the Sharpness of the PIP window on the screen.

4. Color



```
\rightarrow 4, \blacktriangleright \rightarrow ENTER
```

Adjusts the Color of the PIP window on the screen.

🖉 Note

Enabled only when the **PIP** input is selected in **AV**, **HDMI** or **Component** mode.

5. **Tint**

•			
•			

$\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow ENTER$

Adds a natural tone to the PIP window.

Note

Enabled only when the PIP input is selected in AV, HDMI or Component mode. Operates only if the video signal is NTSC.

Dynamic Contrast PM

	Picture	
▲ More Sigal Balance Size HDMI Black Level PIP Picture Dynamic Contrast Lamp Control Brightness Sensor	: 16:9 : Normal : On : Off Enter O Return	

→ 🛓 , 🔻 —> ENTER

Dynamic Contrast automatically detects the distribution of the visual signal and adjusts to create an optimum contrast.

- Off 1.
- 2. On

Lamp Control PACHM

$\begin{array}{l} MENU \to \blacktriangledown \to ENTER \to \\ \to [Lamp \ Control] \end{array}$	$[\text{Picture}] \to \mathbf{v} \to$	ightarrow $ ightarrow$ $ ig$

 $\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow ENTER$

Adjusts the inverter lamp in order to reduce energy consumption.

Ø Note

This function does not operate when Dynamic Contrast is set to On in PC, DVI, AV, HDMI, Component or MagicInfo modes.

Brightness Sensor PM

$\begin{array}{c} MENU \to \blacktriangledown \to ENTER \\ ENTER \to \blacksquare $		\rightarrow V \rightarrow V \rightarrow	▼ →▼ →▼-	→ ♥→	$\Psi ightarrow \Psi ightarrow $	→
		Brightness Sen	sor			
	-					
		Off	On			
	Move	🕒 Enter	🖯 Retu	rn		

 \rightarrow **A** , **V** \rightarrow ENTER

Brightness Sensor automatically detects distribution of the inputted visual signal and adjusts to create optimum brightness.

- 1. **Off**
- 2. **On**

Picture [AV / HDMI / Component Mode]

Available Modes

- 🕑 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

Mode 🔼 🗄 🖸

```
\mathsf{MENU} \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Mode}]
```

Picture			
*	Mode : Dynamic		
	Custom Standard		
	Color Tone : Movie		
6	Color Temp. Custom		
V			
á	Digital NR : On		
- <u>-</u>			
	▼ More		
	🗢 Move 🕞 Enter 🏷 Return		

\rightarrow **i** , **v** \rightarrow ENTER

The LCD Display has four automatic picture settings ("**Dynamic**", "**Standard**", "**Movie**" and "**Custom**") that are preset at the factory.

Dynamic, Standard, Movie, or Custom can be activated.

(Not available when Dynamic Contrast is set to On.)

- 1. Dynamic
- 2. Standard
- 3. Movie
- 4. Custom

Custom AHC

By using the on-screen menus, the contrast and brightness can be changed to your personal preference.

```
\mathsf{MENU} \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Custom}]
```

(Not available when **Dynamic Contrast** is set to **On**.)

Contrast

 $\mathsf{MENU} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Picture}] \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Custom}] \to \mathsf{ENTER} \to [\mathbf{Contrast}]$ $\to \mathbf{v} \to \mathsf{ENTER}$ Adjusts the Contrast. $\mathbf{Brightness}$

 $\begin{array}{l} \mathsf{MENU} \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Picture}] \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Custom}] \rightarrow \P \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Brightness}] \end{array}$

Brightness 50

 $\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow \mathsf{ENTER}$

Adjusts the Brightness.

Sharpness

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Picture}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Custom}] \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Sharpness}] \end{array}$



 $\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow \mathsf{ENTER}$

Adjusts the picture Sharpness.

Color

 $\begin{array}{c} \mathsf{MENU} \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Picture}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Custom}] \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Color}] \end{array}$

Color _____ 50

 $\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow \mathsf{ENTER}$

Adjusts the picture Color.

Tint

Tint G 50 _____ R 50

 $\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Adds a natural tone to the display.

Color Tone

 $\mathsf{MENU} \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Color} \ \mathsf{Tone}]$

	Piciure		
*	Mode Custom	: Dynamic	
		: Off Cool2	
0	Size Digital NR	: Cool1 : Normal	
Ó	HDMI Black Level	: Warm1 Warm2	
	🗢 Move 🕑	Enter 🕤 Return	

$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

The color tones can be changed. The individual Color components are also user adjustable.

(Not available when Dynamic Contrast is set to On.)

- 1. **Off**
- 2. Cool2
- 3. Cool1
- 4. Normal
- 5. Warm1
- 6. Warm2

Ø Note

If you set the **Color Tone** to **Cool2**, **Cool1**, **Normal**, **Warm1**, or **Warm2**, the **Color Temp.** function is disabled.

Color Temp.



$\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow \mathsf{ENTER}$


Color temp. is a measure of the 'warmth' of the image colors.

(Not available when **Dynamic Contrast** is set to **On**.)

Ø Note

This function is only enabled if the Color Tone is set to Off.

Size 🔼 🗄

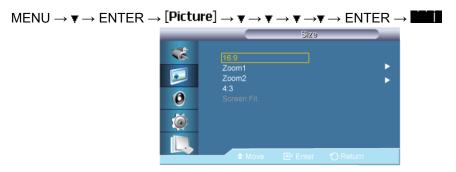

 \rightarrow **A** , **V** \rightarrow ENTER


The Size can be switched.

- 1. **16:9**: Sets the picture to 16:9 wide mode.
- 2. Zoom 1: Magnifies the size of the picture on the screen.
- 3. **Zoom 2**: Magnifies the size of the picture more than **Zoom 1**.
- 4. **4:3**: Sets the picture to 4:3 normal mode.
- 5. **Screen Fit**: Displays the input scenes as they are without any cutoff when HDMI 720p, 1080i, 1080p signals are input.

🖉 Note

- Certain external devices may feed the display an out of spec signal that may cause cutoff even when using the **Screen Fit** feature.
- Zoom 1, Zoom 2 are unavailable in HDMI mode.
- The Position and Reset functions are available in Zoom 1 or Zoom 2 modes.

Digital NR (Digital Noise Reduction)

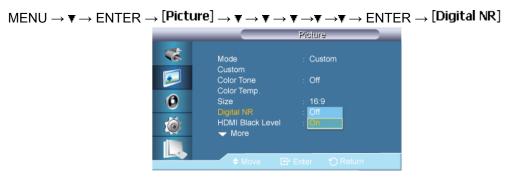

\rightarrow **i** , **v** \rightarrow ENTER

Turns the Digital Noise Reduction feature **Off/On**. The Digital Noise Reduction feature allows you to enjoy clearer and crisper images.

- 1. **Off**
- 2. **On**

Note

Digital NR function is not available for all resolutions.

HDMI Black Level **[**]

_		Picture
*	Mode Custom	: Custom
	Color Tone Color Temp	: Off
0	Size Digital NR	: 16:9 : On
<i>©</i>	HDMI Black Level	: Normal Low
	🗢 Move 🖃	Enter 🕤 Return

$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

When a DVD or set-top box is connected to your TV via HDMI or DVI, it may cause a degradation in the screen quality, such as an increase in the black level, a low contrast, or discoloration, etc., depending on the external device connected. In this case, adjust the screen quality of your TV by configuring the **HDMI black level**.

- 1. Normal
- 2. Low



For Timing which can be used for both the PC and the DTV in **DVI**, **HDMI** mode, **HDMI Black** Level will be activated.

Film Mode

	Picture
** © ©	More Film Mode PIP Picture Dynamic Contrast Coff Lamp Control Brightness Sensor Coff
	🗢 Move 📴 Enter 🏷 Return

$\rightarrow \blacktriangle$, $\checkmark \rightarrow \mathsf{ENTER}$

The Film Mode feature offers you a theater-quality viewing experience.

In **HDMI** mode, this function is available when the input signal is interlaced scan; it is not available is progressive scan.

- 1. Off
- 2. **On**

PIP Picture

 $\mathsf{MENU} \to \mathtt{V} \to \mathsf{ENTER} \to [\mathsf{Picture}] \to \mathtt{V} \to$

 
 \rightarrow **A** , **Y** \rightarrow ENTER

Adjusts the PIP Screen Settings.

🖉 Note


- Available Modes: PIP ON
- 1. Contrast



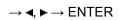

Adjusts the Contrast of the PIP window on the screen.

 2. Brightness

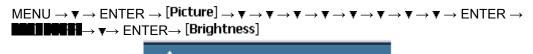



```
\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}
```

Adjusts the Brightness of the PIP window on the screen.

3. Sharpness



$\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Adjusts the Sharpness of the PIP window on the screen.

4. Color

 


$\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Adjusts the Color of the PIP window on the screen.

Enabled only when the PIP input is selected in AV, HDMI or Component mode.

5. Tint

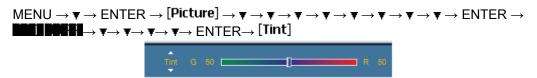


 $\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Adds a natural tone to the PIP window.

Ø Note

Enabled only when the **PIP** input is selected in **AV**, **HDMI** or **Component** mode. Operates only if the video signal is NTSC.

Dynamic Contrast

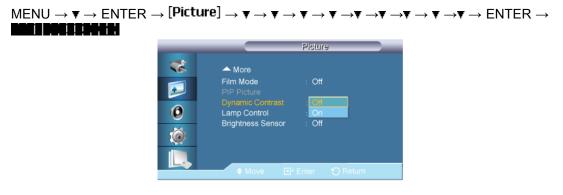

\rightarrow **A** , **Y** \rightarrow ENTER

Dynamic Contrast automatically detects the distribution of the visual signal and adjusts to create an optimum contrast.

- 1. Off
- 2. **On**

Lamp Control



\rightarrow 4, \blacktriangleright \rightarrow ENTER

Adjusts the inverter lamp in order to reduce energy consumption.

This function does not operate when **Dynamic Contrast** is set to **On** in **PC**, **DVI**, **AV**, **HDMI**, **Component** or **MagicInfo** modes.

Brightness Sensor

$MENU \rightarrow \mathbf{v} \rightarrow ENTER \rightarrow [Picture] \rightarrow \mathbf{v} \rightarrow \mathbf$	ĒR
Brightness Sensor	
- (************************************	
Off On	
♦ Move	

 \rightarrow **A** , **Y** \rightarrow ENTER

Brightness Sensor automatically detects distribution of the inputted visual signal and adjusts to create optimum brightness.

- 1. **Off**
- 2. **On**

Sound

Available Modes

- 📔 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

Mode PACHM

 $\mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Sound}] \to \mathsf{ENTER} \to [\mathsf{Mode}]$



\rightarrow **i** , **v** \rightarrow ENTER

The LCD Display has a built-in high fidelity stereo amplifier.

1. Standard

Selects **Standard** for the standard factory settings.

2. Music

Selects Music when watching music videos or concerts.

3. Movie

Selects Movie when viewing movies.

4. Speech

Selects **Speech** when watching a show that is mostly dialog (i.e., news).

5. Custom

Selects **Custom** if you want to adjust the settings according to your personal preferences.

Custom PACHM

The sound settings can be adjusted to suit your personal preferences.

```
MENU \rightarrow \Psi \rightarrow \Psi \rightarrow ENTER \rightarrow [Sound] \rightarrow \Psi \rightarrow ENTER \rightarrow [Custom]
\bigotimes Note
```

- You can hear the sound even when sound value is set to 0.
- If you adjust sound using Custom function, Mode will turn to Custom mode.

Bass

```
MENU \rightarrow \mathbf{v} \rightarrow \mathbf{v} \rightarrow ENTER \rightarrow [Sound] \rightarrow \mathbf{v} \rightarrow ENTER \rightarrow [Custom] \rightarrow ENTER \rightarrow [Bass]
```

 $\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Emphasizes low frequency audio.

Treble

```
\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Sound}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Custom}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\texttt{Treble}] \end{array}
```



 $\rightarrow \blacktriangleleft, \blacktriangleright \rightarrow \mathsf{ENTER}$

Emphasizes high frequency audio.

Balance


```
\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\texttt{Sound}] \to \blacktriangledown \to \mathsf{ENTER} \to [\texttt{Custom}] \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\texttt{Balance}] \end{array}
```



 \rightarrow 4, \blacktriangleright \rightarrow ENTER

Allows you to Adjusts the sound balance between the left and right speakers.

Auto Volume PACHM

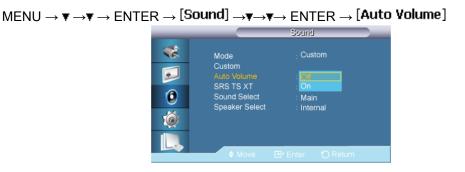

 \rightarrow **i** , **v** \rightarrow ENTER

Reduces the difference in volume control between broadcasters.

1. **Off**

2. On

SRS TS XT PACHM

```
\mathsf{MENU} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Sound}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{SRS} \ \mathbf{TS} \ \mathbf{XT}]
```



$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

SRS TS XT is a patented SRS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround XT delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

- 1. Off
- 2. On

Sound Select PACHM

$MENU \to \mathbf{v} \to \mathbf{v} \to ENTER \to [\mathbf{Sound}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to ENTER \to \mathbf{MENU}$					
Sound					
Mode : Custom Custom : Off Auto Volume : Off SRS TS XT : Off Sound Select : Moin Speaker Select : Sub					

$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Selects either Main or Sub when PIP is On. Note

Available Modes: PIP ON

- 1. Main
- 2. Sub

Speaker Select PACHM

 $\mathsf{MENU} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Sound}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to \mathbf{v} \to \mathbf{v}$

_		Sound	
	Mode Custom Auto Volume SRS TS XT Sound Select Speaker Select	: Custom : Off : Off : Main : Internal External	
L.,	Move	Henter 🕤 Return	

$\rightarrow \blacktriangle$, $\blacksquare \rightarrow \mathsf{ENTER}$

When you use the product with it connecting to a Home theater, turn the Internal speakers off so you can listen to sound from the Home theater's (external) speakers.

1. Internal

Sound is outputted both from the **Internal** speaker and the **External** speakers, but the volume control is only available from the **Internal** speaker.

2. External

When sound is only outputted from the **External** speakers, the volume control is also only available from the **External** speakers.

Setup

Available Modes

- 📔 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

Language PACHM

```
\mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \mathsf{ENTER} \to [\mathsf{Language}]
```

_		Setup
*		English
	Time	Deutsch
	Menu Transparency	Español
0	Safety Lock	Français
9	Energy Saving	Italiano
		⁻ Svenska
	Video Wall	Русский
	Safety Screen	Português
	✓ More	
	🗢 Move 💽 B	

 \rightarrow **A** , **Y** \rightarrow ENTER

You can choose one of 13 languages.

English,Deutsch,Español,Français,Italiano,Svenska,Русский Português,Türkçe, 简体中文, 繁體中文, 日本語, 한국어




The language chosen affects only the language of the OSD. It has no effect on any software running on the computer.

Time **PACHM**

Selects from one of 4 time settings, Clock Set, Sleep Timer, On Timer, and Off Timer.

 $\mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Time}]$

Clock Set

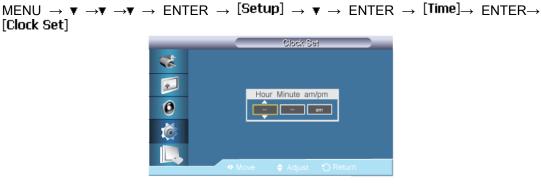

 \rightarrow **i** , **v** \rightarrow **i** , **b** \rightarrow ENTER

Current Time Setting.

Sleep Timer

```
\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacksquare \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Time}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Sleep Timer}] \end{array}
```



\rightarrow **a** , **y** \rightarrow ENTER

Turns the LCD Display off automatically at certain times.

- 1. Off
- 2. **30**
- 3. **60**
- 4. **90**
- 5. **120**
- 6. **150**

7. **180**

On Timer

```
\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Time}] \to \blacktriangledown \to \to \mathsf{ENTER} \to [\mathsf{On Timer}] \end{array}
```



\rightarrow **i** , **v** / **4**, **b** \rightarrow ENTER

Turns the LCD Display on automatically at a preset time. Controls the mode and the volume level at the time the LCD Display turns on automatically.

Off Timer

```
\begin{array}{l} \mathsf{MENU} \to \overline{\mathtt{v}} \to \overline{\mathtt{v}} \to \mathsf{ENTER} \to [\mathbf{Setup}] \to \overline{\mathtt{v}} \to \mathsf{ENTER} \to [\mathbf{Time}] \to \overline{\mathtt{v}} \to \overline{\mathtt{v}} \to \overline{\mathtt{v}} \to \mathsf{ENTER} \to [\mathbf{Off \ Timer}] \end{array}
```



```
\rightarrow \blacktriangle , \blacktriangledown / 4, \blacktriangleright \rightarrow ENTER
```

Turns the LCD Display off automatically at a preset time.

Menu Transparency PACHM



$\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \mathsf{ENTER}$

Change the transparency of the background of the OSD.

- 1. **High**
- 2. Medium

- 3. Low
- 4. Opaque

Safety Lock PACHM

Change PIN

	Chang	e PIN
*		
	Enter PIN	
0		
i 🧔		
	0.9 Enter Pin	🕤 Return


 $\rightarrow [0~9] \rightarrow [0~9] \rightarrow [0~9] \rightarrow [0~9]$

The password can be changed.

Ø Note

The preset password for the LCD Display is "0000".

Lock On

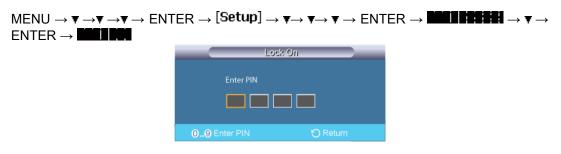

 $\rightarrow [0 \text{-} 9] \rightarrow [0 \text{-} 9] \rightarrow [0 \text{-} 9] \rightarrow [0 \text{-} 9]$

This is the function that locks the OSD in order to keep the current settings or to prevent others from adjusting the settings.

Energy Saving PACHM



 $\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow$ ENTER

This feature adjusts the power consumption of the unit in order to save energy.

- 1. Off
- 2. On

Video Wall PACHM

A **Video Wall** is a set of video screens connected together, so that each screen shows a part of the whole picture or where the same picture is repeated on each screen.

When the Video Wall is on, you can adjust the Video Wall screen setting.

When Video Wall is running, the Auto Adjustment, Image Lock, and Size functions are not available. Video Wall does not operate in MagicInfo mode.

Video Wall

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Setup}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Video Wall}] \\ \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Video Wall}] \end{array}$

	Video Wall
	: Off
Format Horizontal	: <mark>On</mark> : 1
Vertical Screen Divider	
◆ Move	Er Enter 🐑 Return
	Format Horizontal Vertical Screen Divider

\rightarrow **i** , **f** \rightarrow ENTER

Turns Off/On the Video Wall function of the selected display Off/On.

- 1. Off
- 2. **On**

Format

```
\begin{array}{l} \mathsf{MENU} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathbf{Setup}] \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathbf{Video} \ \mathbf{Wall}] \\ \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathbf{Format}] \end{array}
```

_		Video Wall
*	Video Wall	: On
	Format Horizontal	Ful Natural
0	Vertical Screen Divider	
Ó		
	Allow	Enter 🕤 Return
		EF Enter O Ketum

 \rightarrow **A** , **T** \rightarrow ENTER

The Format can be selected to see a divided screen.

1. Full

Provides a full screen without any margins.

2. Natural

Displays a natural image with the original aspect ratio intact.

Horizontal

```
\begin{array}{l} \mathsf{MENU} \rightarrow \overline{\mathbf{v}} \rightarrow \overline{\mathbf{v}} \rightarrow \overline{\mathbf{v}} \rightarrow \mathsf{ENTER} \rightarrow [\mathbf{Setup}] \rightarrow \overline{\mathbf{v}} \rightarrow \mathbf{v} \rightarrow \mathbf
```



\rightarrow \blacktriangle , \blacktriangledown \rightarrow ENTER

Sets how many parts the screen should be divided horizontally.

Five adjustment levels: 1, 2, 3, 4, and 5.

Vertical

```
\begin{array}{l} \mathsf{MENU} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathsf{Setup}] \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathsf{Video} \ \mathsf{Wall}] \\ \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathsf{Vertical}] \end{array}
```

_		Video W	eill	
 ** <	Video Wall Format Horizontal Vertical Screen Divider	: On : Full : 1 :	↓	
		♦ Adjust	🕤 Return	

\rightarrow **A** , **V** \rightarrow ENTER

Sets how many parts the screen should be divided vertically.

Five adjustment levels: 1, 2, 3, 4, and 5.

Screen Divider

 $\begin{array}{l} \mathsf{MENU} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathsf{ENTER} \rightarrow [\mathbf{Setup}] \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathbf{Video} \ \mathbf{Wall}] \\ \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathbf{Screen} \ \mathbf{Divider}] \end{array}$



The screen can be divided into several images. A number of screens can be selected with a different layout when dividing.

- Select a mode in Screen Divider.
- Select a display in Display Selection.
- The selection will be set up by pressing a number in the selected mode.

Safety Screen PACHM

The **Safety Screen** function is used to prevent afterimages that may appear when a still picture is displayed on the screen over a long time.

- The Safety Screen function scrolls the screen for the specified period of time.
- This function is not available when the power is turned off.

```
\begin{array}{l} \mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\texttt{Setup}] \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacksquare \to \mathsf{F} \to \mathsf{ENTER} \to [\texttt{Safety Screen}] \end{array}
```

Pixel Shift

Pixel Shift

_		Pixel Snin
*		: Off
	Horizontal	: On
	Vertical	
0	Time	: 4 min
Ó		
	♦ Move	

To prevent after-images on the screen you can use this function have pixels move on the LCD in the horizontal or vertical direction.

- 1. Off
- 2. **On**

Horizontal

 $\begin{array}{l} \mathsf{MENU} \to \forall \to \forall \to \forall \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \forall \to \mathsf{ENTER} \to [\mathsf{Safety Screen}] \to \mathsf{ENTER} \to [\mathsf{Pixel Shift}] \to \forall \to \mathsf{ENTER} \to [\mathsf{Horizontal}] \to \blacktriangle, \forall \to \mathsf{ENTER} \end{array}$



Sets how many pixels the screen moves horizontally.

Five adjustment levels: 0, 1, 2, 3, and 4.

Vertical

Sets how many pixels the screen moves vertically.

Five adjustment levels: 0, 1, 2, 3, and 4.

Time



Set the time interval for performing the horizontal or vertical movement, respectively.

Timer

Timer

```
\begin{array}{c} \mathsf{MENU} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Setup}] \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Safety Screen}] \to \mathbf{v} \to \mathsf{ENTER} \to [\mathbf{Timer}] \to \mathsf{ENTER} \to [\mathbf{Timer}] \to \mathbf{k}, \ \mathbf{v} \to \mathsf{ENTER} \end{array}
```

You can set the timer for Screen Burn Protection.

If you start the operation to erase any residual image, the operation will be performed for the set period of time and then automatically finish.

- 1. **Off**
- 2. **On**

Mode

```
\begin{array}{l} \mathsf{MENU} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{v}} \rightarrow \overline{\mathtt{e}} \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Setup}] \rightarrow \overline{\mathtt{v}} \rightarrow \mathbb{E}\mathsf{NTER} \rightarrow [\mathsf{Safety Screen}] \rightarrow \overline{\mathtt{v}} \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Timer}] \rightarrow \overline{\mathtt{v}} \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Mode}] \rightarrow \underline{\mathtt{k}}, \overline{\mathtt{v}} \rightarrow \mathsf{ENTER} \end{array}
```

	Timer	: On
		Scroll
	Period	: Bar . Eraser
0	Time	
Ó		
	Move	🔁 Enter 🏷 Return

You can change the Safety Screen Type.

- 1. Scroll
- 2. Bar
- 3. Eraser

Period

 $\begin{array}{l} \mathsf{MENU} \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Setup}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Safety Screen}] \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Timer}] \rightarrow \forall \rightarrow \forall \rightarrow \forall \rightarrow \mathsf{ENTER} \rightarrow [\mathsf{Period}] \rightarrow \blacktriangle, \forall \rightarrow \mathsf{ENTER} \end{array}$

_		Timer	
	Timer	: On	
	Mode Period	: Bar :1	
0	Time	: 10 sec	
Ó			
		🕈 Adjust 🕤 Return	

Use this function to set the execution period for each mode set in the timer.

Time

 $\begin{array}{l} \mathsf{MENU} \to \P \to \P \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \P \to \P \to \P \to \P \to \P \to \P \to \mathsf{P} \to \mathsf{ENTER} \to [\mathsf{Safety Screen}] \to \P \to \mathsf{ENTER} \to [\mathsf{Timer}] \to \P \to \P \to \P \to \mathsf{ENTER} \to [\mathsf{Time}] \to \blacktriangle , \P \to \mathsf{ENTER} \end{array}$


_		Timer
*	Timer	: On
	Mode	: Bar
	Period	: 1 Hour
0		: 10
Ó		
		🗢 Adjust 👘 Return

Within the set period of time specify a time for execution.

- Mode-Scroll : 1~5 sec
- Mode-Bar, Eraser : 10~50 sec

Scroll


```
\begin{array}{c} \mathsf{MENU} \to \P \to \P \to \mathsf{ENTER} \to [\mathsf{Setup}] \to \P \to \P \to \P \to \P \to \P \to \P \to \mathsf{P} \to \mathsf{ENTER} \to [\mathsf{Safety Screen}] \to \P \to \P \to \mathsf{ENTER} \to [\mathsf{Scroll}] \end{array}
```

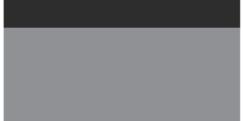

This function helps to remove after-images on the screen by moving all the pixels on the LCD according to a pattern.


Use this function when there are remaining after-images or symbols on the screen, especially when you displayed a still image on the screen for a long time.

Bar

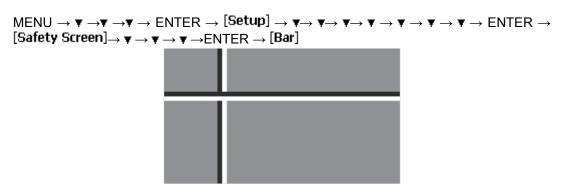

This function prevents after-images on the screen by moving long black and white vertical lines.

Eraser

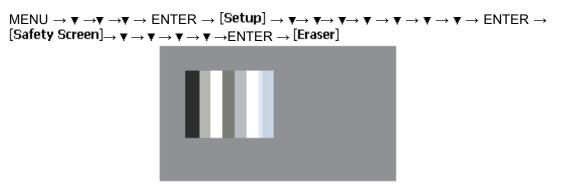

This function prevents after-images on the screen by moving a rectangular pattern.

Side Gray

_		Safety Screen	
* • •	Pixel Shift Timer Scrool Bar Eraser Side Gray	: <mark>1941</mark> Light Dark	
	A Move	🕑 Enter 🕤 Return	

$\rightarrow \blacktriangle$, $\checkmark \rightarrow \mathsf{ENTER}$

Select the brightness of the grey for the screen background.

- 1. **Off**
- 2. Light
- 3. Dark

Resolution Select

\rightarrow **i** , **y** \rightarrow ENTER

When the picture is not displayed properly on the screen when setting the graphics card resolution of the computer to $1024 \times 768 @ 60Hz$, $1280 \times 768 @ 60Hz$, $1360 \times 768 @ 60Hz$ or $1366 \times 768 @ 60Hz$, by using this function(Resolution Select), you can have the picture displayed on the screen in the specified resolution.



Available in PC mode only

- 1. **Off**
- 2. 1024 X 768
- 3. 1280 X 768
- 4. **1360 x 768**
- 5. 1366 X 768

Note 🖉

Selecting the menu is only allowed when the graphics resolution is set to 1024 x 768 @ 60Hz, 1280 x 768 @ 60Hz, 1360 x 768 @ 60Hz or 1366 x 768 @ 60Hz.

Power On Adjustment PACHM

→ DEI POCHIPPI MUL I	
	Power On Adjustment
	Power On Adjustment :
	🗢 Adjust 🍸 Return

\rightarrow **a** , **y** \rightarrow ENTER

Adjusts the Power On time for the screen.

OSD Rotation PACHM

	Setup
** •• ••	More Resolution Select : Off Power On Adjustment OSD Rotation : Lendecare Reset Portrait
	S/N :
	🗢 Move 🖙 Enter 🏷 Return

 \rightarrow **i** , **v** \rightarrow ENTER

OSD Rotate

- 1. Landscape
- 2. Portrait

Reset

Reverts the product settings to factory defaults. The Reset function is only available when $\rm PC$ / $\rm DVI$ is being used.

Image Reset P

 $\begin{array}{l} \mathsf{MENU} \rightarrow \texttt{v} \rightarrow \texttt{v} \rightarrow \texttt{v} \rightarrow \texttt{ENTER} \rightarrow [\texttt{Setup}] \rightarrow \texttt{v} \rightarrow \texttt{v$



 $\rightarrow \blacktriangleleft$, $\blacktriangleright \rightarrow$ ENTER Note

Available in PC mode only Note

The Reset function is not available when Video Wall is On.

Color Reset PACHM



 \rightarrow 4, \blacktriangleright \rightarrow ENTER



Available Modes

- 📔 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

Multi Control

Assigns an individual ID to the SET.

 $\mathsf{MENU} \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \blacktriangledown \to \mathsf{ENTER} \to [\mathsf{Multi}\ \mathsf{Control}] \to \mathsf{ENTER}$

		Multi Control	
*			
	ID Setup	: 00	
0	ID Input		
Ó			
	Move	🕒 Enter 😲 Retu	m

- → ▲ , ▼ → [0~9]
- ID Setup

Assigns distinctive IDs to the SET.

• ID Input

Use to select the transmitter functions of the individual SET. Only a SET where the ID corresponds to the transmitter setting becomes activated.

MagicInfo

Available Modes

- 🛯 PC / DVI
- 🔼 AV
- Component
- 🖸 HDMI
- MagicInfo

🖉 Note

- The remote control can be used to select **MagicInfo**. However, it is recommended to use a separate USB keyboard to utilize **MagicInfo** fully.
- For **MagicInfo** in Device mode, moving external devices while booting may cause errors. Set up external devices only if the LCD Display turns on.
- Do not unplug the LAN cable used for the network (ex: video display). Otherwise, the program (MagicInfo) may stop. If you do unplug the cable, restart the system.
- Do not unplug the LAN cable used by an USB device (ex: video display). Otherwise, the program (MagicInfo) may stop.
- To access other sources, press the SOURCE button in MagicInfo.
- The preset password for the LCD Display is "000000".
- The server program's Power-On option works only if the LCD Display's power is completely shut off.

Please make sure not to use the Power-On option when the LCD Display is in the process of shutting down since this may cause system errors on the LCD Display.

- In the OSD image of MagicInfo, Network mode is the same as Device.
- When using MagicInfo with the MagicInfo Server Program: perform Network mode.
- When using **MagicInfo** with the device directly connected to LCD Display : execute Device mode.
- Press ESC to directly go to the MagicInfo Window screen.
- To setup MagicInfo on a Windows screen, a keyboard and mouse are required.
- To setup MagicInfo on a Windows screen, refer to the MagicInfo Server Help.

It is highly recommended not to turn off the AC power during an operation.

- For pivoted LCD Displays, ticker transparency is not supported.
- For pivoted LCD Displays, a screen resolution of up to 720*480(SD) is supported for movies.
- For drive D:, EWF is not applied.
- To save Setup contents that have been changed when **EWF** is in the **Enable** state, you must **Commit** them.
- By selecting **Disable**, **Enable** or **Commit**, the system is restarted.

MagicInfo

1. Select Application - step 1

🖟 Magicinfo Setup Wizard - v.1.03	K
Select Application - step 1 Select MagicInfo Pro (LAN,WAN based version) MagicInfo - T (Web-based version))	
O Click	
< Back(B) Next(N) > Finish Cancel	

You can select an Application to be executed in your computer when Windows starts.

2. Select TCP/IP - step 2

MagicInfo Setup Wizard	- v	.1.0	3						
Select TCP/IP - step 2									
Obtain an IP address automatically Use the following IP address:									
IP address:	Г	10		88	•	68	•	107	
Subnet mask:	Г	255		255		255		0	
Default gateway:	Г	10		88		68		1	
Contain DNS server address automatically									
I Use the following DNS set	ver	addre	ss	: -					-
Preferred DNS server:	Г	10		41	•	131	•	60	
Alternate DNS server:	Γ	165	•	213	•	246	•	161	
2 Click									
< Back(B) (Next(N))			F	inish		1		Cance	1

In step 2 of MagicInfo Setup Wizard, you don't have to go to Network Setting on the desktop to make your settings for TCP/IP. You just do that at step 2 of MagicInfo installation.

3. Select Language - step 3

🖟 MagicInfo Setup Wizard - v.1.03	
Select Language - step 3	
Select the language you want to install on the system for me and dialogs, Current Language : Korean	nus
Prabic Chinese (Traditional) Danish German	
Corean Polish	>
	ancel

When using multiple languages, you can choose and set a specific language among them.

4. Select Screen Type - step 4

🕼 MagicInfo	o Setup Wizard - v.1.03	X
	Select Screen Type - step 4	
0	Select	
P 🛛	.andscape	
🔊 г	Portrait	
	1	
	2 Click	
< Bac		1

You can select which rotation type will be applied to your device.

5. Setup Information

🖟 MagicInfo	Setup Wizard - v.1.03	×	
1	Setup Information		
1. Applica	ation :		
2, Interne	t Protocol (TCP/IP)		
IP :	10, 88, 68, 107		
3, Language : Korean			
4, Screen	n Type : Landscape		
🔽 Do not si	how again Click		
< Bac	k(B) Apply Finish Cancel		

Shows the settings that have been selected by the user.

Note

If the **MagicInfo** icon is not displayed on the notification area, double click the **MagicInfo** icon on the window desktop. The icon will appear.

Troubleshooting

Self-Test Feature Check

Note 🖉

Check the following items yourself before calling for assistance. Contact a Service Center for problems that you cannot solve by yourself.

Self-Test Feature Check

- 1. Turn off both your computer and the LCD Display.
- 2. Unplug the video cable from the back of the computer.
- 3. Turn on the LCD Display.

The figure shown below ("**Check Signal Cable**") appears on a black background when the LCD Display is working normally even though no video signal is detected: While in the Self-Test mode, the LED power indicator remains green and the figure moves around on the screen.



4. Turn off your LCD Display and reconnect the video cable; then turn on both your computer and the LCD Display

If your LCD Display screen remains blank after using the previous procedure, check your video controller and computer system; your LCD Display is functioning properly.

Warning Messages

You can even view the screen at a resolution of 1920 x 1080. However, you will receive the following message for a minute; You can choose to change the screen resolution or stay in the current mode during that time. If the resolution is more than 85Hz, you will see the black screen because the LCD Display does not support over 85Hz.

Not Optimum Mode Recommended Mode **** x *** 60Hz

🖉 Note

Refer to Specifications > Preset Timing Modes for the resolutions or frequencies supported by the LCD Display.

Maintenance and Cleaning

1) Maintaining the LCD Display Case.

Clean with a soft cloth after disconnecting the power cord.



Do not use benzene, thinner or other flammable substances.

2) Maintaining the Flat Panel Display Screen.

Clean with a soft cloth (cotton flannel).

	<u> </u>	
ų,		

Never use acetone, benzene or thinner.

(They may cause flaws or deformation of the screen surface.)

• The user is responsible for any damage caused by using these substances.

Symptoms and Recommended Actions

Note 🖉

A LCD Display recreates visual signals received from the computer. Therefore, if there is a problem with the computer or the video card, this can cause the LCD Display to become blank, have poor coloring, become noisy, etc. In this case, first check the source of the problem, and then contact a Service Center or your dealer.

- 1. Check if the power cord and the video cables are properly connected to the computer.
- 2. Check if the computer beeps more than 3 times when booting.

(If it does, request service.)

- 3. If you installed a new video card or if you assembled the PC, check if you installed the Adaptor(video).
- 4. Check if the scanning ratio of the video screen is set to between 50 Hz ~ 85 Hz.

(Do not exceed 60Hz when using the maximum resolution.)

5. If you have problems in installing the Adaptor (video) driver, boot the computer in Safe Mode, remove the Display Adaptor in the "Control Panel -> System -> Device Admin-istrator" and then reboot the computer to reinstall the Adaptor (video) driver.

Check List

Note

- The following table lists possible problems and their solutions. Before calling for assistance, check the information in this section to see if you can remedy any problems for yourself. If you do need assistance, please call the phone number on the Information section or contact your dealer.
- For more network-related information, refer to the MagicInfo Troubleshooting section.

Problems related to the Installation (PC Mode)

Note

Problems related to the LCD Display installation and their solutions are listed.

Q: The LCD Display screen flickers.

A: Check if the signal cable between the computer and the LCD Display is securely connected.

(Refer to Connecting a Computer)

Problems related to the Screen

Note

Problems related to the LCD Display screen and their solutions are listed.

- Q: The screen is blank and the power indicator is off.
- A: Ensure that the power cord is firmly connected and the LCD Display is on.

(Refer to the Connecting a Computer)

- Q: "Check Signal Cable" message.
- A: Ensure that the signal cable is firmly connected to the PC or video sources.

(Refer to the Connecting a Computer)

- A: Ensure that the PC or video sources are turned on.
- Q: "Not Optimum Mode" message.
- A: Check the maximum resolution and the frequency of the video Adaptor.
- A: Compare these values with the data in the Preset Timing Modes Chart.
- Q: The picture rolls vertically.
- A: Check if the signal cable is securely connected. Re-connect it, if necessary.

(Refer to Connecting a Computer)

- Q: The image is not clear; picture is blurred.
- A: Run Frequency **Coarse** and **Fine** tuning.
- A: Turn on again after removing all accessories (video extension cable, etc.)
- A: Set the resolution and frequency to the recommended ranges.
- Q: The picture image is unstable and shakes.
- A: Check if the resolution and frequency set for the computer video card falls in the range supported by the LCD Display. If not, reset them referring to the current Information under the LCD Display menu and Preset Timing Modes.
- Q: Ghost images are shown in the picture.
- A: Check if the resolution and frequency set for the computer video card falls in the range supported by the LCD Display. If not, reset them referring to the current Information under the LCD Display menu and Preset Timing Modes.
- Q: The image is too light or too dark.
- A: Adjust the **brightness** and **contrast**.

(Refer to the Brightness, Contrast)

- Q: The screen color is inconsistent.
- A: Adjust color using **Custom** under OSD Color Adjustment menu.
- Q: The color image is distorted by dark shadows.
- A: Adjust color using **Custom** under OSD Color Adjustment menu.
- Q: The color white is poor.
- A: Adjust color using **Custom** under OSD Color Adjustment menu.
- Q: The Power Indicator blinks.
- A: The LCD Display is currently saving the changes made in the settings to the OSD memory.
- Q: The screen is blank and the power indicator light blinks every 0.5 or 1 seconds.
- A: The LCD Display is using its power management system. Press any key on the keyboard.
- Q: The screen is blank and it is blinking.
- A: If you see the "**TEST GOOD**" message on the screen when you pressing the MENU button, check the cable connection between the LCD Display and the computer to ensure that the connector is properly connected.

Problems related to Audio

Note 🖉

Problems related to audio signals and their solutions are listed below.

- Q: No sound.
- A: Ensure that the audio cable is firmly connected to both the audio-in port on your LCD Display and the audio-out port on your sound card.

(Refer to the Connecting a Computer)

- A: Check the volume level.
- Q: The sound level is too low.
- A: Check the volume level.
- A: If the volume is still too low after turning the control to its maximum, check the volume control on the computer sound card or software program.
- Q: The sound is too high or too low.
- A: Adjusts the **Treble** and **Bass** to the appropriate levels.

Problems related to the Remote Control

Note

Problems related to the remote control and their solutions are listed.

- Q: The remote control buttons do not respond.
- A: Check the polarities (+/-) of the batteries.

- A: Check if the batteries are empty.
- A: Check if the power is on.
- A: Check if the power cord is securely connected.
- A: Check if a special fluorescent or neon lamp is on in the vicinity.

Q & A

- Q: How can I change the frequency?
- A: The frequency can be changed by reconfiguring the video card.

That video card support can vary, depending on the version of the driver used. (Refer to the computer or the video card manual for details.)

- Q: How can I adjust the resolution?
- A: Windows XP:

Set the resolution in the Control Panel \rightarrow Appearance and Themes \rightarrow Display \rightarrow Settings.

A: Windows ME/2000:

Set the resolution in the Control Panel \rightarrow Display \rightarrow Settings.

* Contact the video card manufacturer for details.

- Q: How can I set the Power Saving function?
- A: Windows XP:

Set the resolution in the Control Panel \rightarrow Appearance and Themes \rightarrow Display \rightarrow Screen Saver.

Set the function in the BIOS-SETUP of the computer. (Refer to the Windows / Computer Manual).

A: Windows ME/2000:

Set the resolution at the Control Panel \rightarrow Display \rightarrow Screen Saver.

Set the function in the BIOS-SETUP of the computer. (Refer to the Windows / Computer Manual).

- Q: How can I clean the outer case/LCD Panel?
- A: Disconnect the power cord and then clean the LCD Display with a soft cloth, using either a cleaning solution or plain water.

Do not leave any detergent or scratches on the case. Do not let any water enter the LCD Display.

- Q: How can I play the video?
- A: The video supports the MPEG1 and WMV codecs only. Install the corresponding codec to play the video. Note that some of the codecs can be incompatible.



Before calling for assistance, check the information in this section to see if you can remedy any problems yourself. If you do need assistance, please call the phone number on the Information section or contact your dealer.

Specifications

General

General		
Model Name	SyncMaet	er 700TSn-2,820TSn-2
Model Name	Synciviasi	lei 7001311-2,0201311-2
LCD Panel		
Size	SyncMaster 700TSn-2	70 inches (177 cm)
	SyncMaster 820TSn-2	82 inches (207 cm)
Display area	SyncMaster 700TSn-2	1549.44 mm (H) x 871.56 mm (V)
	SyncMaster 820TSn-2	1805.76 mm (H) x 1015.74 mm (V)
Pixel Pitch	SyncMaster 700TSn-2	0.807 mm (H) x 0.807 mm (V)
	SyncMaster 820TSn-2	0.9405 mm (H) x 0.9405 mm (V)
Synchronizatior	1	
Horizontal	30 ~ 81 kl	Hz
Vertical	56 ~ 85 H	Z
Display Color		
16.7 M		
Resolution		
	u- 1920 x 1080 @	② 60 Hz
Maximum resolution	u- 1920 x 1080 (2) 60 Hz
Input Signal, Te	erminated	
RGB Analog, D	VI(Digital Visual	Interface) Compliant Digital RGB
0.7 Vp-p ±5 %		
Separate H/V s	ync, Composite,	SOG
TTL level (V hig	h ≥ 2.0 V, V low	≤ 0.8 V)
Maximum Pixel	Clock	
165MHz (Analo	g,Digital)	
Power Supply		
	pports 100 - 240	V.

Power Supply

Since the standard voltage may differ from country to country, please check the label on the back of the product.

Signal connectors

D-sub, DVI-D In/Out, VCR, HDMI, RS232C In/Out, BNC In/OutPC Audio In, Audio In(L/R), Audio Out (L/R), With Network Model : USB, LAN

Dimensions (W x H x D) / Weight

SyncMaster	1668.0 x 989.0 x 138.0 mm / 65.7 x 38.9 x 5.4 inches (With-
700TSn-2	out Stand)
	1668.0 x 1094.0 x 500.0 mm / 65.7 x 43.1 x 19.7 inches (With Stand) / 83 kg / 183.0 lbs
SyncMaster	1915.0 x 1125.0 x 155.0 mm / 75.4 x 44.3 x 6.1 inches
820TSn-2	(Without Stand)
	1915.0 x 1230.0 x 500.0 mm / 75.4 x 48.4 x 19.7 inches (With Stand) / 140 kg / 308.6 lbs

VESA Mounting Interface

SyncMaster 700TSn-2	800 x 400 mm
SyncMaster 820TSn-2	900.0mm x 800.0mm / 1400.0mm x 800.0mm

Environmental considerations

Operating	Temperature : 50°F ~ 104°F (10°C ~ 40°C)	
	Humidity : 10 % ~ 80 %, non-condensing	
Storage	Temperature : -4°F ~ 113°F (-20°C ~ 45°C)	
	Humidity : 5 % ~ 95 %, non-condensing	

Plug and Play Capability

This LCD Display can be installed on any Plug & Play compatible system. The interaction of the LCD Display and the computer systems will provide the best operating conditions and LCD Display settings. In most cases, the LCD Display installation will proceed automatically, unless the user wishes to select alternate settings.

Dot Acceptable

TFT-LCD panels manufactured by using advanced semiconductor technology with precision of 1ppm (one millionth) above are used for this product. But the pixels of RED, GREEN, BLUE and WHITE color appear to be bright sometimes or some black pixels may be seen. This is not from bad quality and you can use it without any problems.

For example, the number of TFT-LCD sub pixels contained in this product are 6,220,800.

🖉 Note

Design and specifications are subject to change without prior notice.



• A Equipment.

PowerSaver

This LCD Display has a built-in power management system called PowerSaver. This system saves energy by switching your LCD Display to low-power mode when it has not been used for a certain amount of time. The LCD Display automatically returns to normal operation when you press a key on the keyboard. For energy conservation, turn your LCD Display OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPM compliant video card installed in your computer. Use the software utility installed on your computer to set up this feature.

PowerSaver (When used as a Network monitor)

State		Normal Opera- tion	Power saving mode	Power off (Power-switch)
Power Ir	ndicator	On	Blinking	Off
Power Con-	700TSn-2	750 watts	Less than 5 watts	0 watts
sumption	820TSn-2	920 watts	Less than 5 watts	less than0 watts

Preset Timing Modes

If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjusts the screen as follows.

Display Mode	Horizontal Frequency (kHz)	Vertical Fre- quency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM, 640 x 350	31.469	70.086	25.175	+/-
IBM, 640 x 480	31.469	59.940	25.175	-/-
IBM, 720 x 400	31.469	70.087	28.322	-/+
MAC, 640 x 480	35.000	66.667	30.240	-/-
MAC, 832 x 624	49.726	74.551	57.284	-/-
MAC, 1152 x 870	68.681	75.062	100.000	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 848 x 480	31.020	60.000	33.750	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1152 x 864	67.500	75.000	108.000	+/+

Horizontal Frequency	Vertical Fre- quency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
(kHz)			
47.776	59.870	79.500	-/+
60.000	60.000	108.000	+/+
63.981	60.020	108.000	+/+
79.976	75.025	135.000	+/+
47.712	59.790	85.500	+/+
75.000	60.000	162.000	+/+
67.500	60.000	148.500	+/+
	Frequency (kHz) 47.776 60.000 63.981 79.976 47.712 75.000	Frequency (kHz)quency (Hz)47.77659.87060.00060.00063.98160.02079.97675.02547.71259.79075.00060.000	Frequency (kHz)quency (Hz)(MHz)47.77659.87079.50060.00060.000108.00063.98160.020108.00079.97675.025135.00047.71259.79085.50075.00060.000162.000

Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called the Horizontal Cycle and the inverse number of the Horizontal Cycle is called the Horizontal Frequency. Unit: kHz



Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called the Vertical Frequency or Refresh Rate. Unit: Hz



Information

For Better Display

Adjust the computer resolution and screen injection rate (refresh rate) on the computer as described below to enjoy the best picture quality. You can have an uneven picture quality on screen if the best picture quality is not provided for TFT-LCD.

- Resolution: 1920 x 1080
- Vertical frequency (refresh rate): 60 Hz

TFT-LCD panels manufactured by using advanced semiconductor technology with a precision of 1ppm (one millionth) and above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen. This is not from bad quality and you can use it without any problems.

• For example, the number of TFT-LCD sub pixels contained in this product are 6,220,800.

• When cleaning the monitor and the panel outside, please apply the recommended small amount of cleaner by using a soft cloth to polish. Rub softly when cleaning the LCD area. If excessive force is applied, you may stain it.

• If you are not satisfied with the picture quality, you can get better quality of picture by performing the "Auto Adjustment function" in display screen that is appeared as window termination button is pressed. If there's still noise after the automatic adjustment, use the Fine/Coarse adjustment function.


When viewing a fixed screen for an extended period of time, a residual image or blurriness may appear. Change the mode to energy save or set a screensaver to move the picture when you need to be away from the monitor for an extended period of time.

PRODUCT INFORMATION (Image Retention Free)

• What is Image Retention ?

Image retention may not occur when a LCD panel is operated under normal conditions.


Normal conditions are defined as continuously changing video patterns. When the LCD panel is operated for a long time with a fixed pattern (over 12 hours), there may be slight difference in voltage between electrodes that work the liquid crystal (LC) in a pixel. The voltage difference between electrodes increases with time, forcing the liquid crystal to lean. When this occurs, the previous image may be seen when the pattern is changed. To prevent this, the accumulated voltage difference must be decreased.

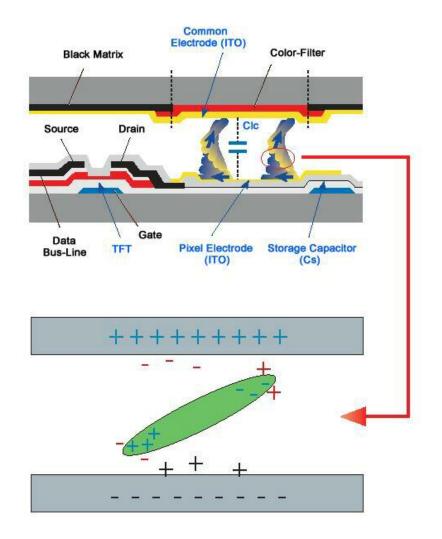

Power Off, Screen Saver, or Power Save Mode

- Turn the power off for 4 hours after 20 hours in use
- Turn the power off for 2 hours after 12 hours in use
- Set the Monitor to power off with the PC Display Properties Power Scheme.
- Use a Screen saver if possible Screen saver in one color or a moving image is recommended.

 Change the Color Information periodically

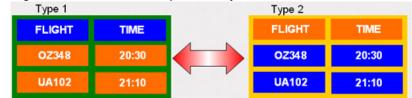

Note

Use Two different colors

Rotate the Color Information with 2 different colors every 30 minutes.

• Avoid using a combination of characters and background color with large difference in luminance.

Avoid using Grey colors, which can cause Image retention easily.

Avoid: Colors with big difference in luminance (Black & White, Grey)



Change the characters color periodically

- Use Bright colors with little difference in luminance.
 - Cycle : Change the characters color and background color every 30 minutes



• Every 30 minutes, change the characters with movement.



• Have the images and logo periodically.

- Cycle: Display moving image together with Logo for 60 seconds after 4 hours in use.

The best way to protect your monitor from Image retention is to turn the Power
off, or set your PC or System to operate a Screen Saver program when you are
not using it. If these guidelines are not followed, it may affect your warranty.

Apply the Screen Scroll function on Product

- Apply the Screen Scroll function
 - Symptom: Horizontal Bar with Black Color move up and down.

Horizontal Bar with Black color		
FLIGHT		T.
OZ348	20:30	+
118.400		
UA102	21:10	

- Select method

- Instruction Guide : OSD Menu -> Set Up -> Safety Screen -> Screen Scroll
- Time Interval : 1 ~ 10 hours (Recommend : 1)

• Time Period : 1 ~ 5 seconds (Recommend : 5)

🖉 Note

(Please check CD's User Guide at "OSD Function", some model's will not available)

Apply the Screen Pixel function on Product

Apply the Screen Pixel function

- Symptom: Dot with Black Color move up and down.

	TIME	+
OZ348	20:30	+
UA102	21:10	

- Select method

- Instruction Guide : OSD Menu -> Set Up -> Safety Screen -> Pixel
- Time Interval : 1 ~ 10 hours (Recommend : 1)
- Time Period : 10 ~ 50 seconds (Recommend : 50)
- Apply the Screen Bar function
 - Symptom: Horizontal / Vertical Bar with Black Color move up and down.

		_
FLIGHT	TIME	
Horizontal Bar		
OZ348	20:30	Ĭ
-		+
UA102	21:10	
	21110	

- Select method

- Instruction Guide : OSD Menu -> Set Up -> Safety Screen -> Bar
- Time Interval : 1 ~ 10 hours (Recommend : 1)
- Time Period : 10 ~ 50 seconds (Recommend : 50)

🖉 Note

(Please check CD's User Guide at "OSD Function", some model's will not available.)

• Apply the Screen Erasing function on Product

- Apply the Screen Erasing function
 - Symptom: 2 Vertical blocks move while erasing the display

→ →				
	GHT	TIME		
0	Z348	20:30		
UA102		21:10		

- Select method

- Instruction Guide : OSD Menu -> Set Up -> Safety Screen -> Eraser
- Time Interval : 1 ~ 10 hours (Recommend : 1)
- Time Period : $10 \sim 50$ seconds (Recommend : 50)

Note

(Please check CD's User Guide at "OSD Function", some model's will not available)

Appendix

Contact SAMSUNG WORLDWIDE

🖉 Note

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

	North America	
U.S.A	1-800-SAMSUNG(726-7864)	http://www.samsung.com/us
CANADA	1-800-SAMSUNG(726-7864)	http://www.samsung.com/ca
MEXICO	01-800-SAMSUNG (726-7864)	http://www.samsung.com/mx
	Latin America	
ARGENTINA	0800-333-3733	http://www.samsung.com/ar
BRAZIL	0800-124-421	http://www.samsung.com/br
	4004-0000	
CHILE	800-SAMSUNG(726-7864)	http://www.samsung.com/cl
COLOMBIA	01-8000112112	http://www.samsung.com/co
COSTA RICA	0-800-507-7267	http://www.samsung.com/lat- in
ECUADOR	1-800-10-7267	http://www.samsung.com/lat- in
EL SALVADOR	800-6225	http://www.samsung.com/lat- in
GUATEMALA	1-800-299-0013	http://www.samsung.com/lat- in
HONDURAS	800-7919267	http://www.samsung.com/lat- in
JAMAICA	1-800-234-7267	http://www.samsung.com/lat- in
NICARAGUA	00-1800-5077267	http://www.samsung.com/lat- in
PANAMA	800-7267	http://www.samsung.com/lat- in
PUERTO RICO	1-800-682-3180	http://www.samsung.com/lat- in
REP. DOMINICA	1-800-751-2676	http://www.samsung.com/lat- in
TRINIDAD & TO- BAGO	1-800-SAMSUNG(726-7864)	http://www.samsung.com/lat- in
VENEZUELA	0-800-100-5303	http://www.samsung.com/lat- in

Europe

AUSTRIA 0810 - SAMSUNG (7267864, http://www.samsung.com/at € 0.07/min)

	Europe				
BELGIUM	02 201 2418		http://www.samsung.com/be (Dutch)		
			http://www.samsung.com/ be_fr (French)		
CZECH REPUBLIC	800 - (800-726786)	SAMSUNG	http://www.samsung.com/cz		
	Distributor pro Českou rep Samsung Zrt., česká organ		s Florenc, Sokolovská394/17, 180 00, Praha 8		
DENMARK	8 - SAMSUNG (72	267864)	http://www.samsung.com/dk		
EIRE	0818 717 100		http://www.samsung.com/ie		
FINLAND	30 - 6227 515		http://www.samsung.com/fi		
FRANCE	01 4863 0000		http://www.samsung.com/fr		
GERMANY	01805 - (7267864, € 0.14/		http://www.samsung.de		
HUNGARY	06-80-SAMSUNG	(726-7864)	http://www.samsung.com/hu		
ITALIA	800-SAMSUNG (726-7864)	http://www.samsung.com/it		
LUXEMBURG	02 261 03 710		http://www.samsung.com/lu		
NETHERLANDS	0900-SAMSUNG (0900-7267864) (4	€ 0,10/Min)	http://www.samsung.com/nl		
NORWAY	3 - SAMSUNG (72	267864)	http://www.samsung.com/no		
POLAND	0 801 1SAMSUN	G (172678)	http://www.samsung.com/pl		
	022 - 607 - 93 - 33	3			
PORTUGAL	808 20 - (7267864)	SAMSUNG	http://www.samsung.com/pt		
SLOVAKIA	0800-SAMSUNG	(726-7864)	http://www.samsung.com/sk		
SPAIN	902 - 1 - SAMSUN 678)	NG(902 172	http://www.samsung.com/es		
SWEDEN	0771 726 7864 (S	AMSUNG)	http://www.samsung.com/se		
SWITZERLAND	0848 - SAMSUNO CHF 0.08/min)	G (7267864,	http://www.samsung.com/ch		
U.K	0845 SAMSUNG	(7267864)	http://www.samsung.com/uk		
		CIS			
BELARUS	810-800-500-55-5				
ESTONIA	800-7267		http://www.samsung.com/ee		
LATVIA	8000-7267		http://www.samsung.com/lv		
LITHUANIA	8-800-77777		http://www.samsung.com/lt		
MOLDOVA	00-800-500-55-50	00			
KAZAKHSTAN	8-10-800-500-55-	500	http://www.samsung.com/ kz_ru		
KYRGYZSTAN	00-800-500-55-50	00			
RUSSIA	8-800-555-55-55		http://www.samsung.com/ru		
TADJIKISTAN	8-10-800-500-55-	500	-		
UKRAINE	8-800-502-0000		http://www.samsung.com/ua		

CIS

	010	
		http://www.samsung.com/ ua_ru
UZBEKISTAN	8-10-800-500-55-500	http://www.samsung.com/ kz_ru
	Asia Pacific	
AUSTRALIA	1300 362 603	http://www.samsung.com/au
CHINA	400-810-5858	http://www.samsung.com/cn
	010-6475 1880	
HONG KONG	3698 - 4698	http://www.samsung.com/hk
		http://www.samsung.com/ hk_en/
INDIA	3030 8282	http://www.samsung.com/in
	1-800-3000-8282	
INDONESIA JAPAN MALAYSIA NEW ZEALAND PHILIPPINES SINGAPORE THAILAND	786) 1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777 1800-SAMSUNG(726-7864) 1800-29-3232, 02-689-3232	http://www.samsung.com/id http://www.samsung.com/jp http://www.samsung.com/my http://www.samsung.com/nz http://www.samsung.com/ph
TAIWAN	0800-329-999	http://www.samsung.com/tw
VIETNAM	1 800 588 889	http://www.samsung.com/vn
	Middle East & Africa	1
SOUTH AFRICA	0860-SAMSUNG(726-7864) 444 77 11	http://www.samsung.com/za
TURKEY U.A.E	444 77 11 800-SAMSUNG(726-7864)	http://www.samsung.com/tr http://www.samsung.com/ae
	8000-4726	
	0000-120	

Terms

Dot Pitch

The image on a monitor is composed of red, green and blue dots. The closer the dots, the higher the resolution. The distance between two dots of the same color is called the 'Dot Pitch'. Unit: mm

Vertical Frequency	The screen must be redrawn several times per second in order to create and display an image for the user. The fre- quency of this repetition per second is called the Vertical Frequency or Refresh Rate. Unit: Hz
	Example: If the same light repeats itself 60 times per sec- ond, this is regarded as 60 Hz.
Horizontal Frequency	The time to scan one line connecting the right edge to the left edge of the screen horizontally is called the Horizontal Cycle. The inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz
Interlace and Non-Interlace Methods	Showing the horizontal lines of the screen from the top to the bottom sequentially is called the Non-Interlace method while showing odd lines and then even lines in turn is called the Interlace method. The Non-Interlace method is used for the majority of monitors to ensure a clear image. The Inter- lace method is the same as that used in TVs.
Plug & Play	This is a function that provides the best quality screen for the user by allowing the computer and the monitor to ex- change information automatically. This monitor follows the international standard VESA DDC for the Plug & Play func- tion.
Resolution	The number of horizontal and vertical dots used to compose the screen image is called the 'resolution'. This number shows the accuracy of the display. A high resolution is good for performing multiple tasks as more image information can be shown on the screen.
	Example: If the resolution is 1920 x 1080, this means the screen is composed of 1920 horizontal dots (horizontal resolution) and 1080 vertical lines (vertical resolution).

Correct Disposal

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) - Europe only



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product - Europe only



(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

🖉 Note

The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.

Authority

Information in this document is subject to change without notice.

© 2009 Samsung Electronics Co., Ltd. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Samsung is the registered trademark of Samsung Electronics Co., Ltd.; Microsoft, Windows and Windows NT are registered trademarks of Microsoft Corporation; VESA, DPM and DDC are registered trademarks of Video Electronics Standard Association; the ENERGY STAR[®] name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.



TruSurround XT, SRS and (•) Symbol are trademarks of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.

CALIFORNIA USA ONLY (Applicable for networking models only.)

This Perchlorate warning applies only to primary CR(Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA

"Perchloate Material - special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate."