

User Guide

This user guide will tell you how to start using the tablet and how to use important functions.

Startup and Shutdown

Keep pressing the power button for 5 seconds, the product will select on or off status.

About SIM Card

A full size SIM card is used. Do NOT use a Mini or micro SIM card. In order to protect your SIM card more fully, our SIM card holder use built-in SIM card lock design. To unlock, you must depress the SIM card.

Note: To prevent damage to the SIM card, please always turn off the power before inserting or removing the card.

Insert or Remove The SIM Card:

1. Make sure the tablet is power off.
2. Open the rubber dust plug.
3. Insert or remove the SIM card. Insertion should follow the orientation warning label beside the SIM card holder.

Note: To prevent damage of the SIM card, please make sure tablet power off before inserting or removing the card.

Charging the Battery

1. Always use the charger that came with your tablet.
2. Open the rubber dust plug.
3. Insert the charger micro USB plug into the micro USB socket on the tablet.
4. The tablet will show a charging icon.
5. Continuous charging is needed more than 10 hours for the first time. In order to ensure effective activation, it needs full charge-discharge cycles (more than three times).

Unlocking and Locking the Screen

Press power button briefly to lock or unlock the screen. With your finger, slide to unlock logo to a function icon, then you can unlock the screen or activate the camera, depending on which icon you slide to..




Go To The Desktop

If you slide to the unlock icon, it will unlock to the desktop, all installed applications will be displayed on it. You can touch the icon to open the corresponding application. You can also slide any icon for sorting and positioning. If you need to uninstall the application, drag the icon to trash can on the top of screen.



Manage Contact

The system supports a variety of ways to add contacts. Please select importing your contacts from your SIM card or SD card at the first use. You can also synchronize from you Google account.

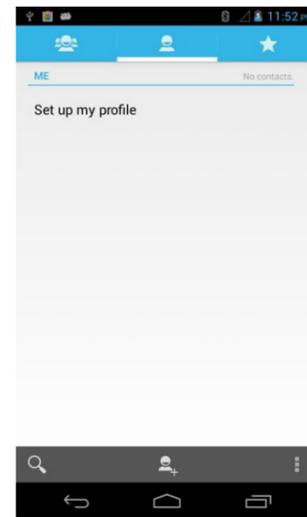


Call

If a SIM card is installed, you can use the dial icon and keypad to make a call or search for contacts with initials, spelling or a phone number. Search results are depend on matching degree and frequency of contact by sorting. A missed call is red.




Sending SMS

The tablet supports sending messages to one or more contacts. SMS messaging supports sending insert text, pictures, emoticons, contact information, audio, and video. The message content also can be selected to be forwarded or add to favorites.

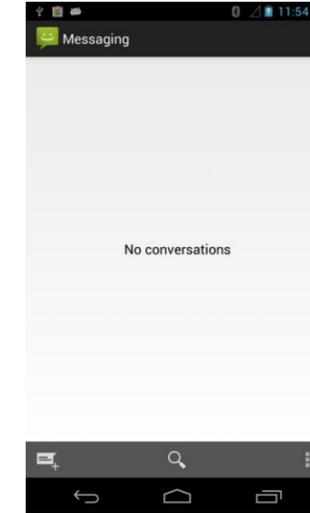

E-mail

Set up your email account, and then you can use the tablet to send messages. A notice will be displayed when a new E-mail is received. Multiple email accounts can be added to the email application and simultaneously monitored.

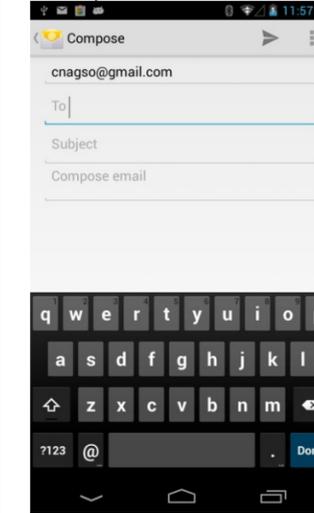


Taking Pictures or Video

Press on the camera icon to take high quality photos. The camera supports rapid focus adjusting, continuous shooting, timing, special effects, and other more professional camera modes. Just switch to the shooting mode in the menu when you need to shoot a video. The camera supports 720P HD video recording.




Displaying pictures

The gallery program (shown) will display all images on the tablet no matter what folder it is saved in. You can double-click to make any thumbnail full screen or two finger touch and expand/contract to scale toggle a single picture, you can sliding around and switch to the previous or next picture. You can touch the image to show or hide in the menu.

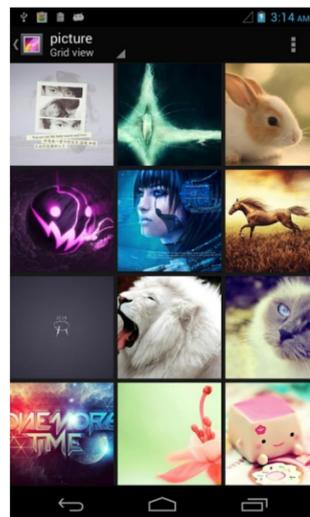


Music

The music application supports playing local music and online music. It also supports different playing music modes by song name, artist, album, playlist.

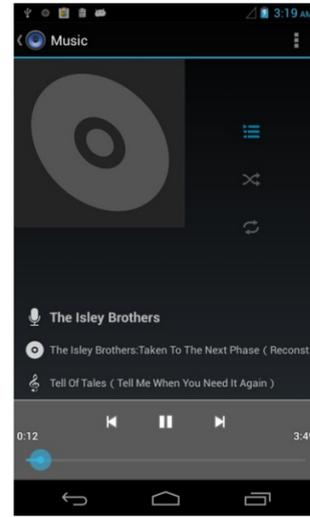


Web browser

The web browser application supports double-click or two fingers drag to scale web pages. Popular sites are listed on the home menu. Support multi-tab which click the tab to switch pages. The tablet will scale web pages intelligently for the best viewing.

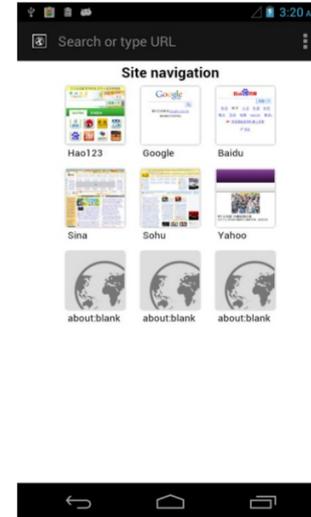


View Notifications

When you get a new call or an SMS notification, you can slide up and down from the top status bar to view the notification details. At the bottom of notification bar has a quick switch button which supports user-defined display and switch position order. Press the three offset bars to clear all messages.

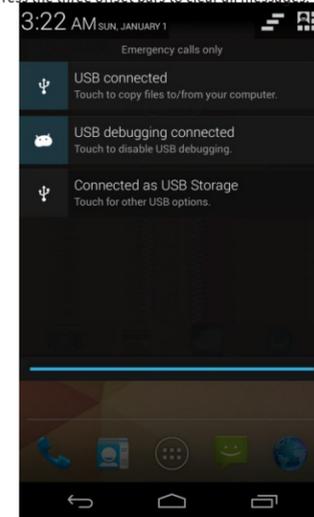


Switching Multiple Tasks

The tablet supports running multiple tasks simultaneously. You only need to touch the layered windows icon to select what running program you want.

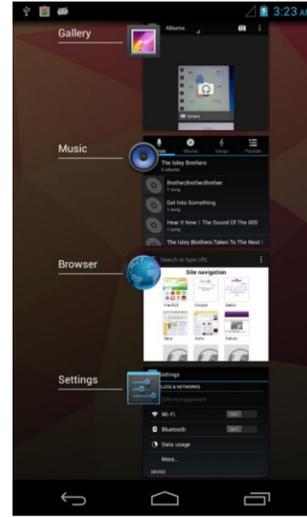


Change Wallpaper

To touch the screen on the home page, long press on a blank space on the desktop. Choose wallpaper application, and then choose the wallpaper. The gallery program will allow you to assign any image on the tablet as wallpaper.

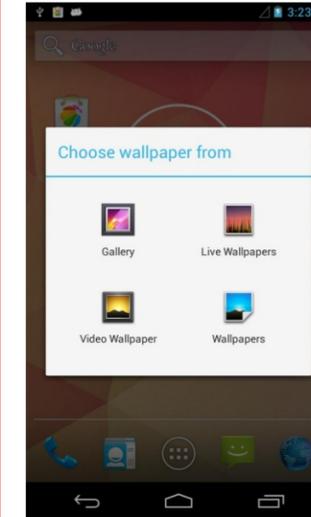


Add Desktop widgets

Tap the Apps icon (circle with six squares) and tap the Widgets page, then press a widget and drag to the desktop page you wish.

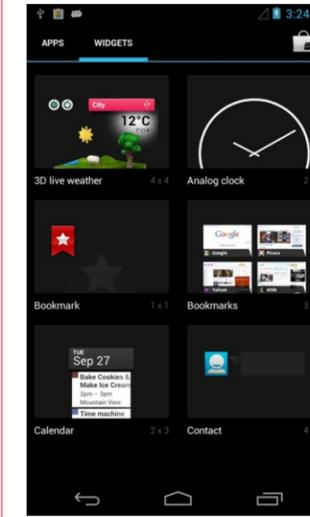

Download More Applications

Open the Android Play Store and search for and install necessary applications. A Google user account linked to the tablet is required to be able to download free applications.

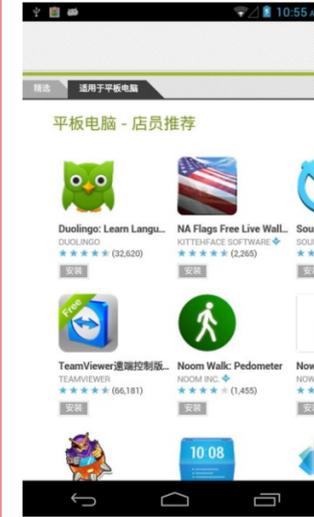

Setting Shortcuts

Slide the drop-down menu and you can create the shortcuts. Such as open and close WiFi, Bluetooth, GPS, setting brightness, standby, data connection, etc.

