Podium Printer Tray Installation
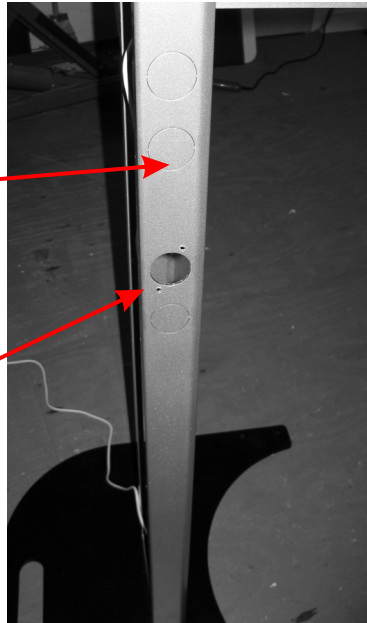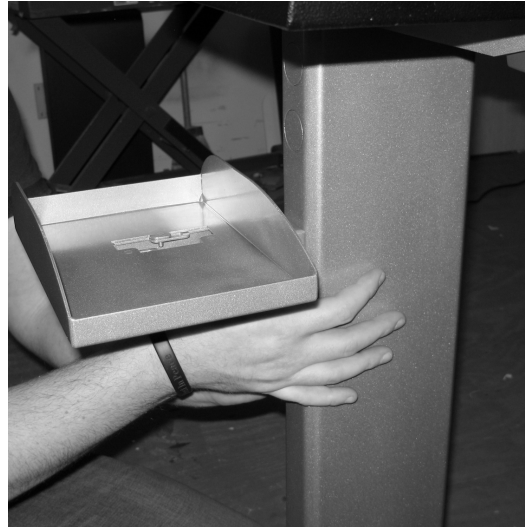
1) Locate puch-outs on left or right side of the Podium and punch-out hole at height desired.

2) Position shelf over the hole and mark 2 locations for drilling using the holes in the shelf arm as a template. Drill 2 holes.

Use a screwdriver and hammer to hit the knockout here - it will twist and then you can work it back & forth and remove it.

Hole knocked-out and holes drilled.

3) Attach the printer tray using (2) 8-32 x ½" PH screws and (2) 8-32 x 11/32" lock nuts as shown.