

## H1030 Heckler Stand for Rally Board 65

## In this guide

Safety Information and Precautions

In the box

Install casters

Install Legs

Install Columns

Install the Rally Board 65

Mount the Rally Board 65

Install the column Cap

Organize cables

Nesting Multiple Stands

Removing legs and columns.

Questions?

# Guide information

Assemble the stand, mount Rally Board 65, organize cables, and review nesting and disassembly.

|                |               |                     |
|----------------|---------------|---------------------|
| Product family | Product codes | Hardware generation |
| Mobile Fleet   | H1030         | H1030               |

|                    |            |
|--------------------|------------|
| Guide revision     | Updated    |
| release-2026-10-28 | 2026-10-29 |

Applies to  
H1030 Heckler Stand for Rally Board 65.

Online guide  
<https://heckler.com/library/h1030-heckler-stand-for-rally-board-65-installation-guide>

# Safety Information and Precautions



## Important: Read Before Assembly

Thank you for choosing the Heckler Stand for Rally Board 65. To ensure safe and proper assembly, operation, and maintenance of this product, it is essential to thoroughly read and understand this user guide before beginning any assembly.


Failure to follow the instructions and safety guidelines provided in this manual may result in serious personal injury, equipment damage, or voided warranties.


- **Assembly Requirements:** This product requires multiple people to safely mount the display. Attempting to mount the display alone could result in injury or damage to the equipment.
- **Weight and Stability:** Ensure that the stand is placed on a stable, level surface during assembly and when in use. Uneven or unstable surfaces may cause the stand to tip over, leading to potential injury or damage.
- **Use Proper Tools:** Only use the recommended tools for assembly. Improper tools or techniques may damage the components and compromise the safety and stability of the stand.
- **Display Mounting:** This stand is compatible only with the Logitech Rally Board 65. Attempting to mount other devices and displays can cause instability resulting in injury or damage.
- **Secure All Components:** Ensure all bolts, screws, and other fasteners are securely tightened and engaged as per the instructions. Loose or improperly engaged components may cause the stand or display to become unstable.
- **Electrical Safety:** If your display or any attached components require electrical connections, ensure that all wiring is correctly installed and free of damage. Avoid routing cables where they could be pinched or damaged during assembly or operation.
- **Routine Inspection:** Regularly inspect the stand and mounted display for any signs of wear, damage, or loose components. Address any issues immediately to maintain safety and functionality.

Heckler Design is not liable for any injuries, damages, or losses resulting from improper assembly, use, or maintenance of this product. By assembling and using this product, you agree to follow all safety guidelines and instructions provided in this user guide.

## In the box

- a. 1 x Beam (R1027)
- b. 2 x Column (R1042)
- c. 4 x Leg (R1028)
- d. 4 x caster (F189)
- e. 1 x Assembly Hex Key (F523)
- f. 1 x Assembly Hex Key (F674)
- g. 2 x Column Cap (P282)
- h. 4 x Cable manager (P275)
- i. 4 x Display lower mounting screw (F296)
- j. 2 X Display upper mounting screw (F694)

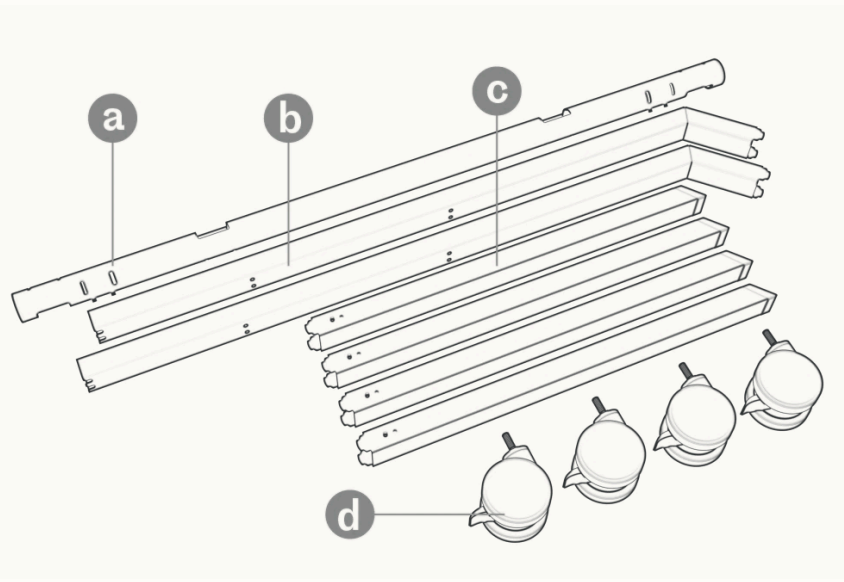

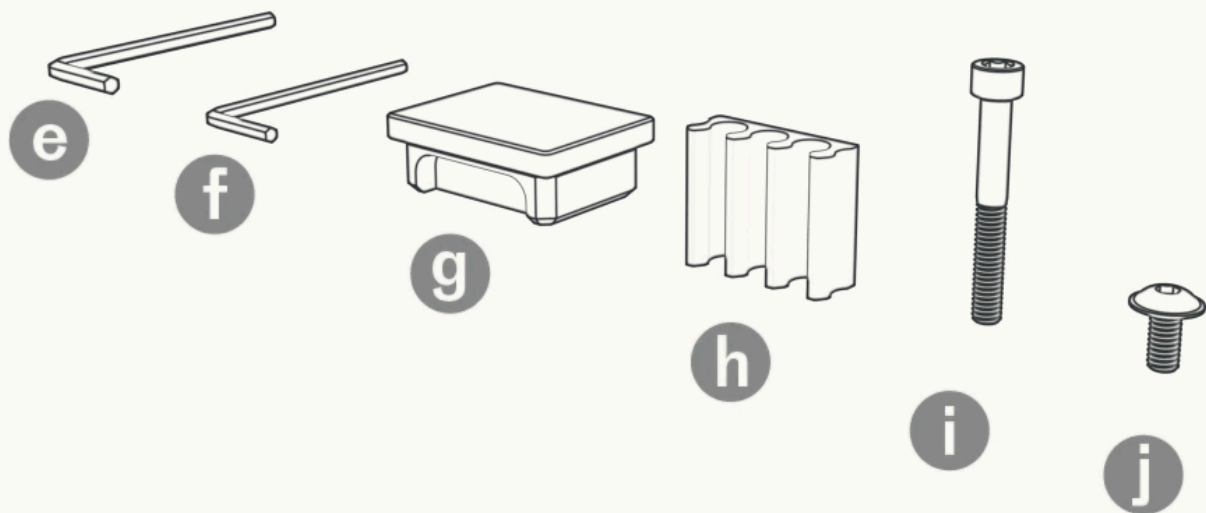

## Step 1


# Install casters

Engage the caster brake.



The casters have a total lock feature, locking the wheels from spinning as well as the swivel axis from swiveling.


Thread the caster into the leg socket.

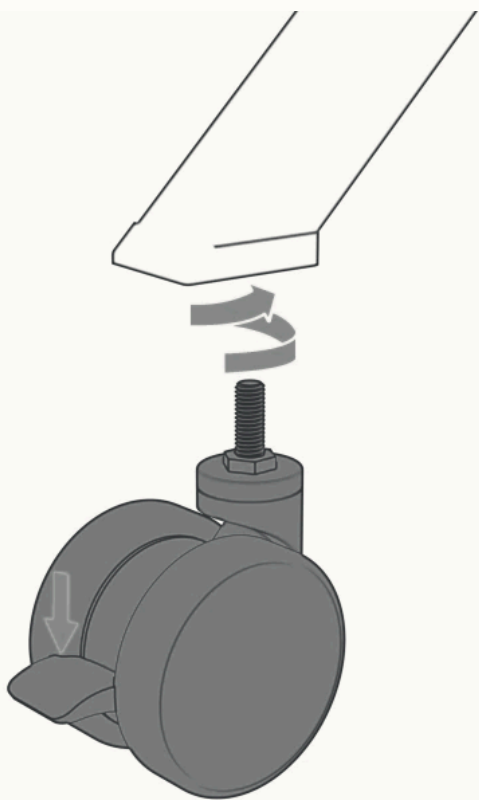

## Step 2


### Install casters

Thread the caster all the way into the leg insert. The hex feature of the caster should be fully seated inside the leg socket.

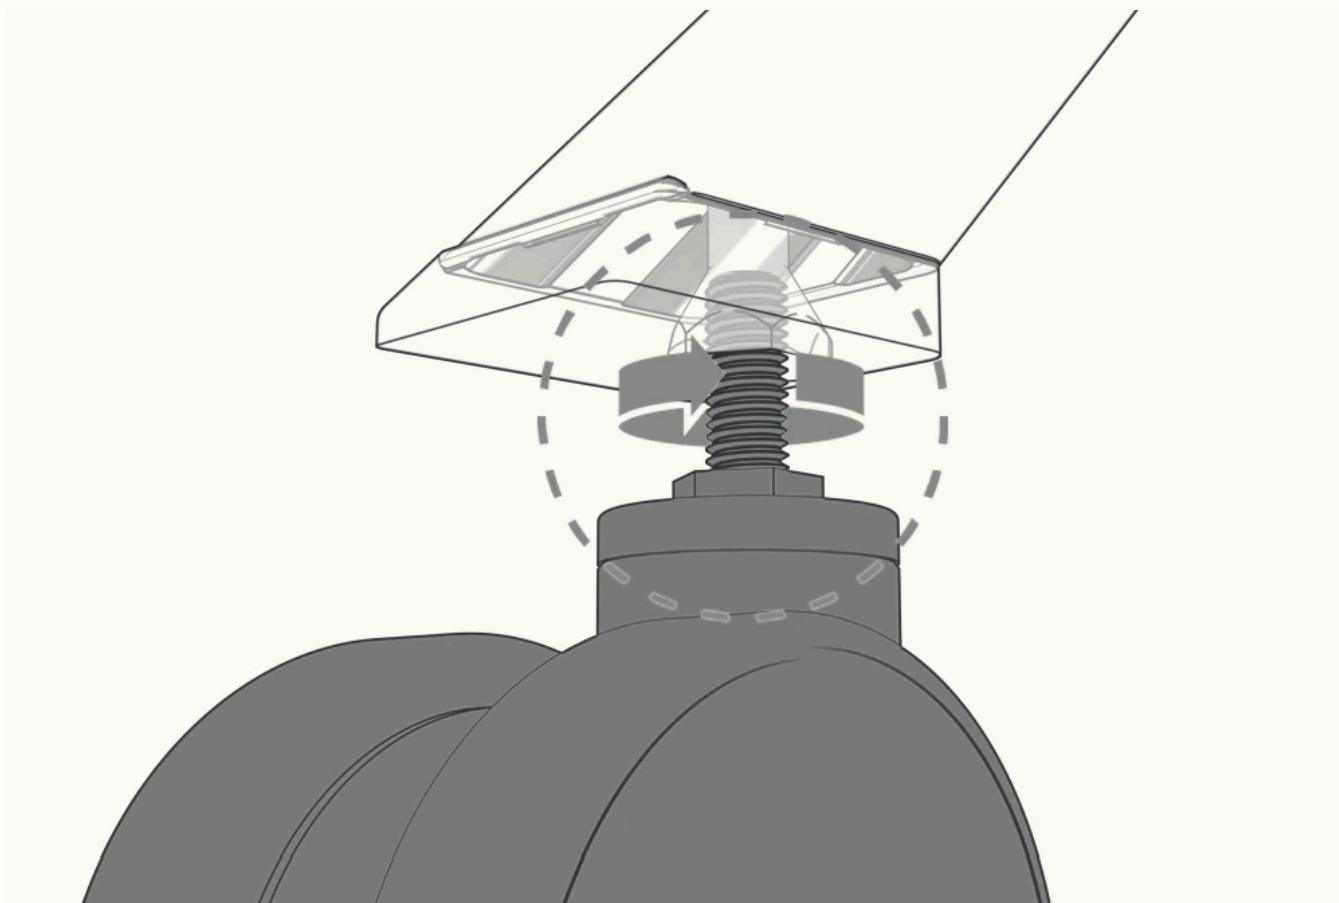

Step 2 (continued)

## Install casters

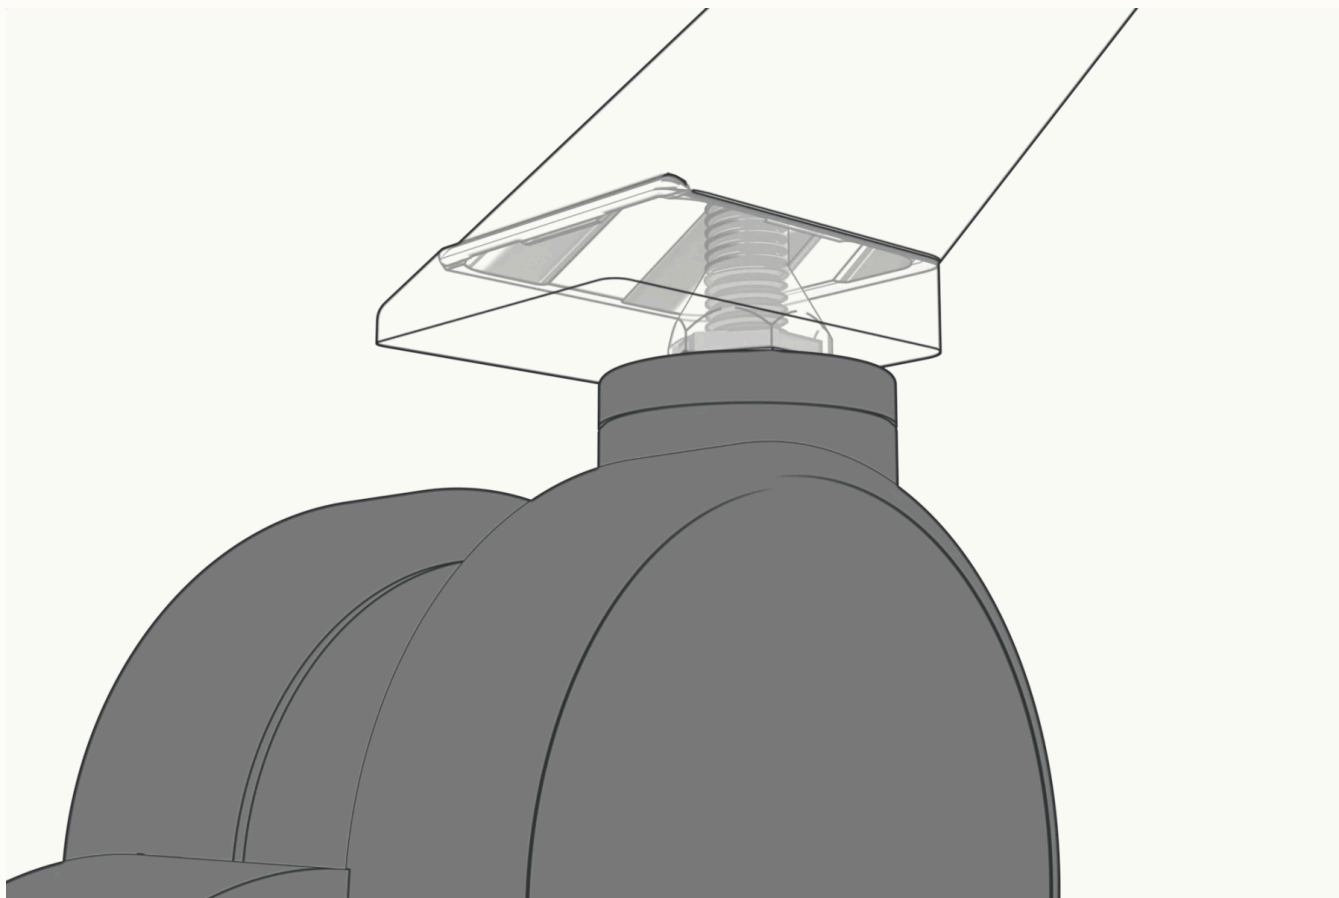

### Step 3


## Install Legs

💡 All four legs are identical. You can mount any leg in any leg socket.

Lay the beam on the ground and install the first leg.

⚠ If the leg becomes misaligned during your installation attempt, remove the leg from the socket and try again. Attempting to pry or force a misaligned leg into position may cause damage to the stand.

Use the supplied hex key to back out each set screw so the leg can slide into the socket without striking the tips of the set screws.

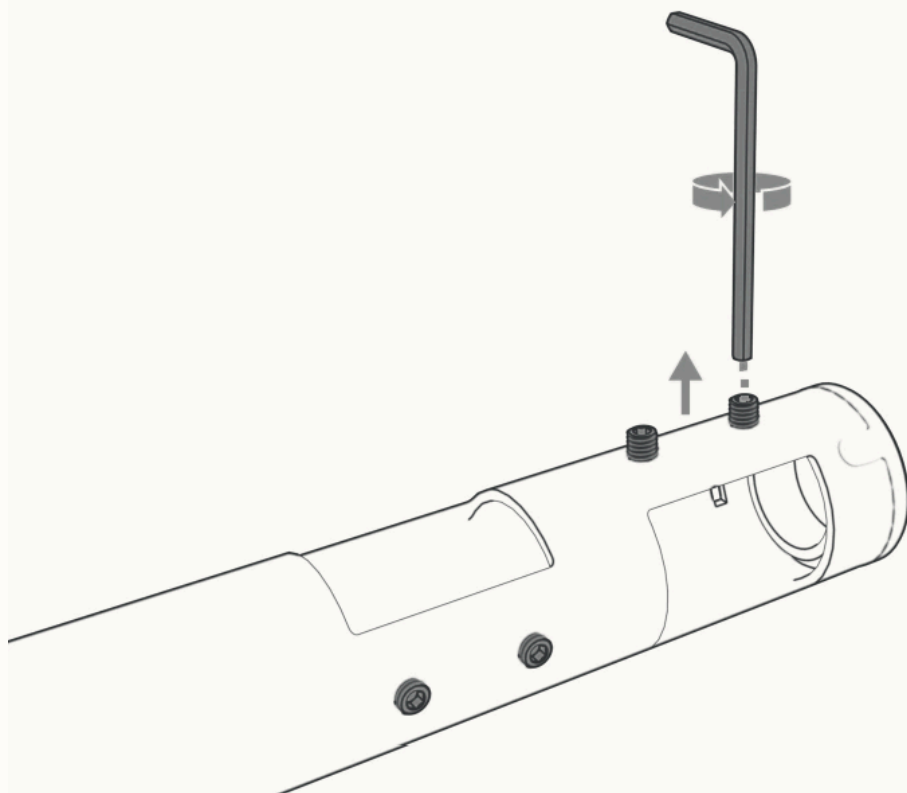

Step 3 (continued)

## Install Legs




Each leg socket ships with two set screws pre-installed. Check to ensure two set screws are present at each leg socket location. If any set screws are missing, check your packaging and contact Heckler customer service for replacement parts.

Step 4

## Install Legs

Orient the leg so that the surface with the two holes aligns with the two set screws.


Insert the leg into the socket.

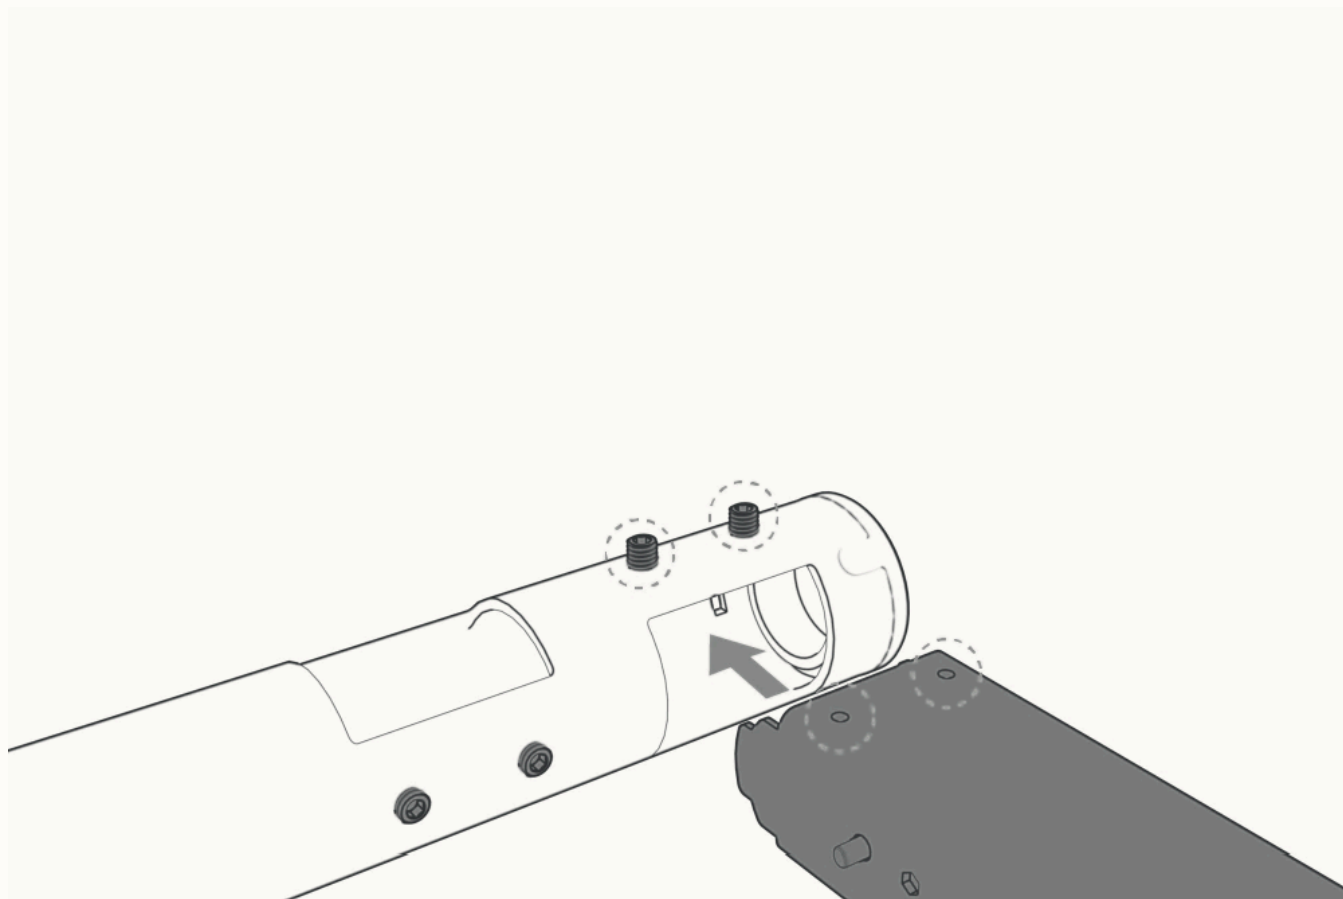

Step 5

## Install Legs


Depress the silver safety push pin on the side of the leg, then push the leg fully into the socket.

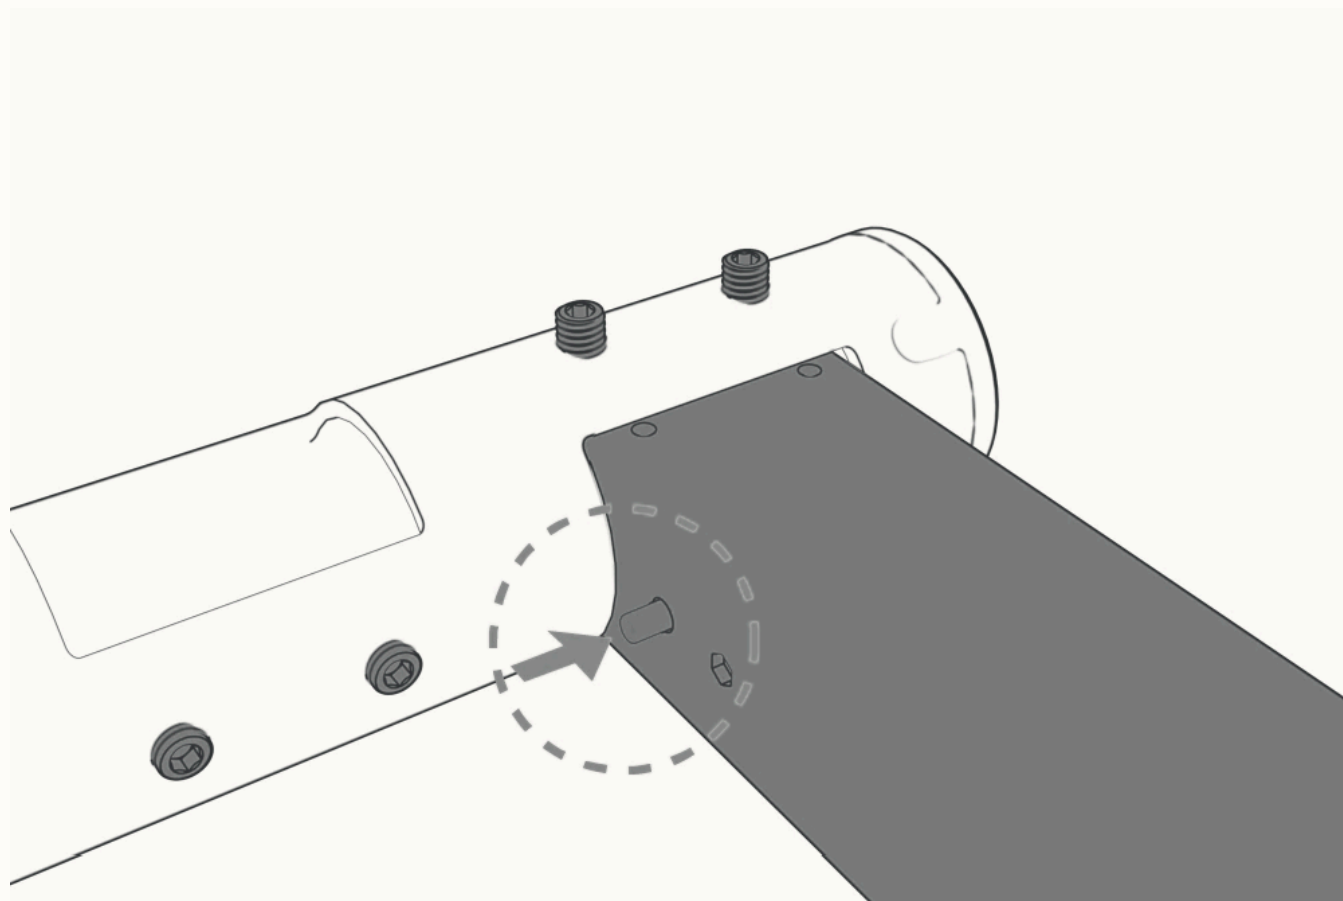

## Step 6

### Install Legs

When correctly inserted, the safety push pin will click inside of the round beam tube and the two tabs on the end of the leg will be flush with the outside surface of the beam.

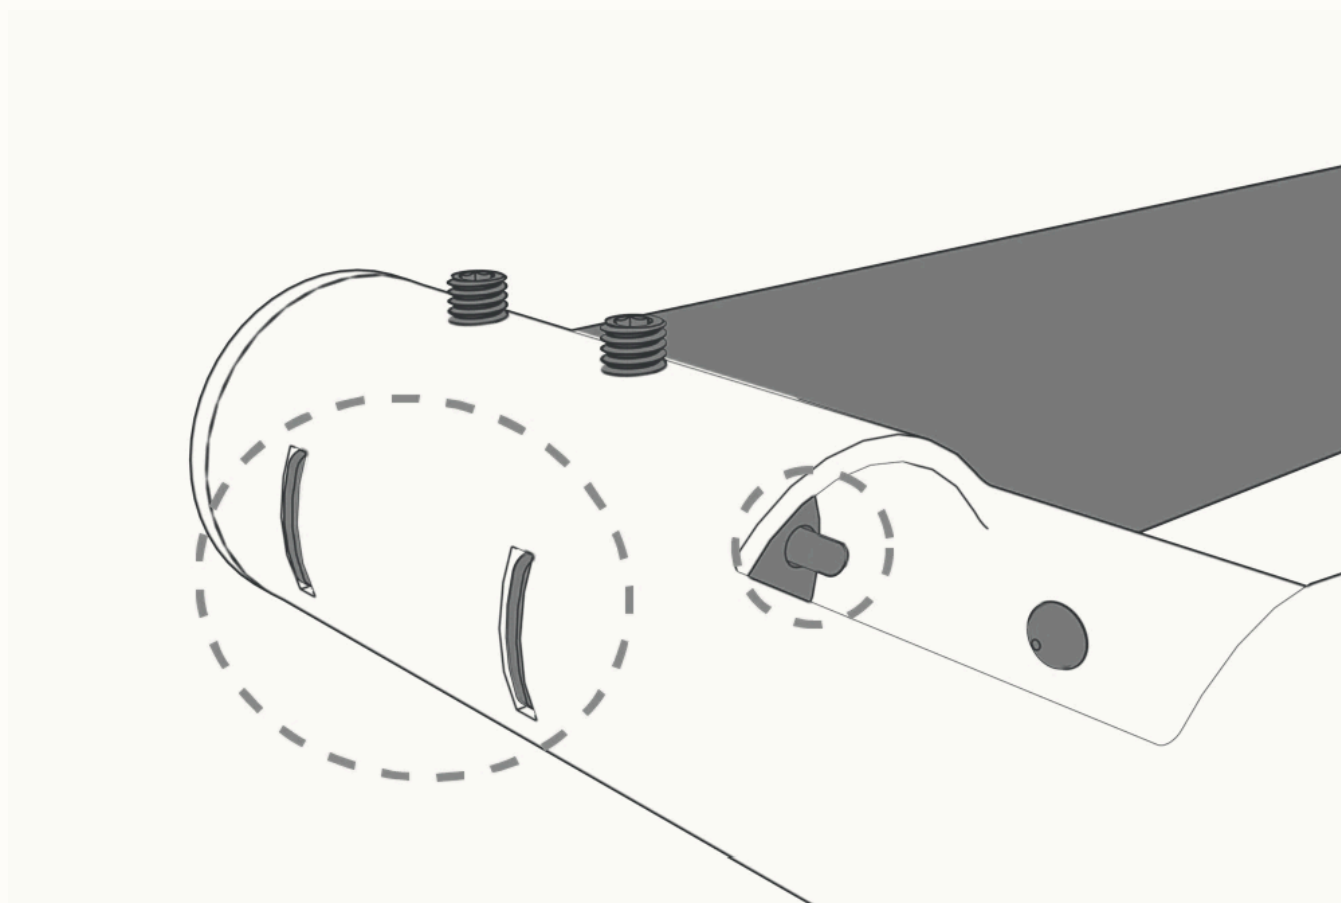


## Step 7

# Install Legs

Tighten the two set screws.

 Tighten the screws firmly, but do not overtighten.

 As the set screws fasten into place, the conical tip of the set screws will align with the conical holes in the leg. You'll feel the leg align into its final position.

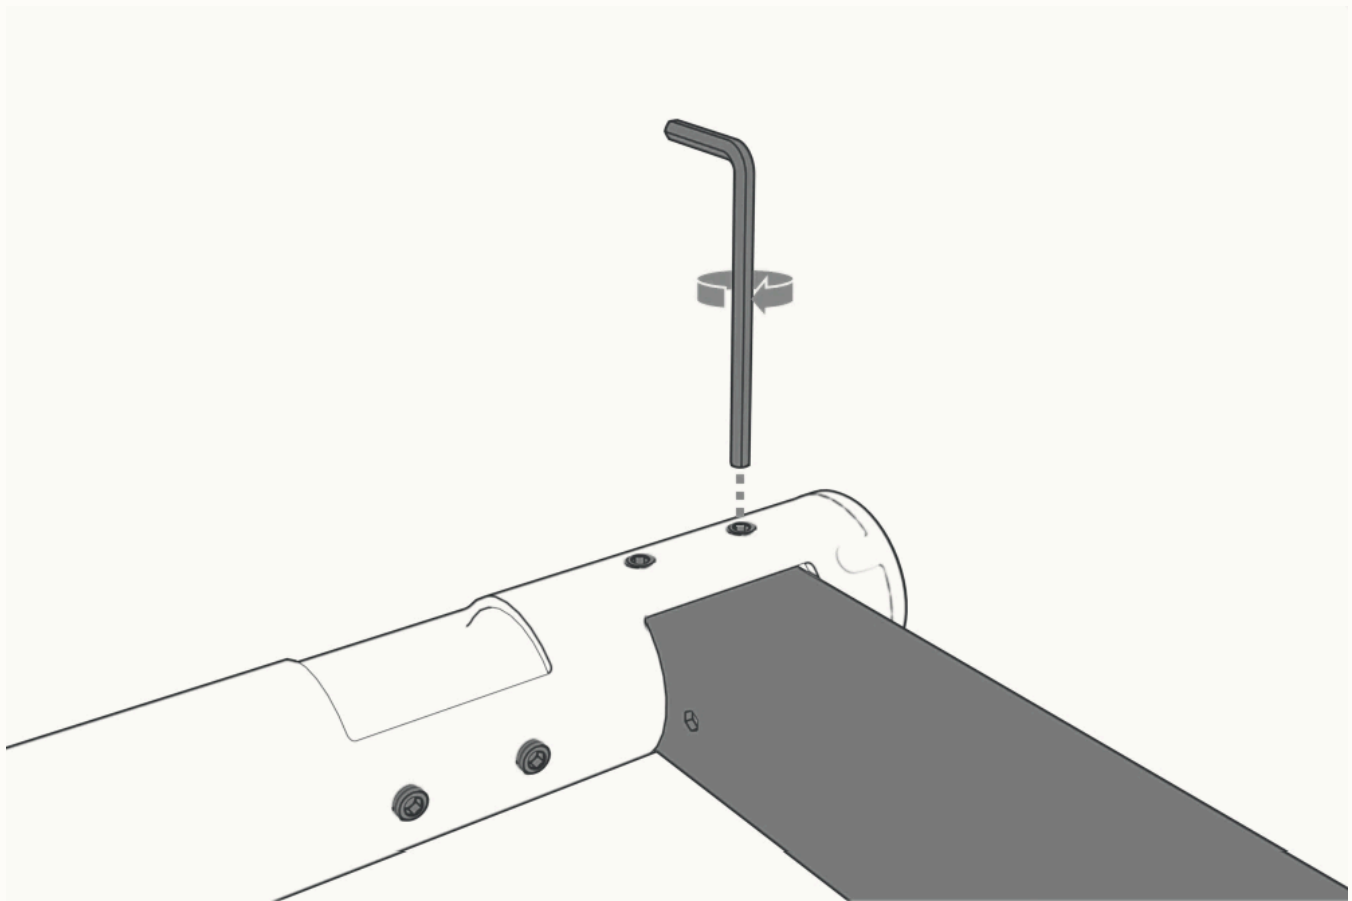


## Step 8

### Install Legs




Ensure the set screws are fully screwed into the leg. The set screws should rest near-flush to the beam surface. The set screws should not sink into the beam beyond flush.

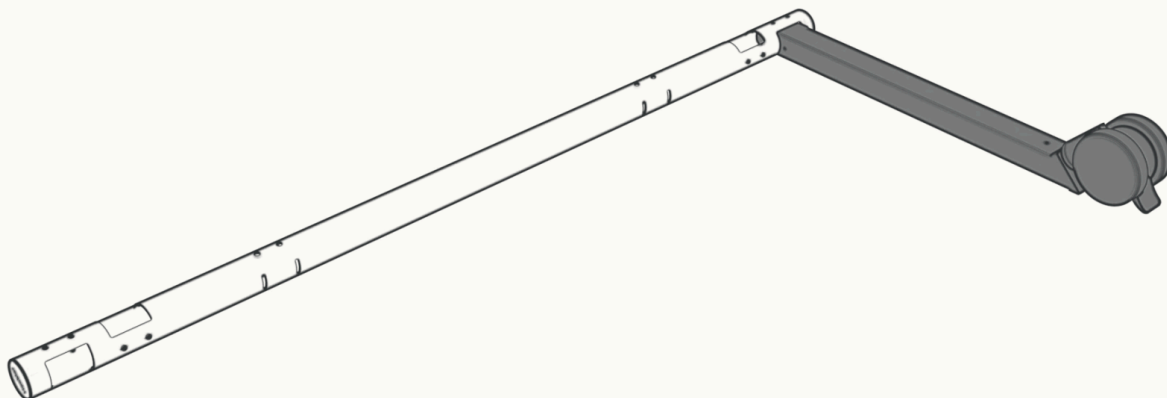

Step 9

## Install Legs

Repeat this process for the rear leg while the beam and first leg rest on the ground or tabletop.

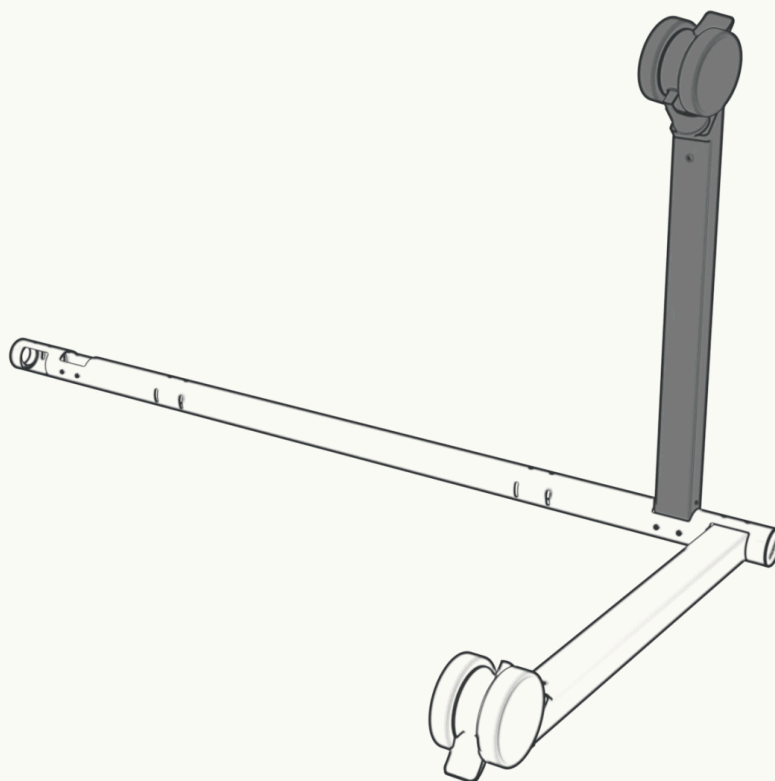


Step 10

## Install Legs

Repeat the process with the remaining two legs.


Upright the completed stand base.

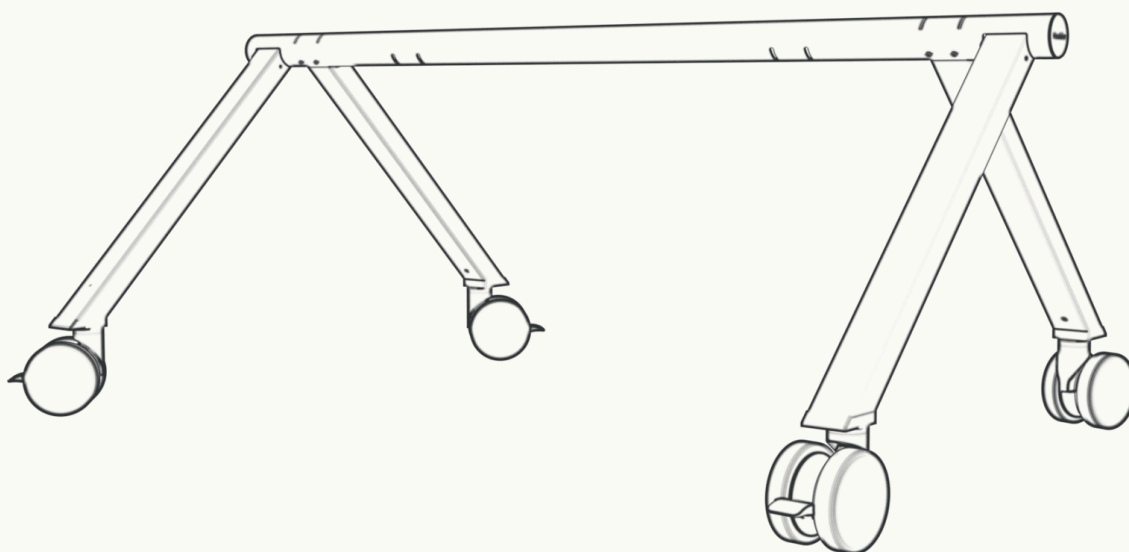

Step 11

## Install Columns

Engage the brake on all four casters.

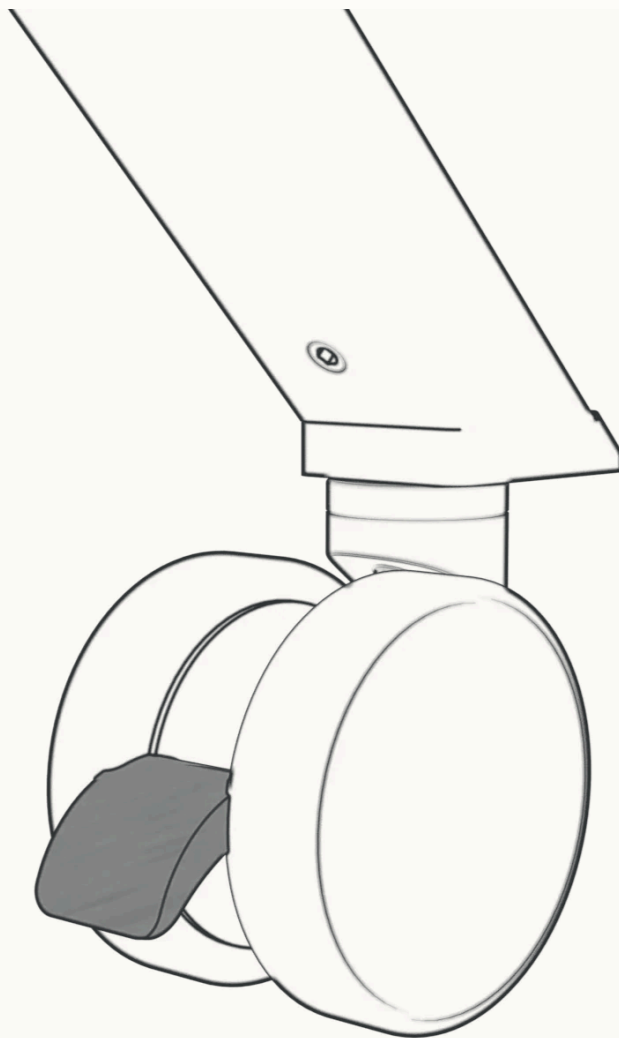

## Step 12


### Install Columns

Identify the two column sockets on the beam.

Use the supplied hex key to back out each set screw so the column can slide into the socket without striking the tips of the set screws.



Each column socket ships with two set screws pre-installed. Check to ensure two set screws are present at each column socket location. If any set screws are missing, check your packaging and contact Heckler customer service for replacement parts.

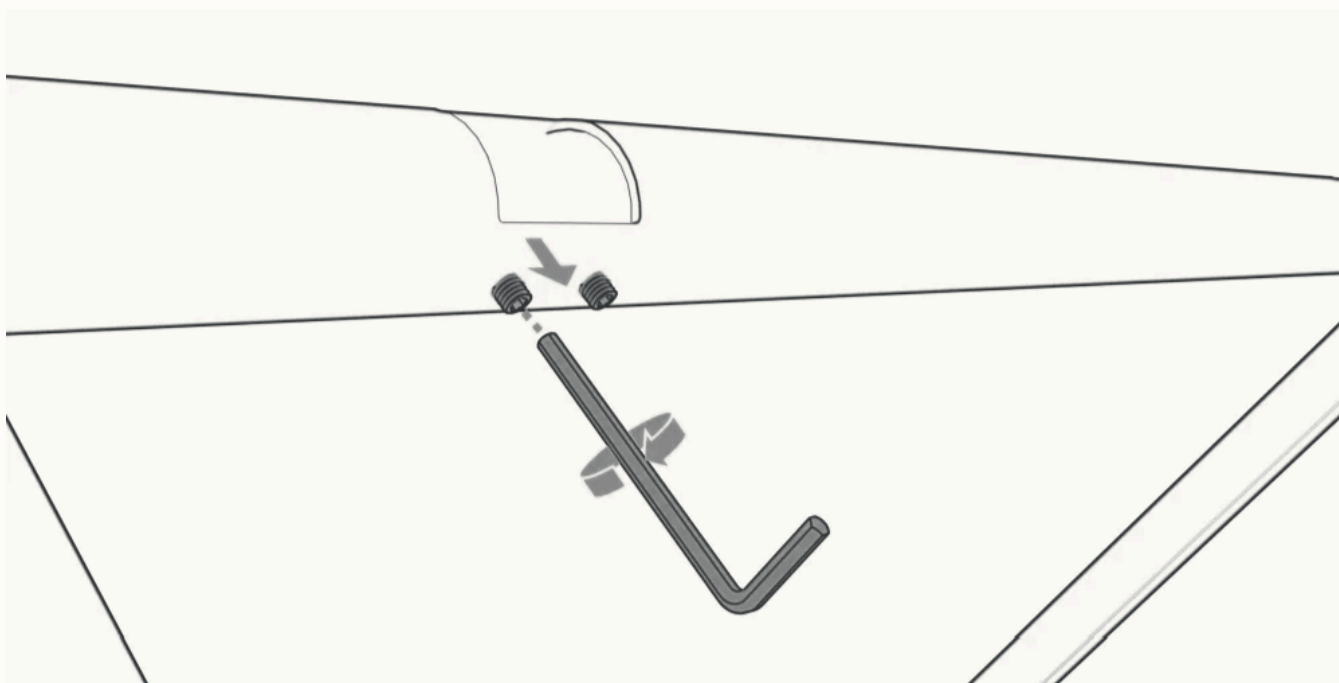


### Step 13

## Install Columns

Align and insert the end of the column with the socket on the beam.


 Both columns are identical and can be installed in either socket.

 Hold the column vertically throughout this process to ensure proper socket alignment. If the column becomes misaligned during your installation attempt, remove the column from the socket and try again. Attempting to pry or force a misaligned column into position may cause damage to the stand.

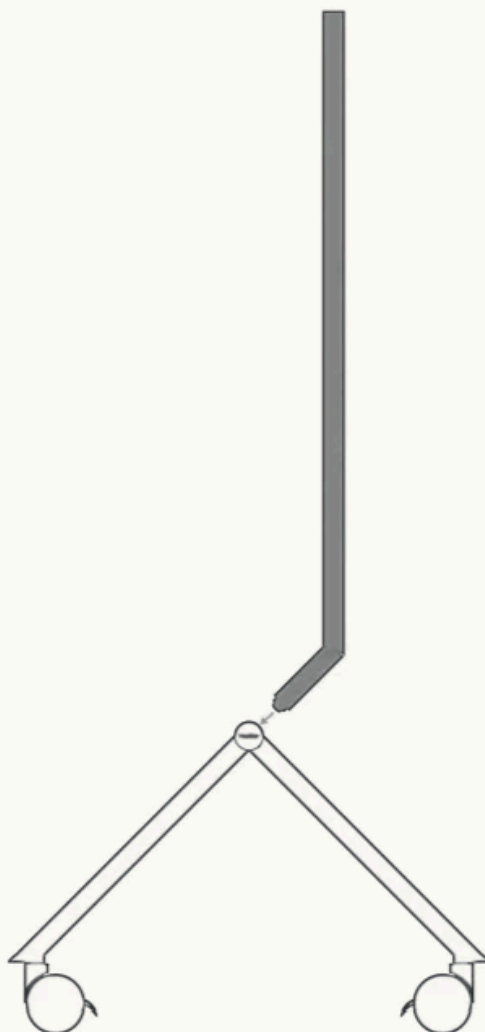


Step 13 (continued)

## Install Columns

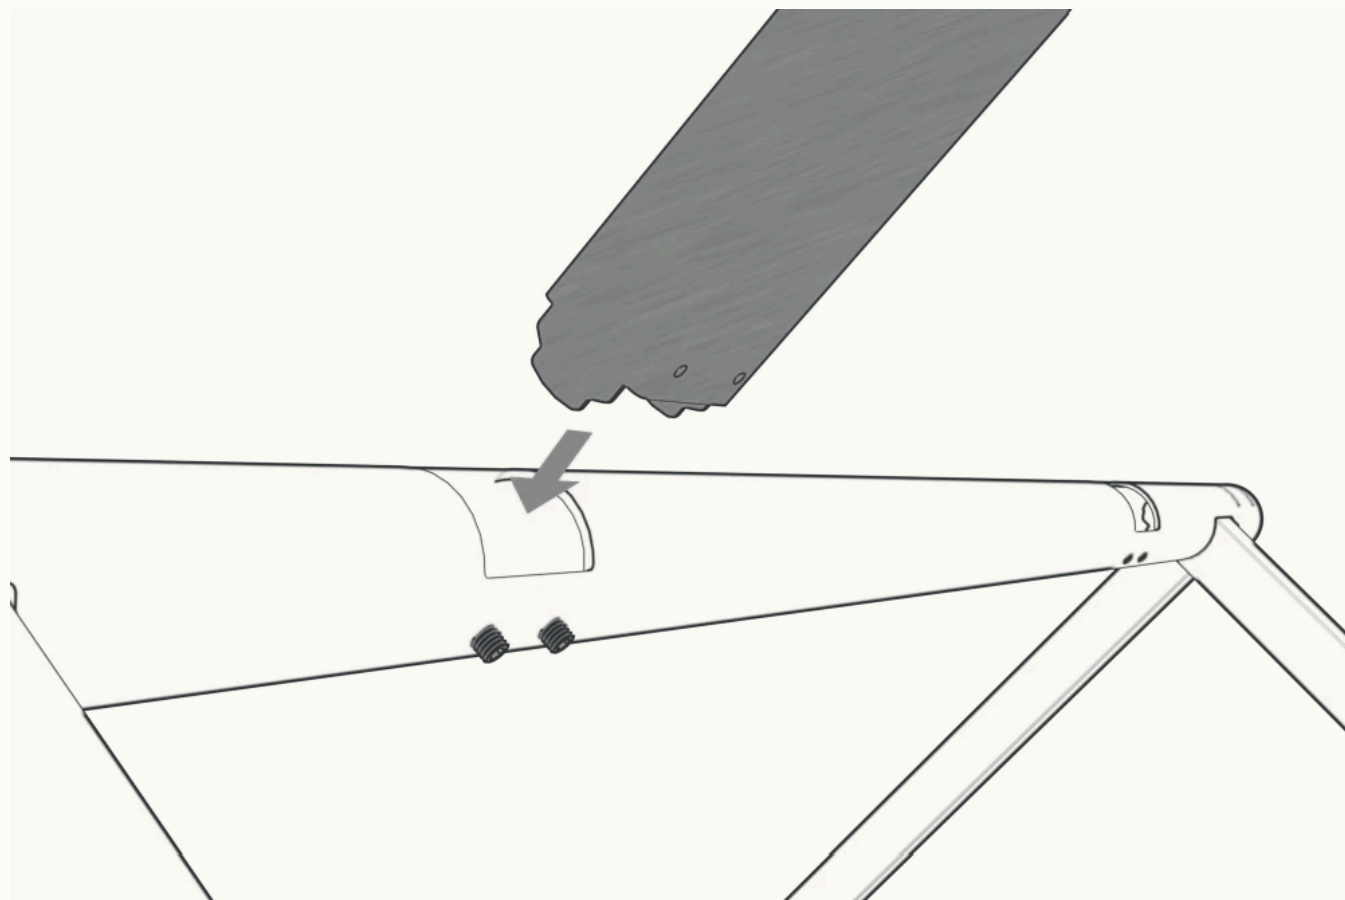

Step 13 (continued)


## Install Columns

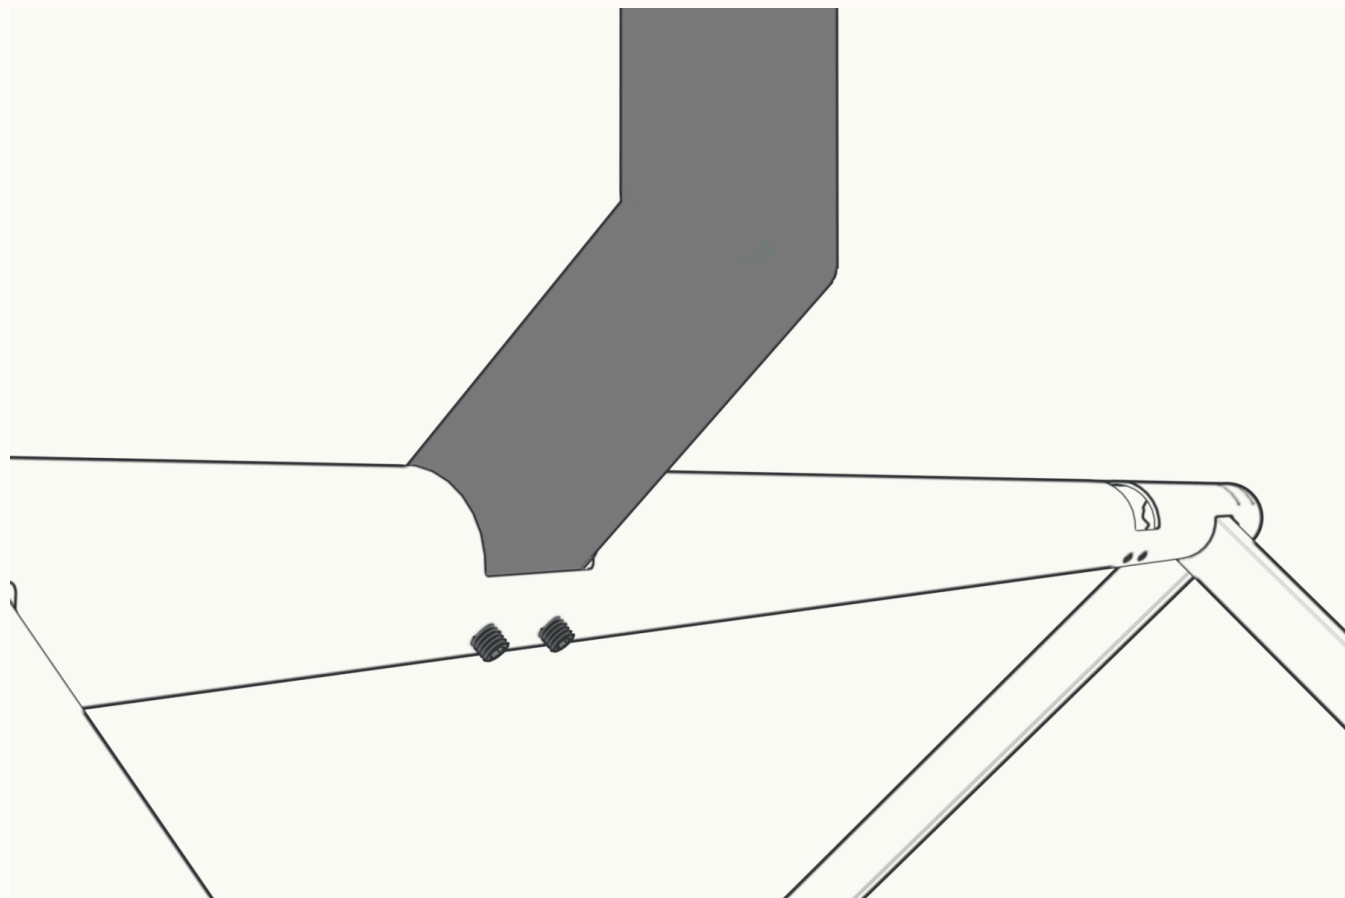

Step 14


## Install Columns

Ensure the tabs of the column rest flush with the outer surface of the beam. Tighten both column set screws firmly without overtightening. They should sit near-flush with the beam surface, not below it.

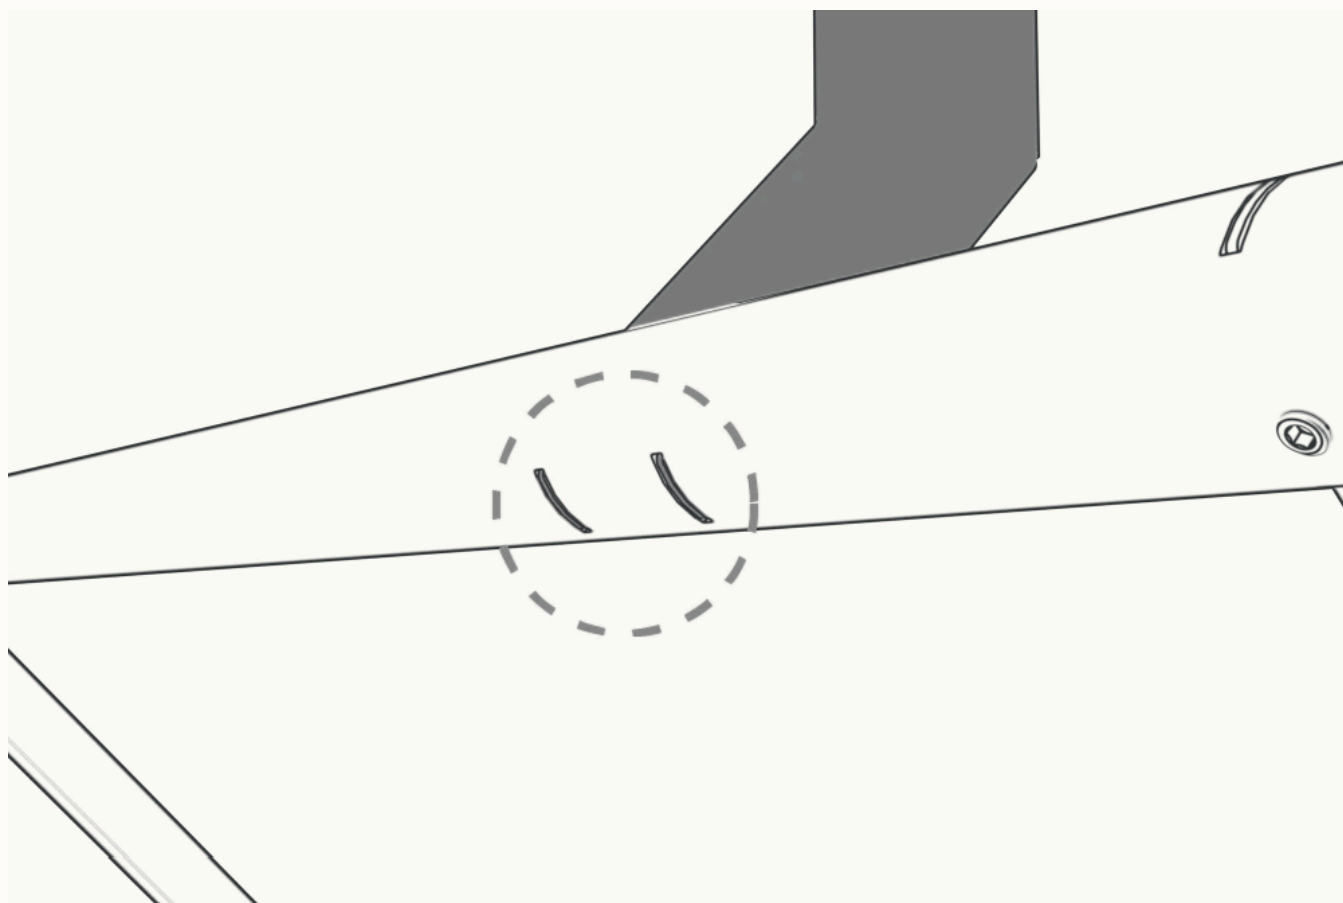


Step 14 (continued)

# Install Columns

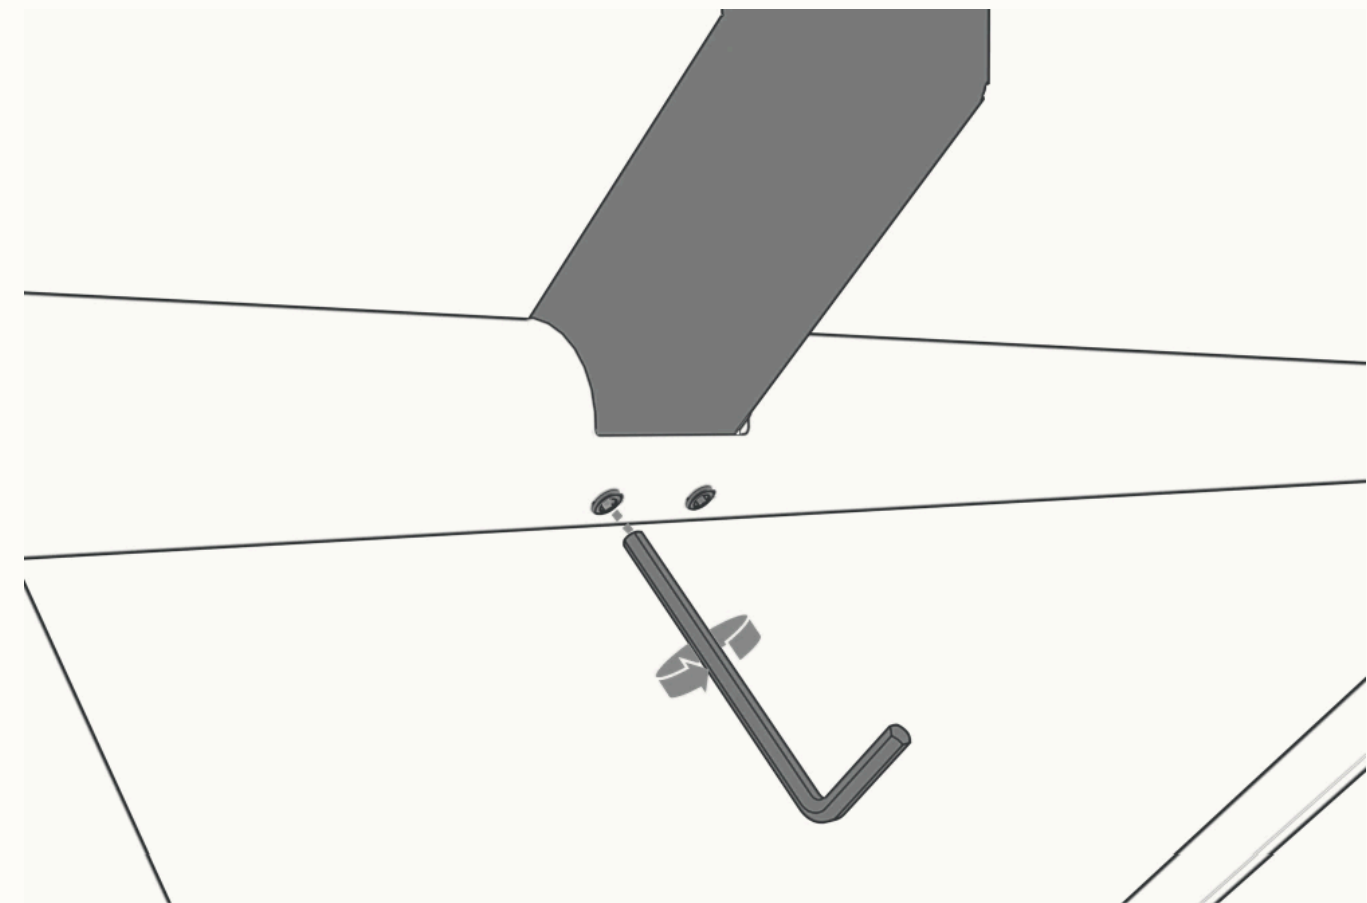


Step 14 (continued)

# Install Columns

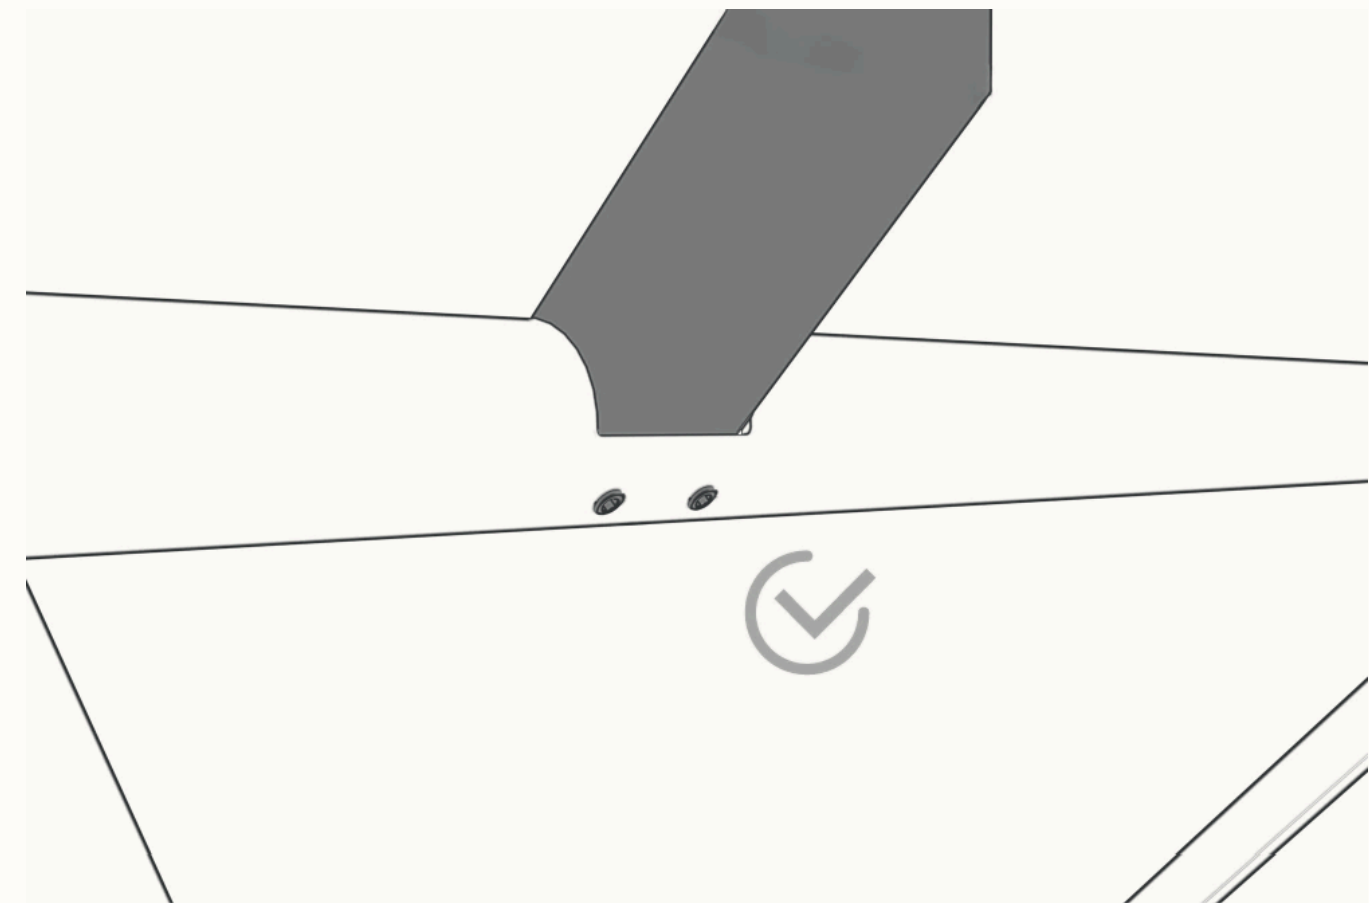

Step 14 (continued)


# Install Columns

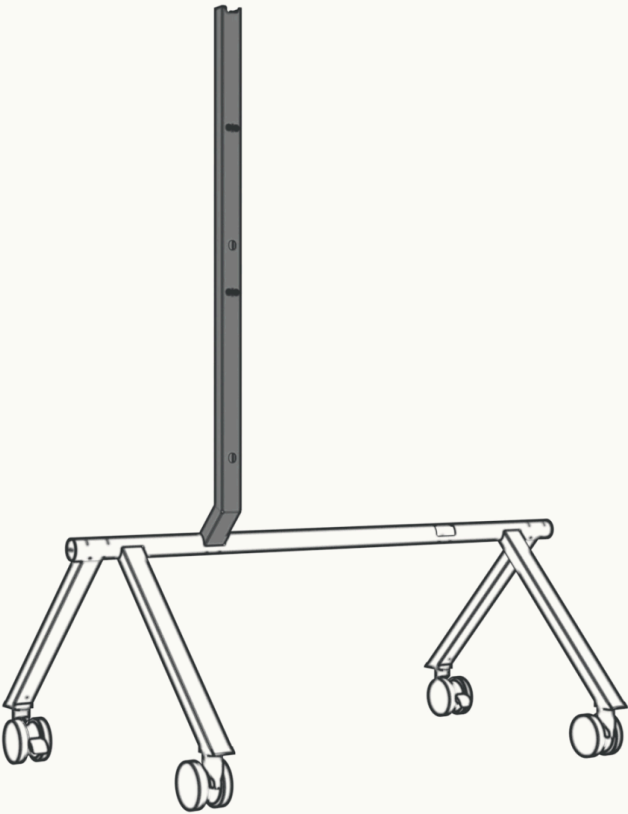

Step 15

## Install Columns

Repeat this process to install the second column.

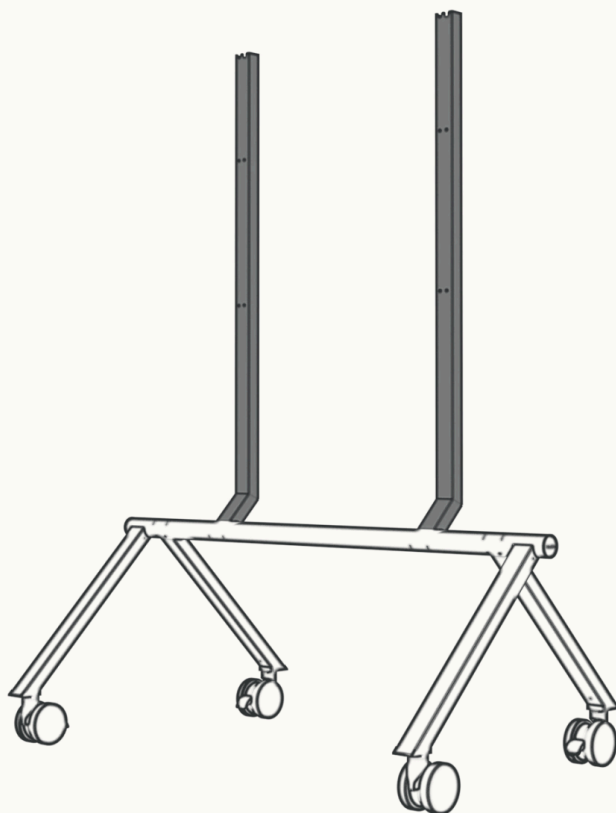

## Step 16

# Install the Rally Board 65



This stand is only compatible with Rally Board 65.



Two people are required to safely mount Rally Board 65.



Rally Board 65 has both VESA compatible mounting points and proprietary, outer mounting points. This stand relies on the proprietary, outer mounting points located on the far outer sides of the rectangular protruding feature on the rear of Rally Board 65.


Choose the display orientation.



## Step 17

### Install the Rally Board 65

Locate the upper two mounting holes, which are 11.6 inches (295 mm) from the top. The display is symmetrical, so the mounting hole distance is the same on both sides.

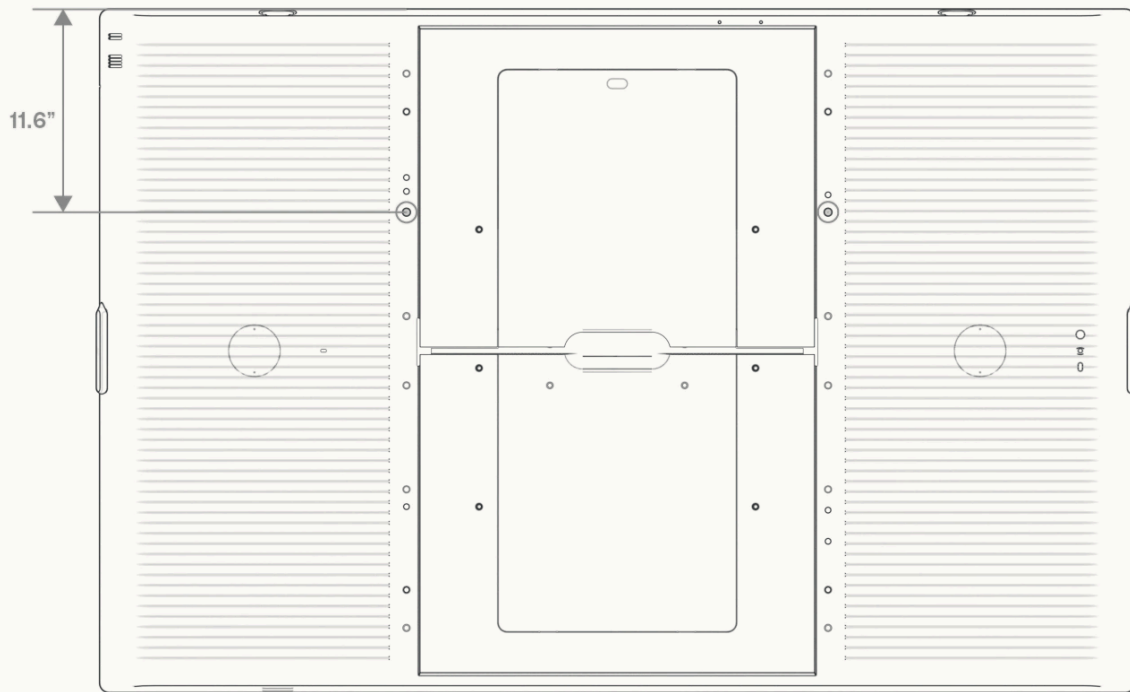


## Step 18

# Install the Rally Board 65

Fasten the display upper mounting screws to these two locations.



Engage at least four rotations of thread, but do not fully tighten. Leave about 0.2 inches of space between the screw head and the rear surface of the Rally Board 65.

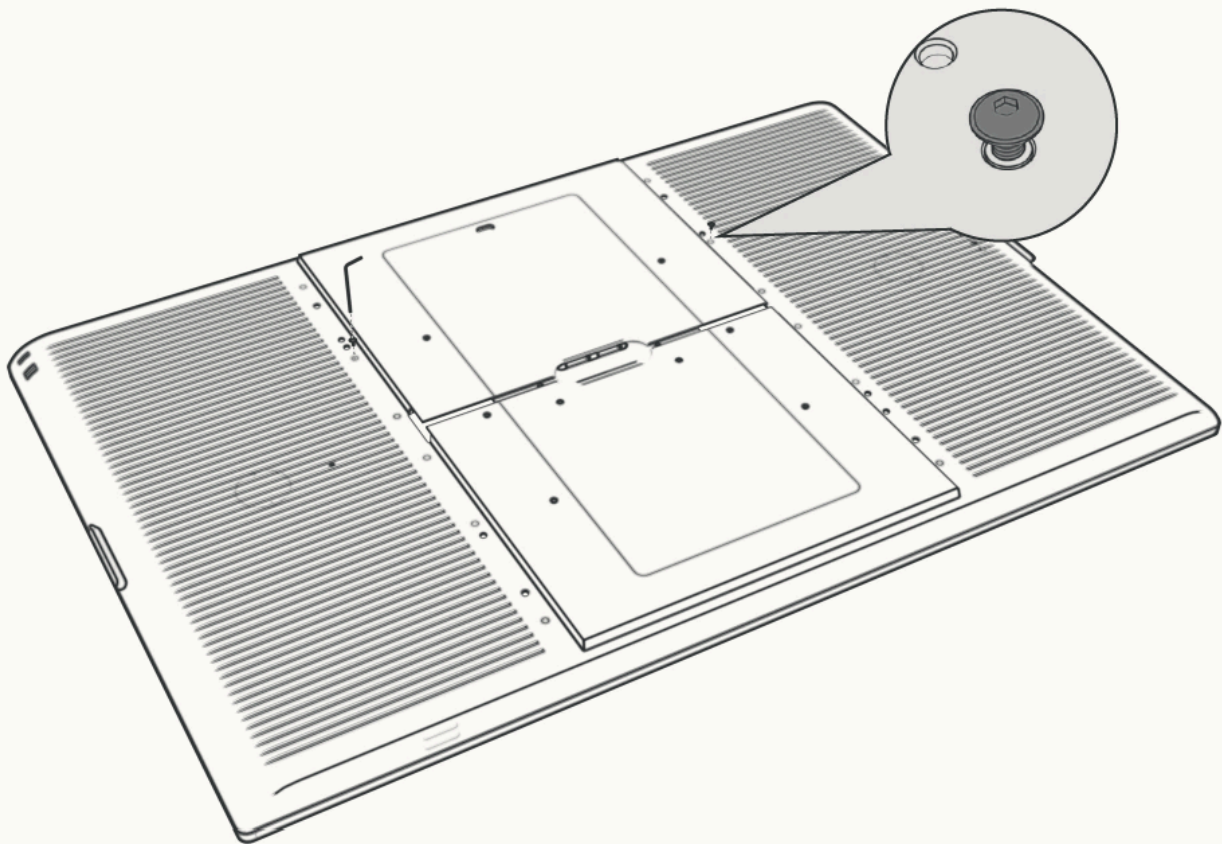


## Step 19

# Mount the Rally Board 65

 Two people are required to safely install Rally Board 65.

Bring the Rally Board 65 close to the columns, then lower the upper two mounting screws to rest in the inner slots at the top of each column.


 Ensure the Rally Board is held in place by the upper two screws before moving on to the next step.

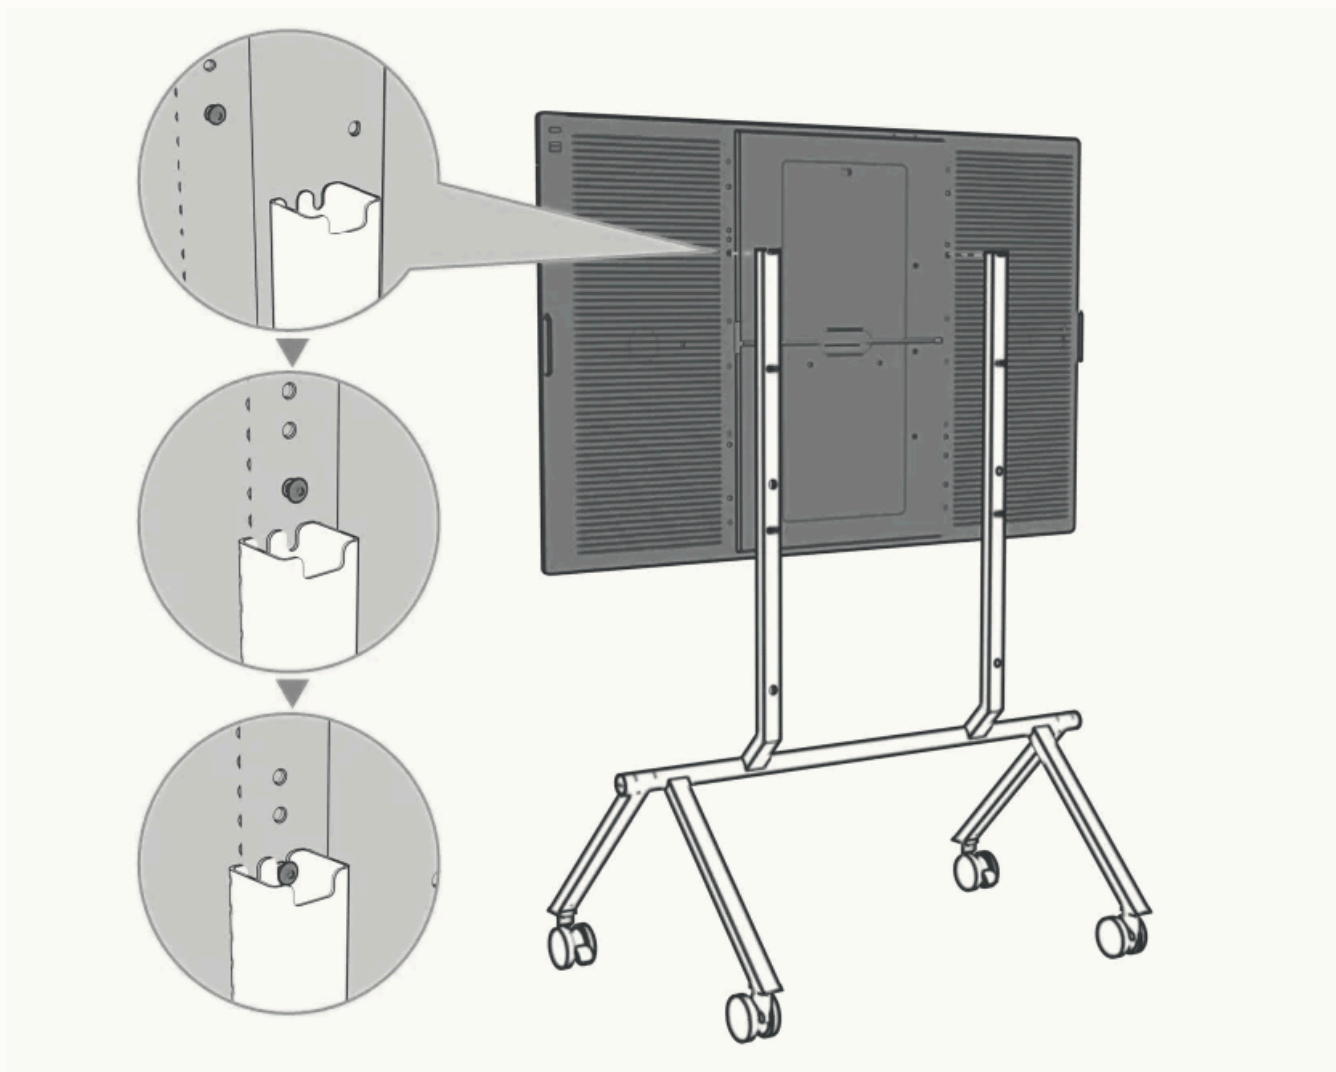

Step 20

## Mount the Rally Board 65

Fully tighten the upper two mounting screws.

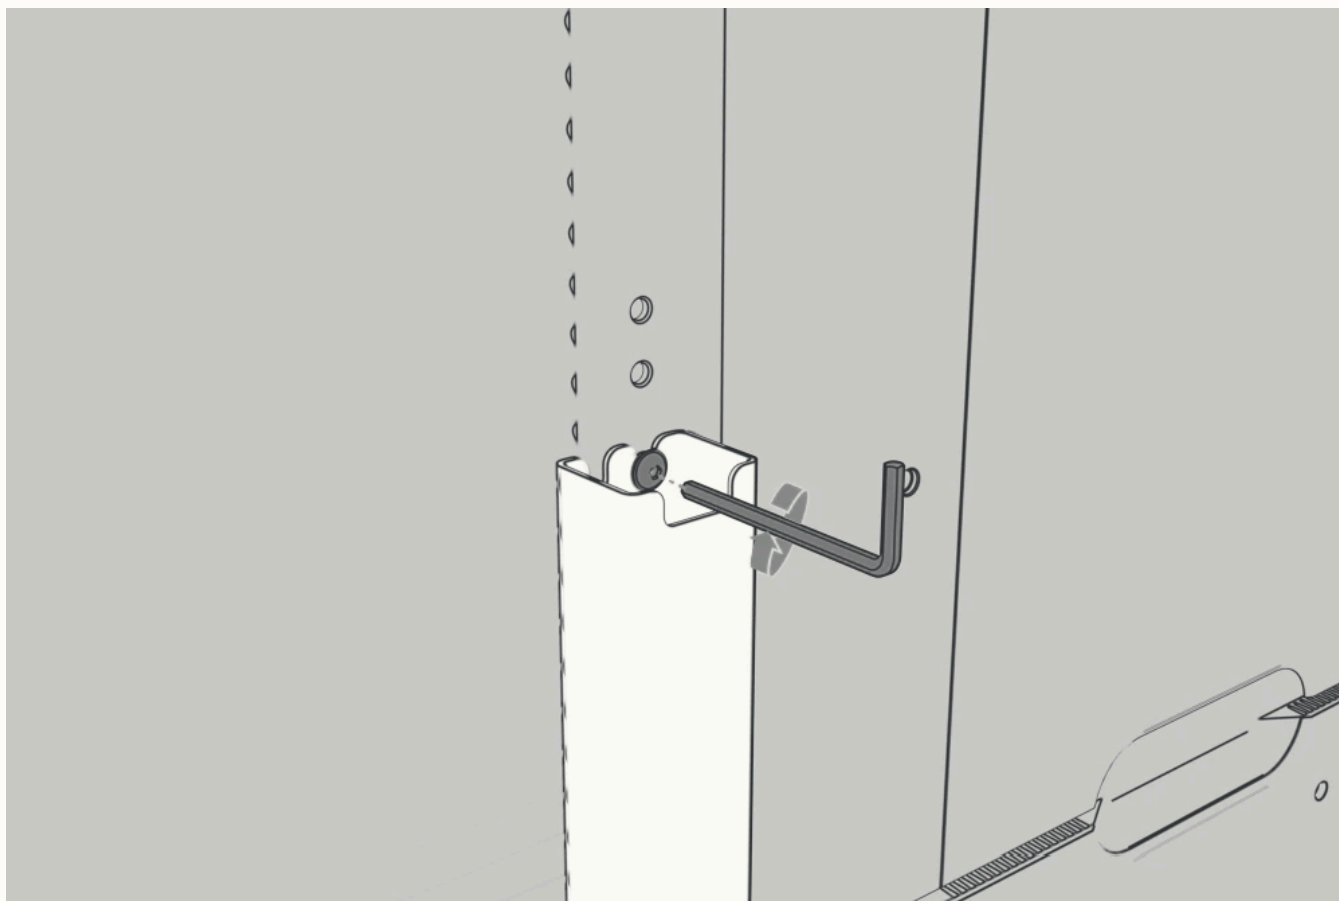


## Step 21

# Mount the Rally Board 65


Insert the four lower display mounting screws through the inner holes on the rear of each column.

Fully fasten each of the four screws until the Rally Board is held tight to the columns and the head of each screw is flush to the rear surface of each column.

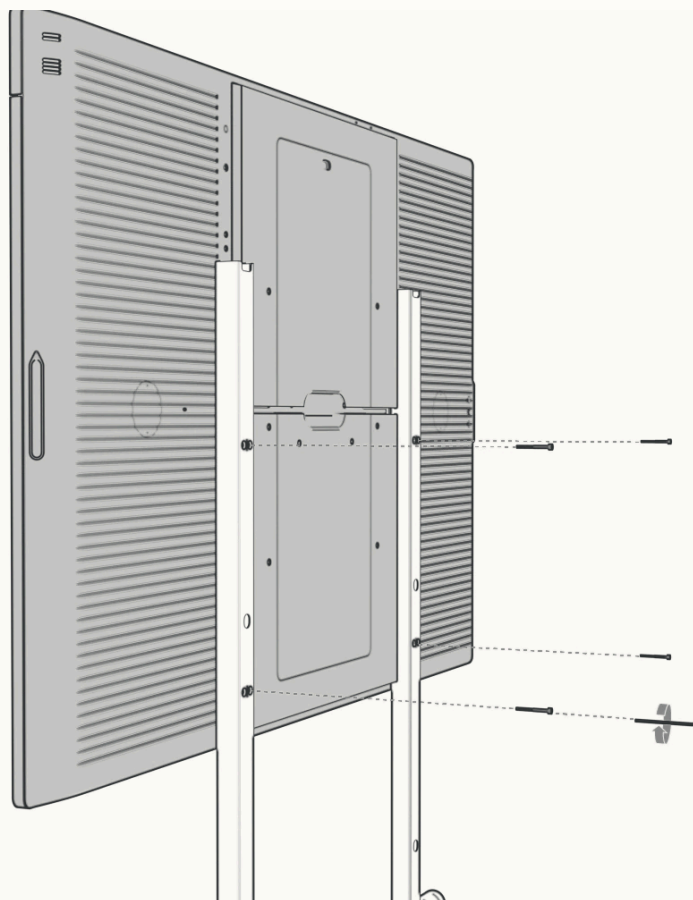


Step 21 (continued)

# Mount the Rally Board 65

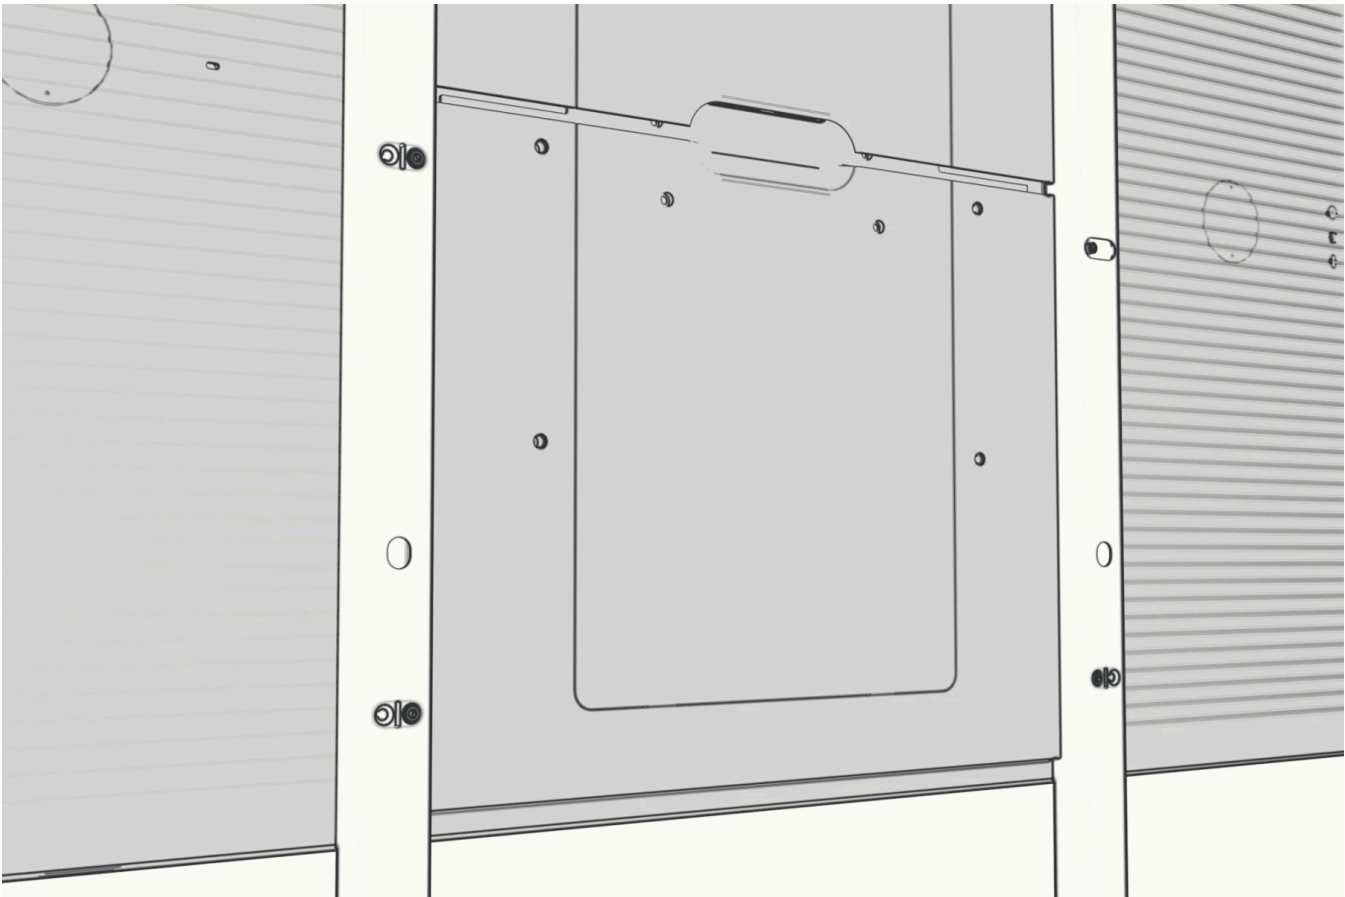

Step 22


## Install the column Cap

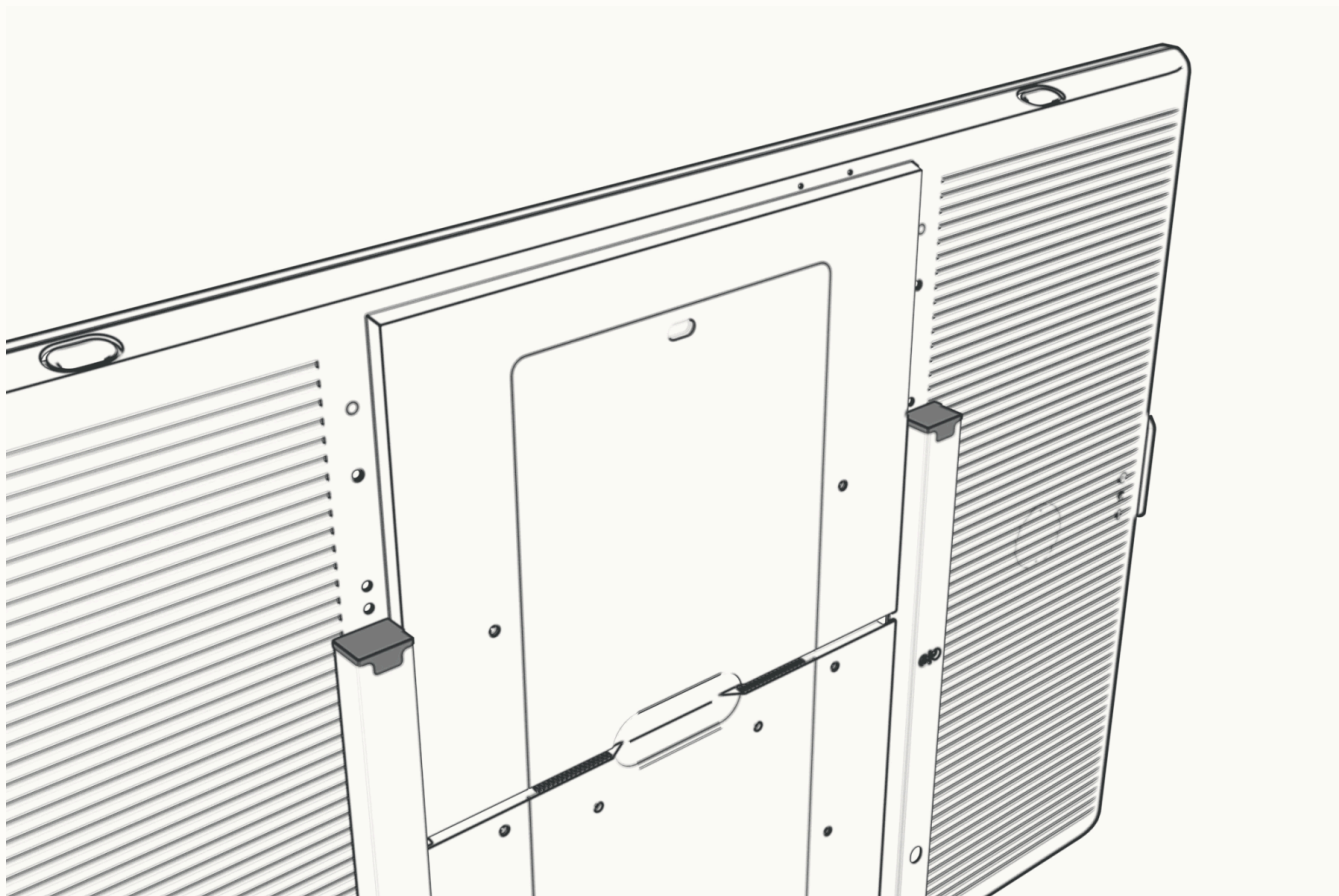

Step 23

## Organize cables


Install cable managers into the columns.

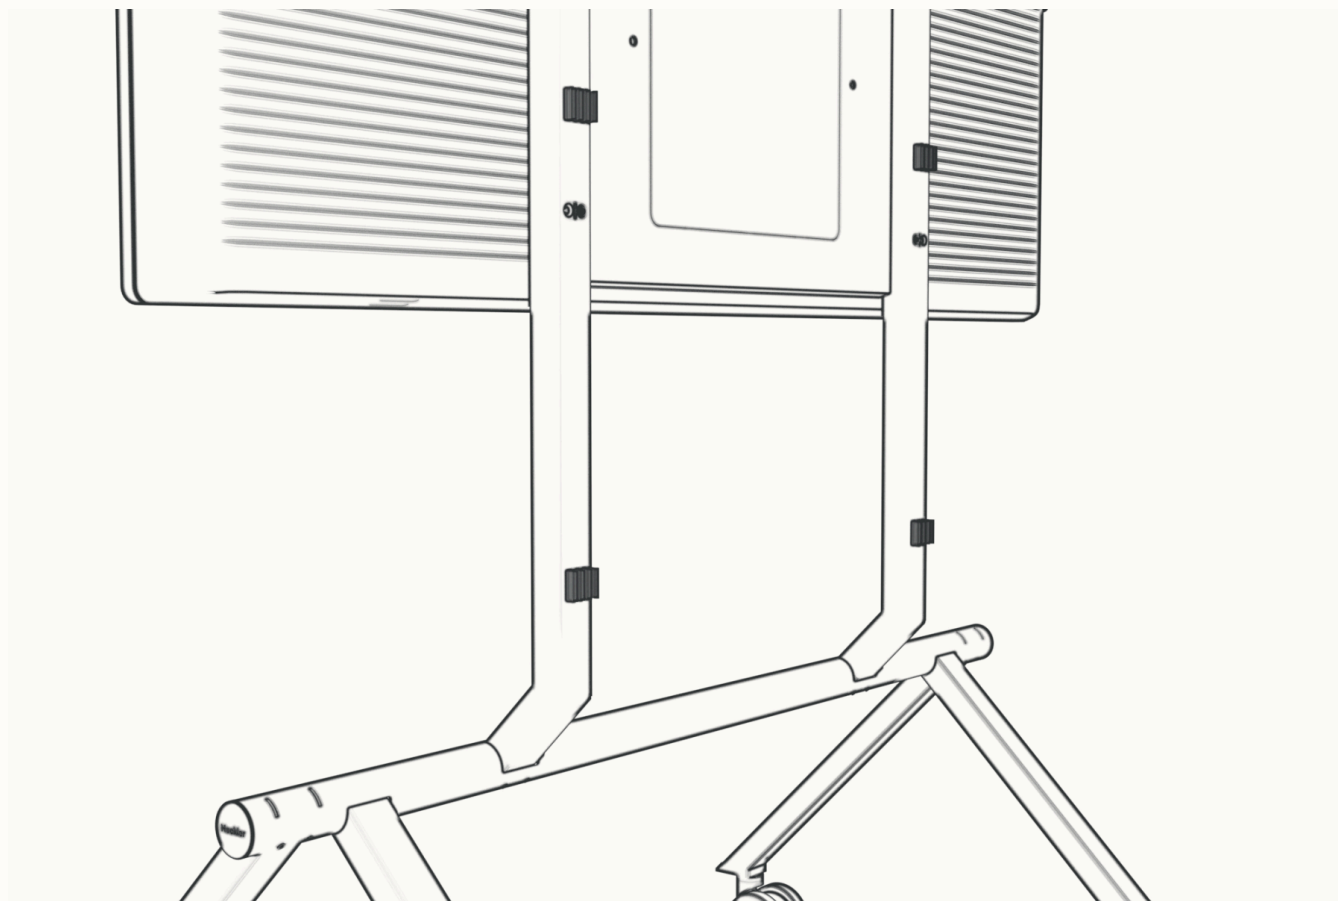

Step 24


## Organize cables

Route cables along the columns.

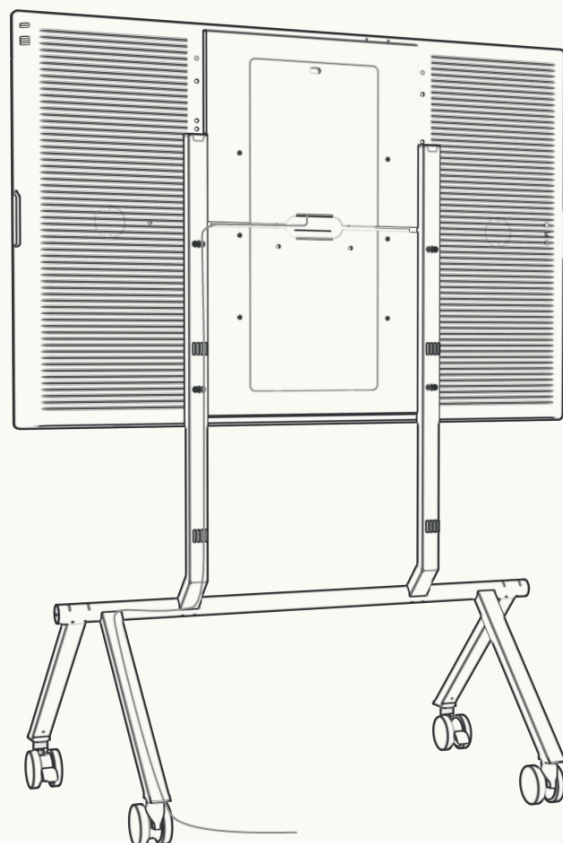

Step 24 (continued)


## Organize cables

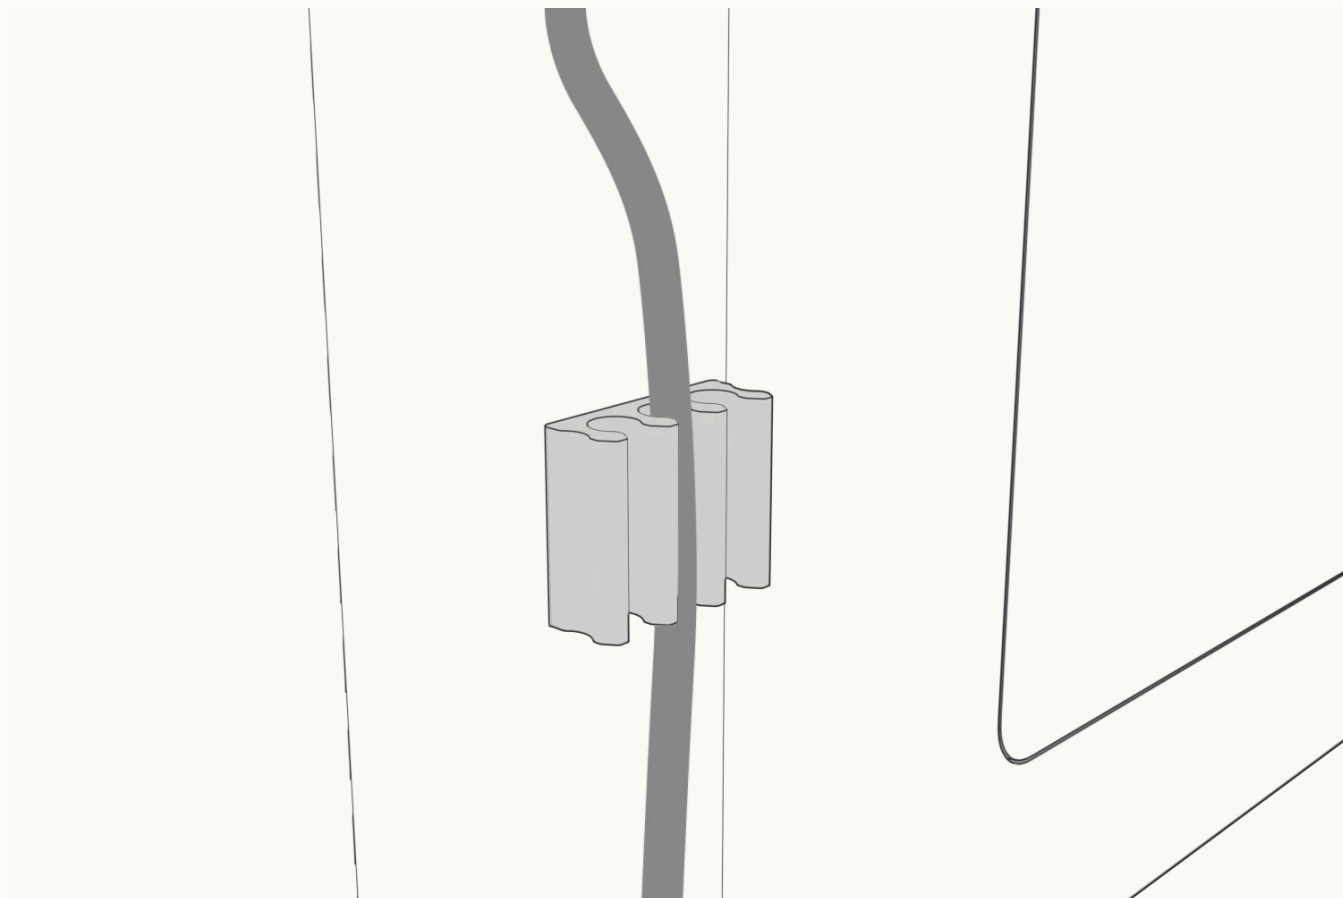

Step 25


## Nesting Multiple Stands

💡 Multiple Stands nest compactly for efficient storage.

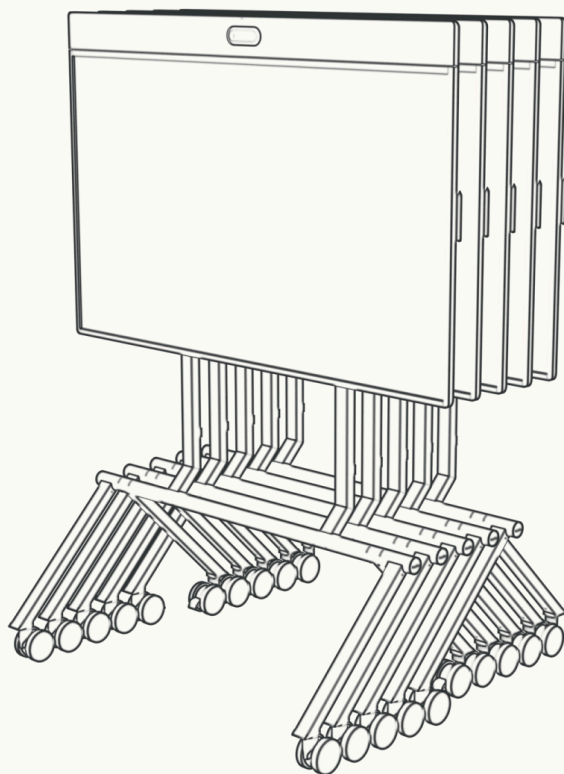

## Nesting Multiple Stands


💡 The cable manager spacers act as bumpers when nesting multiple stands.

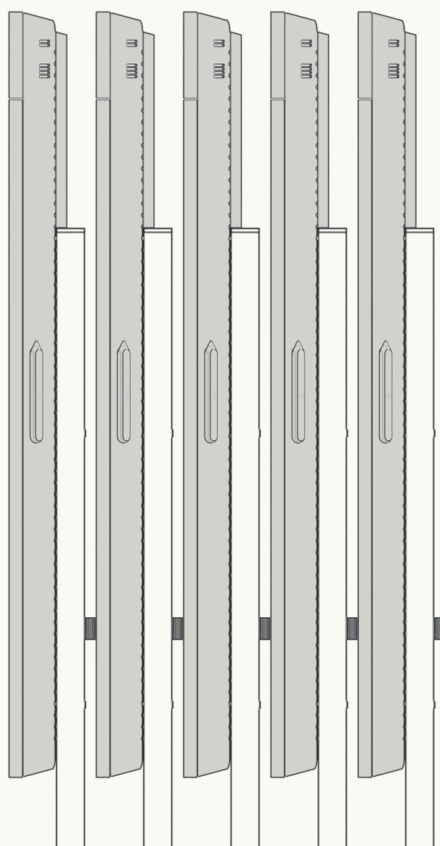

Step 27

## Removing legs and columns.


With the display removed, loosen the set screws.

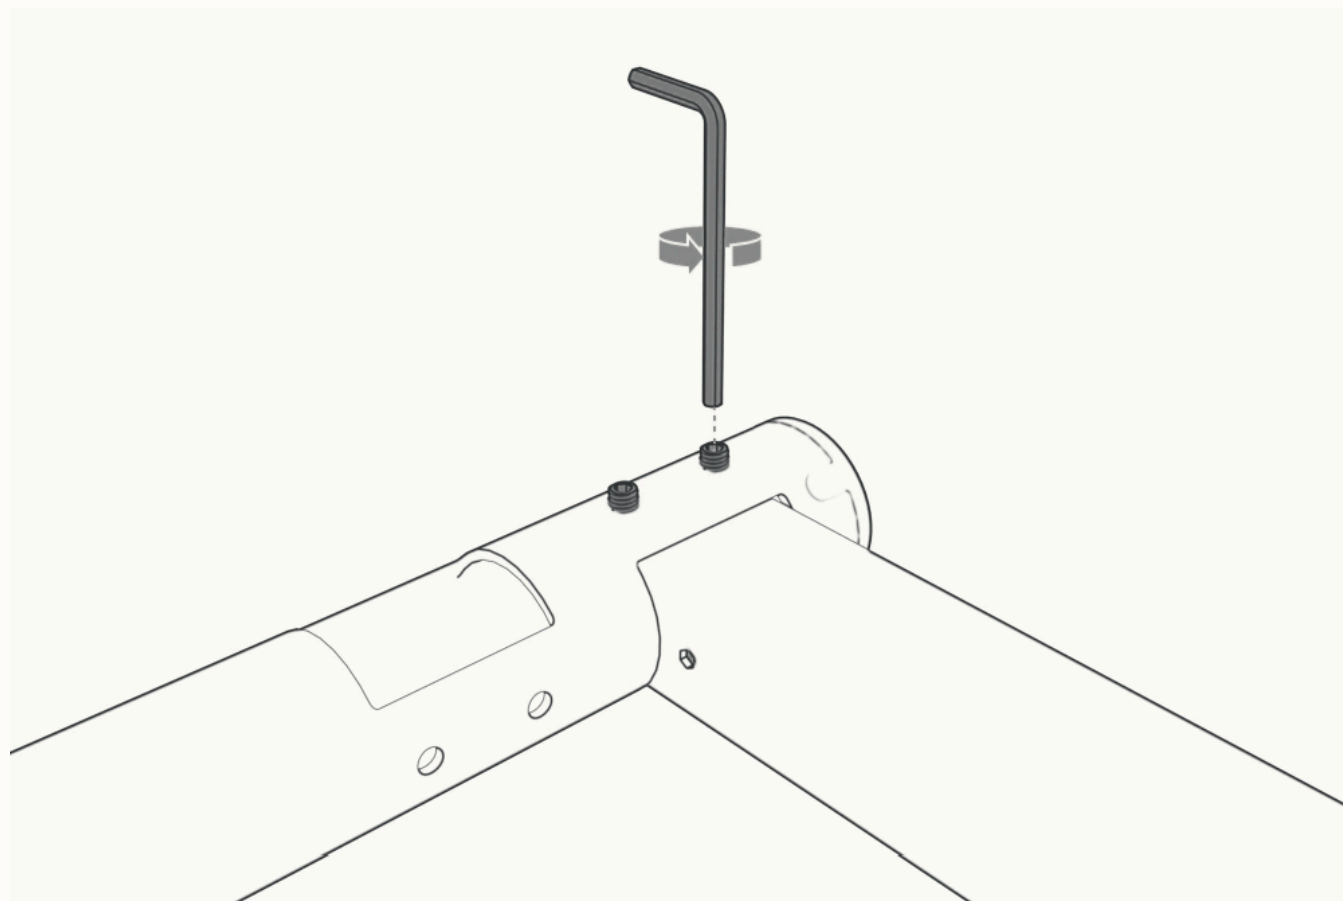

Step 28

## Removing legs and columns.


Insert the provided hex key or other thin object into the hex-shaped hole.

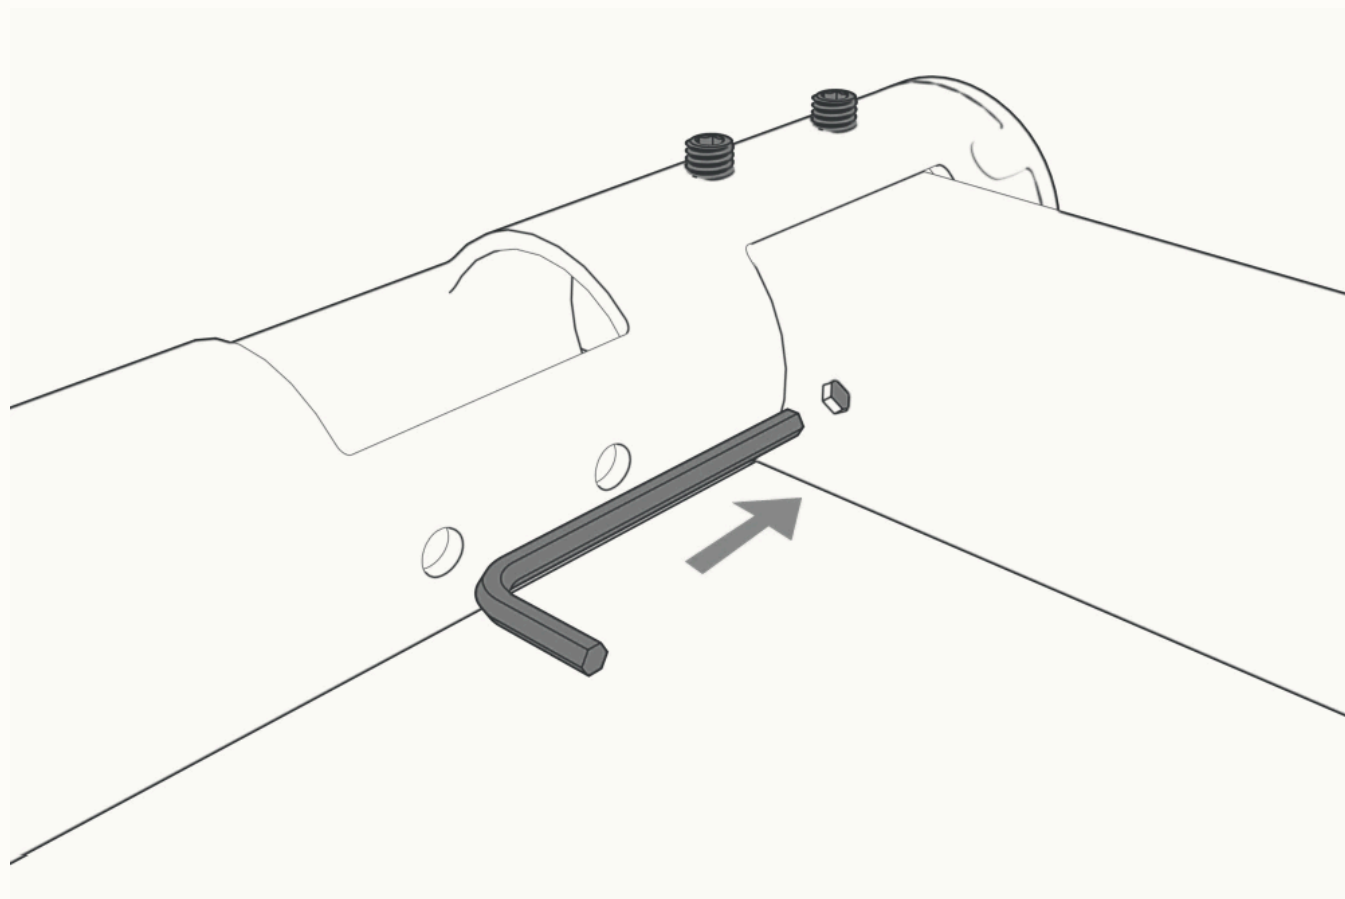

Step 29

## Removing legs and columns.


Push inward to disengage the safety spring pin.

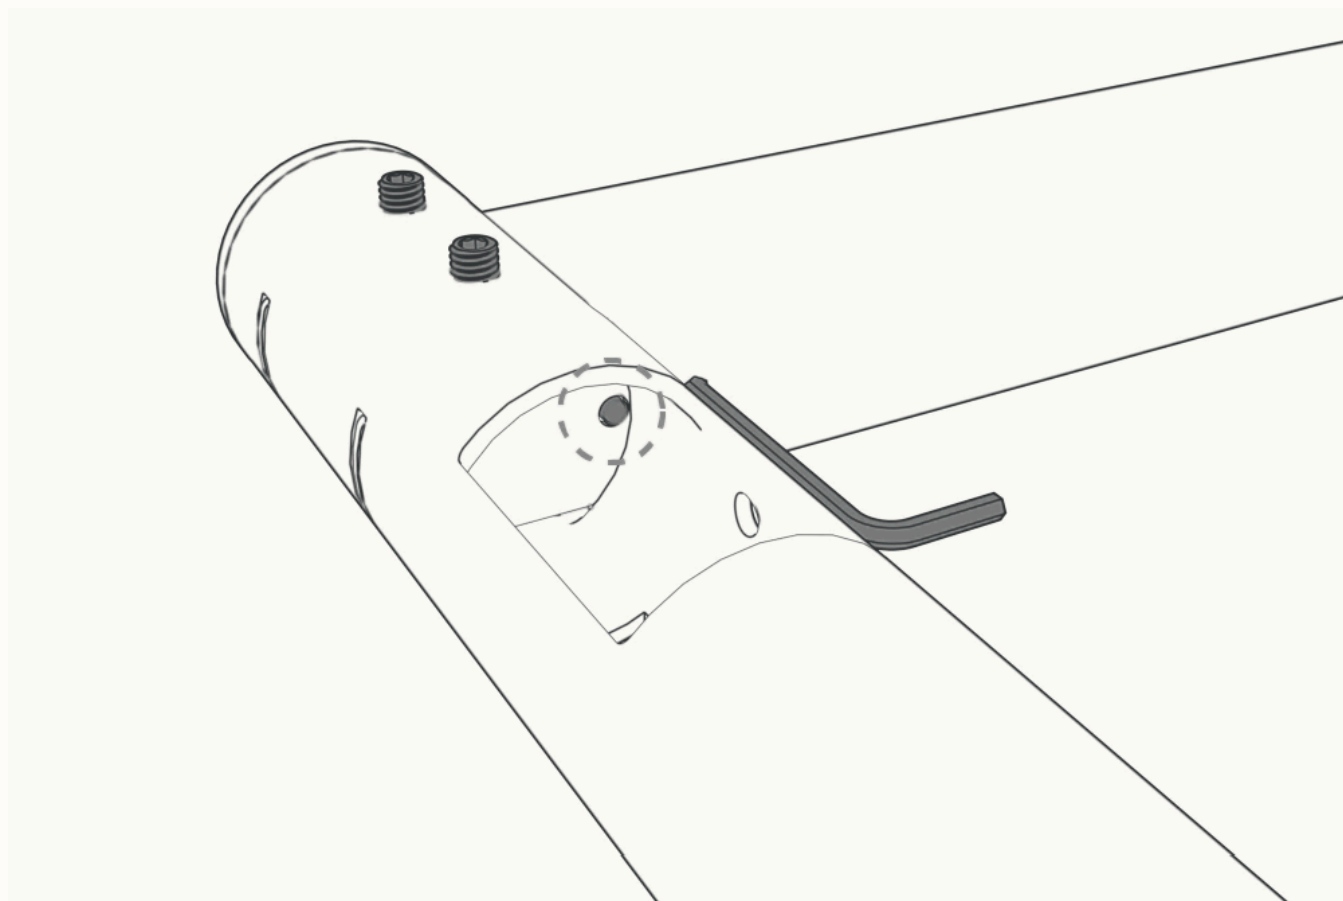

Step 30


## Removing legs and columns.

Slide the leg or column out while holding the key in place.

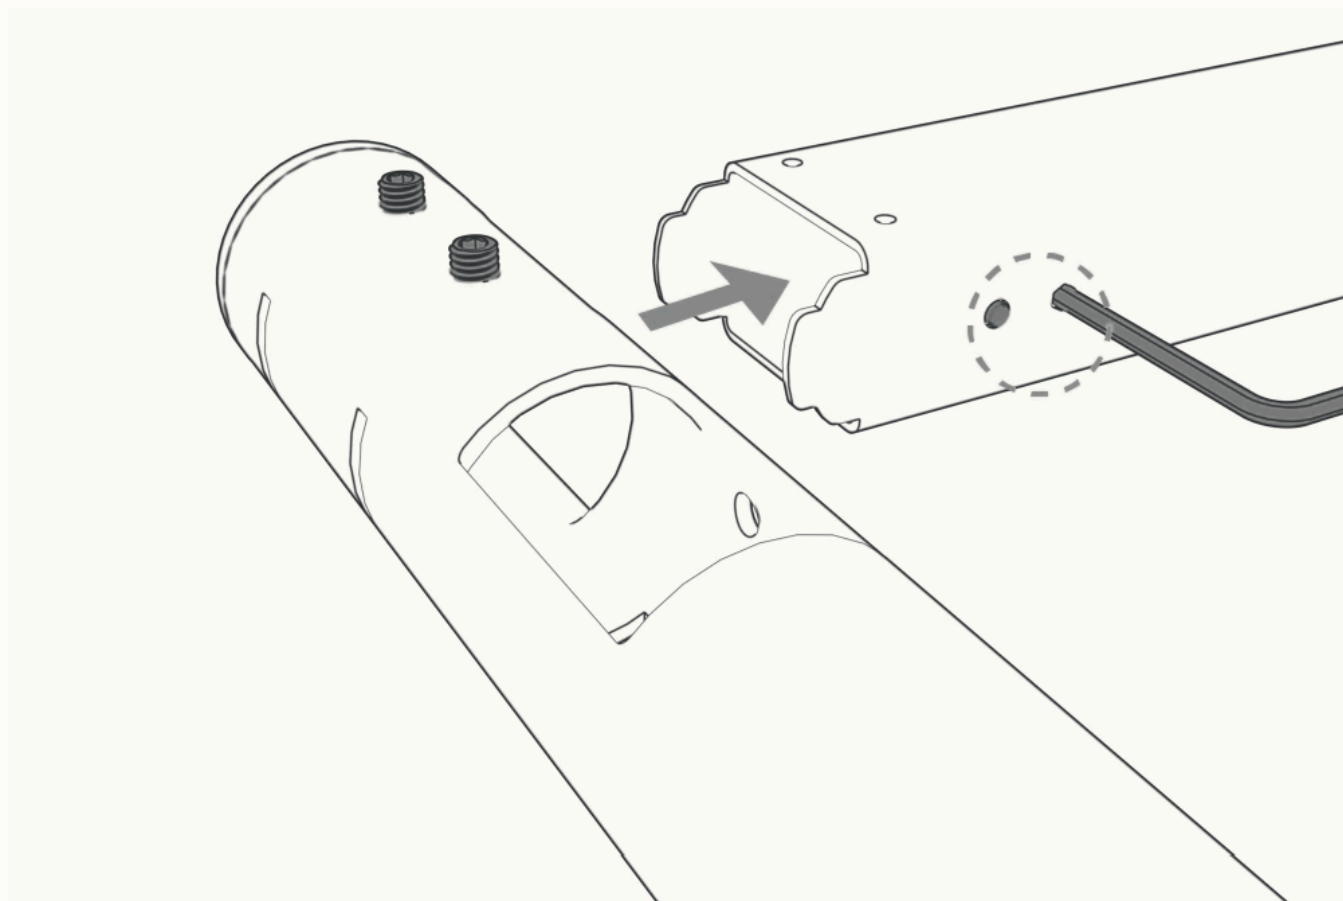

Step 30 (continued)

Removing legs and columns.

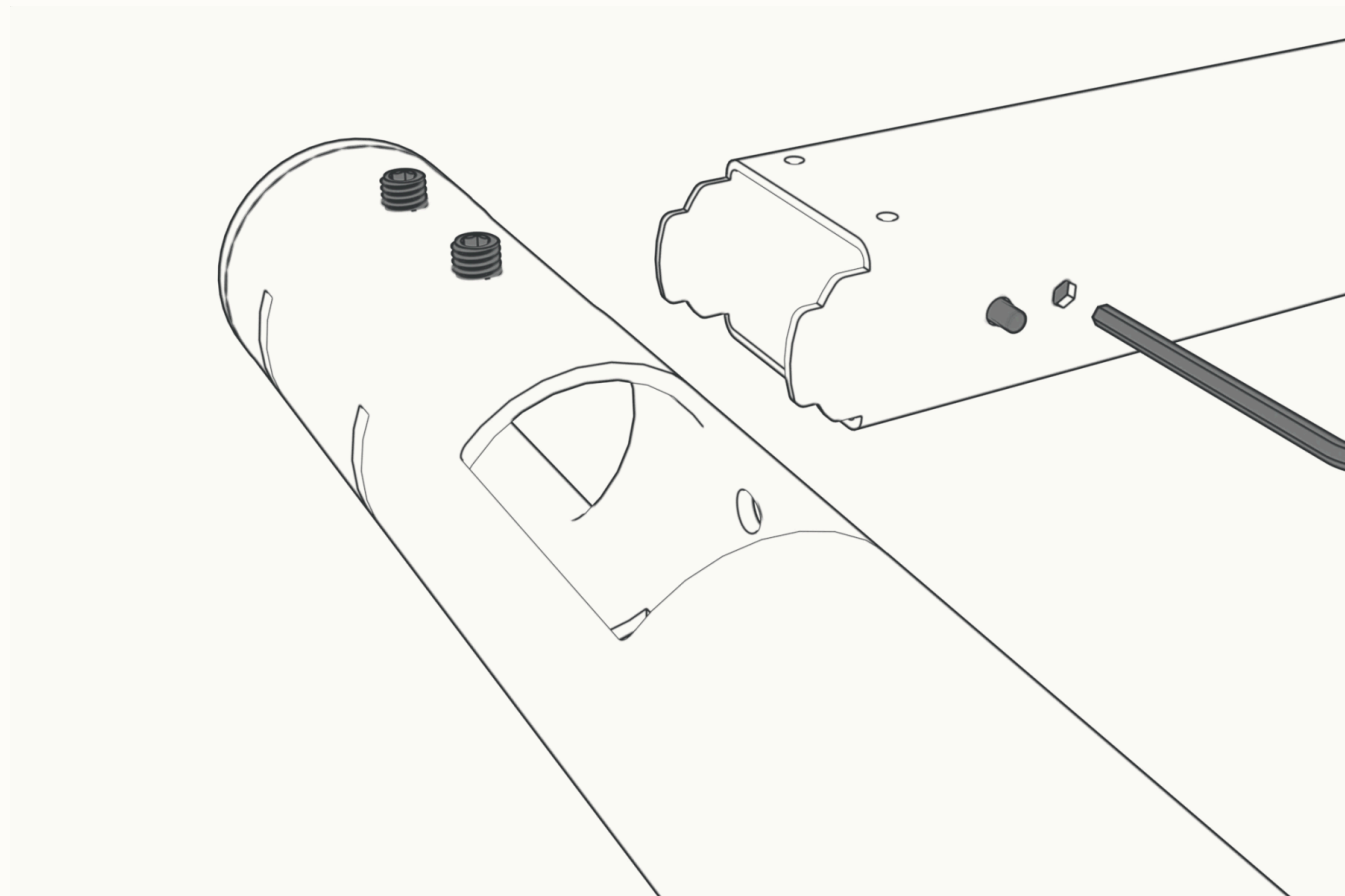

Step 31

## Removing legs and columns.

Repeat this process for each leg and column.

## Questions?

Email us at [service@heckler.com](mailto:service@heckler.com)

Call us at (844) 432-5930

Chat with us at [heckler.com](https://heckler.com)

Guide revision: release-2026-10-28 · Updated 2026-10-29