


KEYBOARD TRAY INSTALLATION

If you have any questions, please call 1-800-558-4435

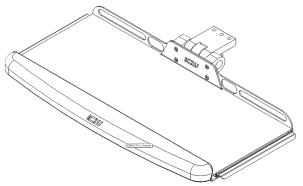


ATTACH WRIST REST TO KEYBOARD TRAY

- 1. Remove screws from bottom of wrist rest.
- 2. Align holes in keyboard tray with screw holes in wrist rest.
- 3. Attach wrist rest using the screws and a phillips screwdriver.

IF ATTACHING TO ULTRA FLIP-UP

ATTACH FLIP UP


- 1. Remove screws from drop extension using 5/32" hex key.
- 2. Align holes in keyboard tray with screw holes in drop extension.
- 3. Attach keyboard tray using the provided screws.

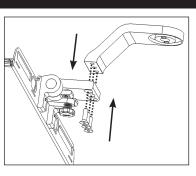

IF ATTACHING TO OUICK DISCONNNECT

ATTACH QUICK DISCONNECT

- 1. Remove beauty cap on guick disconnect block.
- 2. Remove screw using 3/16" hex key.
- 3. Slide keyboard tray into quick disconnect block.
- 4. Replace screw and tighten.
- 5. Replace beauty cap.

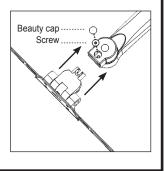

IF ATTACHING TO PARALINK

ATTACH PARALINK

- 1. Remove beauty cap on Paralink.
- 2. Remove screw using 3/16" hex key.
- 3. Slide keyboard tray into Paralink.
- 4. Replace screw and tighten.
- 5. Replace beauty cap.

